



K0 Max Wireless Mechanical Keyboard



Fully Assembled Version

Numpad

1x Fully Assembled Numpad

Including

1x Aluminum Case

1x PCB

1x Latex Foam

1x IXPE Film

1x PET Film

3 sets x Stabilizers

1 set x Keycaps (PBT Double-shot)

1 set x Mechanical Switches

Cable

1x Type-A to Type-C Cable

1x Extension Adapter for Receiver

 
 
Receiver

1x Type-A 2.4 GHz Receiver

Tools


1x Keycap & Switch Puller

1x Screwdriver

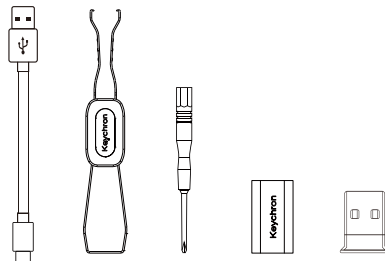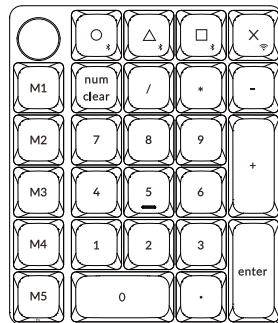


Quick Start Guide

 The default layer of this product is Windows.

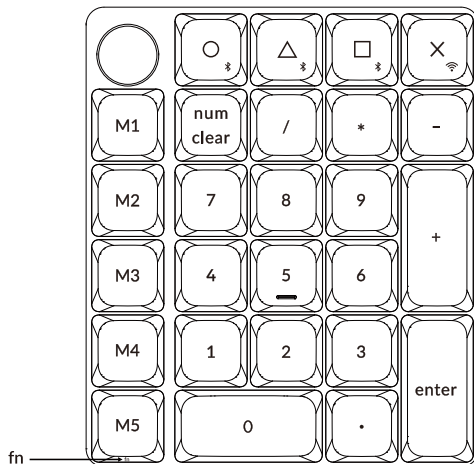


1 Connect 2.4 GHz Receiver

 Switch toggle to 2.4 GHz mode




G = 2.4 GHz

 Press fn + X (for 4 seconds)

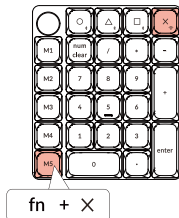

 Connect the 2.4 GHz receiver to the device USB port.




Note: For the best wireless experience, we recommend using the extension adapter for receiver and putting the 2.4 GHz receiver somewhere on your desk close to your numpad for a low rate of latency and fewer signal interferences.




2 Connect Bluetooth



 
Switch toggle to Bluetooth



 
Press fn + ○ (for 4 seconds) and pair with device named Keychron K0 Max

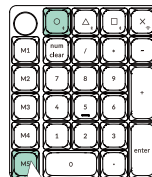

3 Connect Cable

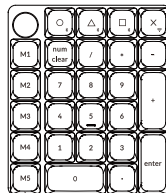 


Switch toggle to Cable

 


4 The Backlight

 Press **fn + num clear** to change the lighting effect

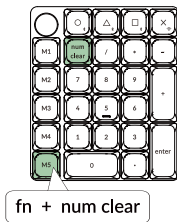


 Press **fn + 0** to turn the backlight on/off

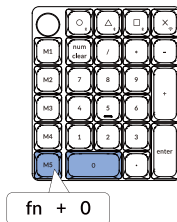


5 Adjust The Backlight Brightness

 Press **fn + /** to increase the backlight brightness

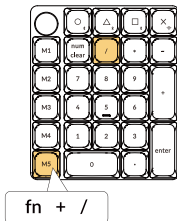


 Press **fn + 8** to decrease the backlight brightness

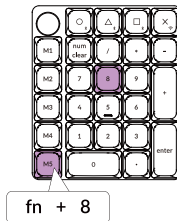


6 Adjust The Backlight Speed

 
Press fn + 5 to increase the light effect speed

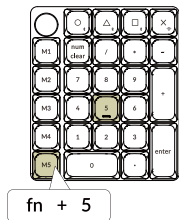

 Press fn + 2 to decrease the light effect speed

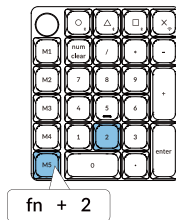

7 Set Up Mac Layer

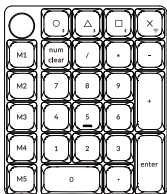 


+

Use the online launcher app to remap the Windows keys to Mac keys.



 8 Factory Reset & Firmware Update

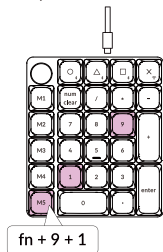

Troubleshooting? Don't know what's going on with the keyboard?

Factory reset your keyboard

1. Power on your keyboard.
2. Press and hold $\text{fn} + 9 + 1$ (for 4 seconds). The keyboard backlight will flash in red quickly for 3 seconds, indicating that the keyboard has been reset.

Flash your keyboard firmware

1. Visit launcher.keychron.com to open the online Launcher web app.
 2. Ensure the keyboard is in Cable or Wired mode and plug in the power cable.
 3. Find the 'Firmware Update' tab on the left side of the Launcher and connect your keyboard with it.
 4. Follow the instructions on the Launcher and complete the firmware update.
- *Step-by-step guide, search the keyword "firmware" on keychron.com.

9 The Keychron Launcher App

Please visit launcher.keychron.com to access the Keychron online launcher app. This app enables users to remap keys, adjust key actuation points, assign multiple commands to a single key, enter game controller mode, and more. If it cannot recognize your keyboard, please reach our support to get instruction.



*The online launcher app can only run on the latest version of Chrome, Edge, and Opera browsers yet.

10 Warranty

The numpad is highly customizable and easy to be rebuilt. If anything goes wrong with any of the numpad components of numpad during the warranty period, we will only replace the defective parts of the numpad, not the whole numpad.



K0 MAX WIRELESS MECHANICAL NUMPAD SPECIFICATIONS

Number of keys: 27

Switch type: Mechanical

Battery: 650 mAh

Wireless working time (RGB): Up to 50 hours (Lowest brightness)

Charging time: Around 2.5 hours

Charging port: USB Type-C

Mode: 2.4 GHz/ Cable / Bluetooth

 
 
Wireless operating distance: Within 10 meters (open space)

Name of Bluetooth device: Keychron K0 Max

Operating environment: -10 to 50°C

Technical specifications can be subjected to change without notice, we apologize for any inconvenience caused.


K0 MAX WIRELESS MECHANICAL NUMPAD OVERVIEW

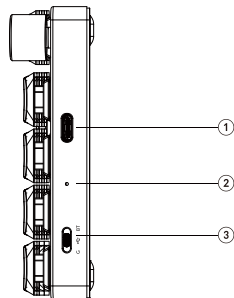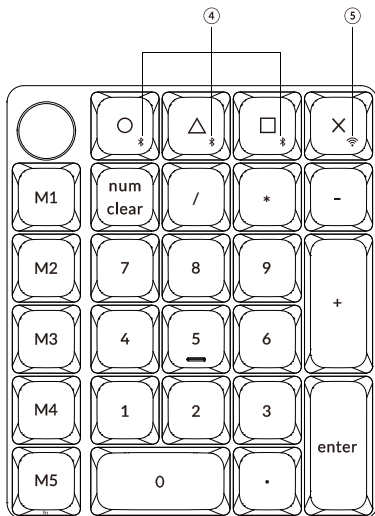


- ① Type-C Port
- ② Power Indicator
- ③ G Cable BT (Mode Toggle)
- ④ Bluetooth Channel Indicator
- ⑤ 2.4 GHz Channel Indicator

DEFAULT KEY LAYOUT:

 
LAYER 0: This layer is the default layer.

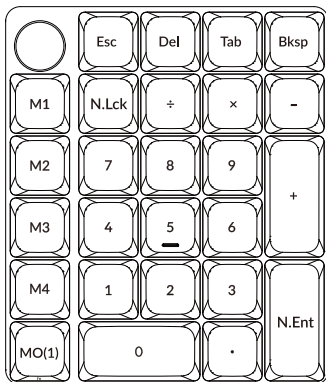

LAYER 1: This layer will be activated when you press the MO(1) key.

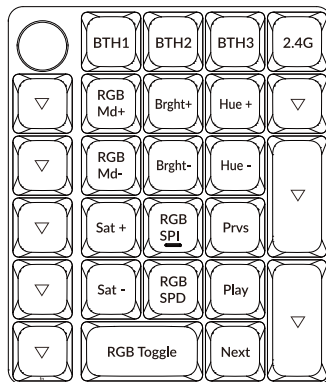 

 LAYER 2 / LAYER 3: This is a blank layer.

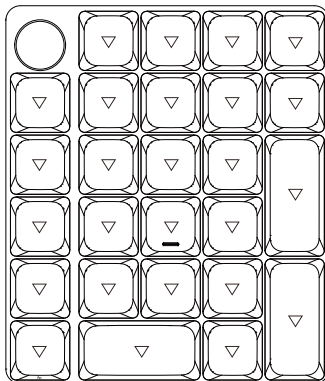

KEY DESCRIPTION

Key Description		Key Description		Key Description	
Bright-	Backlight Decrease	RGBMd-	RGB Mode Previous	BTH2	Bluetooth Host 2
Bright+	Backlight Increase	RGB SPI	RGB Speed Increase	BTH3	Bluetooth Host 3
Prvs	Previous	RGB SPD	RGB Speed Decrease		
Play	Play/Pause	MO(1)	Layer 1 will be activated when holding this key		
Next	Next	MO(2)	Layer 2 will be activated when holding this key		
RGB Toggle	Turn Backlight on/off	MO(3)	Layer 3 will be activated when holding this key		
RGBMd+	RGB Mode Next	MO(4)	Layer 4 will be activated when holding this key		
Sat+	Saturation Increase	Hue+	Hue Increase		
Sat-	Saturation Decrease	Hue-	Hue Dncrease		
2.4G	2.4 GHz Host	BTH1	Bluetooth Host 1		

LED STATUS OVERVIEW

LED Location	Function	Status
Power Indicator	Charging	Charging - Static Red Fully Charged - Static Green
Bluetooth / 2.4 GHz Channel Indicator	Bluetooth / 2.4 GHz	Reconnecting - Fast Blinking Paired - Light Off Pairing - Slow Blinking

FUNCTION DESCRIPTION: CHARGING

Plug the cable into a USB port and plug the other end into the numpad port. Power indicator: A red light will stay on while charging; Fully charged in around 2.5 hours, a green power indicator will appear.

*The Keychron numpad is compatible with all USB ports. Please use a 5V 1A adapter or USB 3.0 for the best performance. The Keychron K0 Max can be charged in 2.4 GHz/Cable/Bluetooth mode.

**This product supports up to 5V charging voltage and 1A charging current. We are not responsible for any problems caused by improper charging.

2.4 GHZ / WIRED / BLUETOOTH MODE (MODE TOGGLE)

2.4 GHZ MODE

1. Switch the toggle to the "G" option. Press "fn" + " X " on your keyboard for 4 seconds to activate the 2.4 GHz pairing status.
2. Connect the 2.4 GHz receiver to your device's USB / Type-C Port. The keyboard will automatically connect to your device.

FORCED PAIRING:

1. Remove the receiver from your device and switch the keyboard to "G" option to activate the keyboard. The backlight will be opened.
2. Press "fn" + " X " on your keyboard for 4 seconds to activate the 2.4 GHz pairing status. Under this status, the 2.4 GHz channel indicator will flash for 3 minutes.
3. Reinsert the receiver into the device and then the keyboard starts to pair with the device. After successful pairing, the 2.4 GHz channel indicator will be off.

*Keep the keyboard within 20 cm of the receiver for optimal pairing.

WIRED MODE

1. Switch the toggle to the “  ” option (it only works when a USB cable is plugged in).
2. Connect our cable with your PC and numpad.
3. Backlighting will be turned on.

*Under Wired Mode, numpad will not enter into Battery Saver Mode.

BLUETOOTH MODE

1. Switch the toggle to the “BT” option.
2. Backlighting will be turned on.
3. Hold “fn+○” key for 4 seconds to activate Bluetooth pairing (the Bluetooth channel indicator fast flashes for 3 minutes to detect pairing).
4. Search for the Bluetooth device “Keychron K0 Max” on your device and connect it (the Bluetooth channel indicator goes off after successful pairing).

Note: This numpad supports pairing up to 3 devices simultaneously via key combination “fn” + “○” / “fn” + “△” / “fn” + “□”.

**The Bluetooth channel indicator will continue to flash for 3 minutes.*

***Slow or failed connections may exist due to different Bluetooth versions, please make sure all the settings are correct.*

SWITCH BLUETOOTH DEVICES

Short press key combination “fn” + “○” / “fn” + “△” / “fn” + “□” to switch to other device.

RECONNECT:

1. Switch the numpad to the “BT” option to activate the numpad.
2. The Bluetooth channel indicator flashes for 4 seconds and automatically pairs with the last paired device.
3. If the Bluetooth channel indicator is off, press any button to enter the connection again.

**The numpad must have been paired with the device to perform this function.*

TURN OFF THE NUMPAD

Switch the numpad to the “ ” option and unplug the power cable.

BACKLIGHT SETTING

- Short press key combination “fn” + “0” or “fn” + “knob(press)” to turn the backlight on/off.
- Short press key combination “fn” + “num clear” / “fn” + “7” to switch between different types of lighting effects.

AUTO SLEEP MODE:

When the numpad is in Bluetooth or 2.4G wireless mode, it will enter AUTO SLEEP MODE when there are no key operations to save power.

1. After 10 minutes of inactivity, the numpad backlight turns off. Press any key to wake up the keyboard;
2. After 2 hours of inactivity, the numpad will enter deep sleep mode and disconnect the wireless connection. Press the "fn" or the "KNOB" to wake up the numpad. The numpad backlight turns on and automatically connects back to your device.

TROUBLESHOOTING

If unable to pair numpad to device, confirm that the device you're trying to pair with is Bluetooth-capable. If so, restart the device and try pairing it with the numpad again.

Note: On a Windows computer, a new Bluetooth connection will sometimes require additional software updates—a process that may still be ongoing after a message appears indicating a successful completion. Wait at least 20 minutes after pairing to make sure all updates are completed before restarting the computer.

Confirm that the device is configured to accept Bluetooth connections (Windows) and supports an external numpad (HID profile).

Go to Bluetooth Devices > Open Settings and select the following:

Allow Bluetooth devices to find this computer

Allow Bluetooth devices to connect to this computer

Alert me when a Bluetooth device wants to connect

My numpad isn't working in Bluetooth mode.

For the computer/smartphone:

Go to your device Bluetooth settings>Select the numpad and remove/delete/unpair it.

Then restart your device.

For the numpad:

Turn the numpad off and back on. Then reconnect it to your device.

My numpad isn't working in 2.4 GHz mode.

Ensure the toggle is set to 2.4 GHz, remove the receiver from your device, and press "fn"+"X" for 4 seconds to force pair, then reinsert the receiver into the device, keeping the numpad within 20 cm of the receiver for optimal pairing.

Wireless connection is interrupted even within 10 meters.

Check if the numpad is resting on a metal surface that can interfere with the wireless signal.

Safety Precaution:

Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C(14°F) or above 50°C(122°F) to preserve the lifespan of the numpad.

Keychron, Inc.

Dover, DE 19901, United States

Find us at:

<https://www.keychron.com>

support@keychron.com

 @keychron

 @keychron

 @keychronMK

Designed by Keychron

Made in China