 



6 Adjust The Backlight Brightness

Press fn + W to increase the backlight brightness

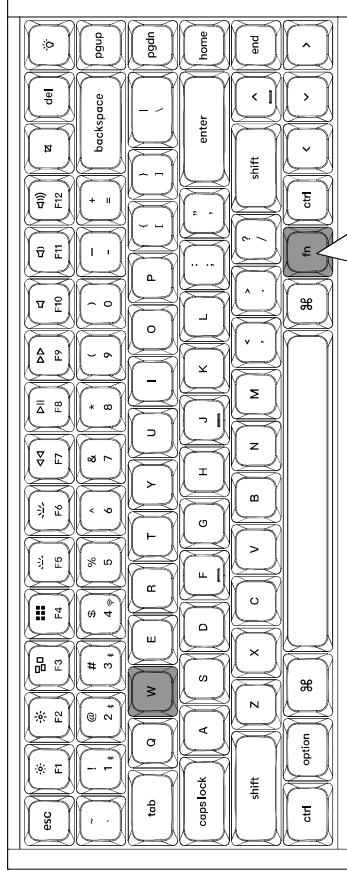

fn + W

 
Press fn + S to decrease the backlight brightness

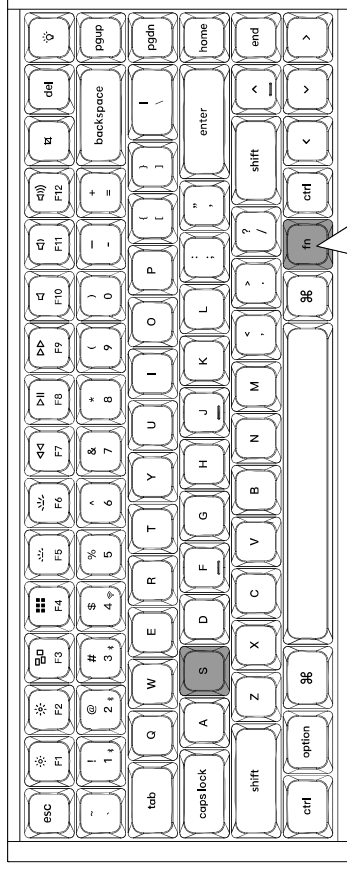

fn + S


7 Adjust The Backlight Speed

 Press fn + T to increase the light effect speed

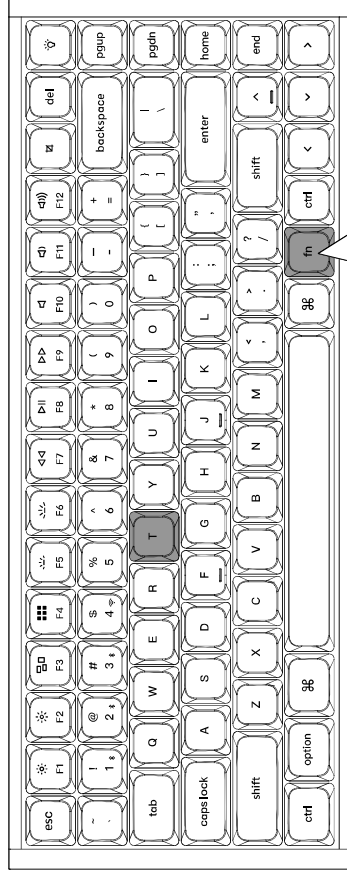

fn + T

 
Press fn + G to decrease the light effect speed

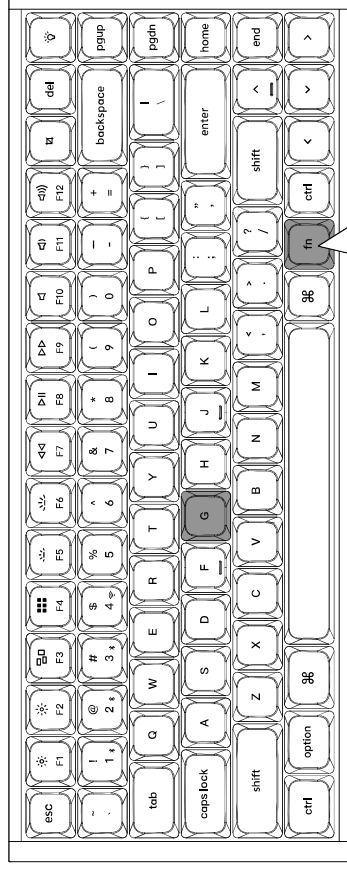

fn + G

8 The Keychron Launcher App


 
Please visit launcher.keychron.com to access the Keychron online Launcher app. This app enables users to remap keys, adjust key actuation points, assign multiple commands to a single key, enter game controller mode, and more. If it cannot recognize your keyboard, please reach our support to get instruction.

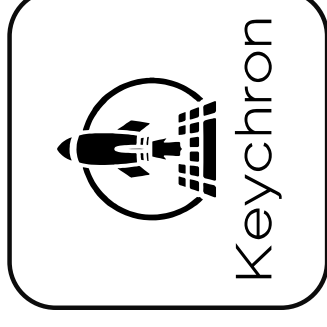

*The online Launcher app can only run on the latest version of Chrome, Edge, and Opera browsers yet.


9 The Layers

  There are four layers of key settings on the keyboard. The layer 0 and layer 1 are for the Mac system. The layer 2 and layer 3 are for the Windows system.

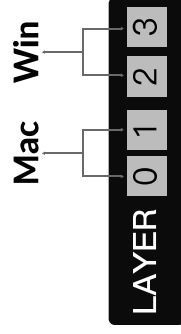

If your system toggle is switched to Mac, then the layer 0 will be activated.

 If your system toggle is switched to Windows, then the layer 2 will be activated. Remember that if you are using it in Windows mode, please make changes to the layer 2 instead of the top layer (the layer 0). This is a common mistake people are making.



10 Factory Reset & Firmware Update

 
Troubleshooting? Don't know what's going on with the keyboard?

Factory reset your keyboard

1. Power on your keyboard.
2. Press and hold fn + J + Z (for 4 seconds). The keyboard backlight will flash in red quickly for 3 seconds, indicating that the keyboard has been reset.

Flash your keyboard firmware


1. Visit launcher.keychron.com to open the online Launcher web app.
 2. Ensure the keyboard is in Cable or Wired mode and plug in the power cable.
 3. Find the 'Firmware Update' tab on the left side of the Launcher and connect your keyboard with it.
 4. Follow the instructions on the Launcher and complete the firmware update.
- *Step-by-step guide, search the keyword "firmware" on keychron.com.

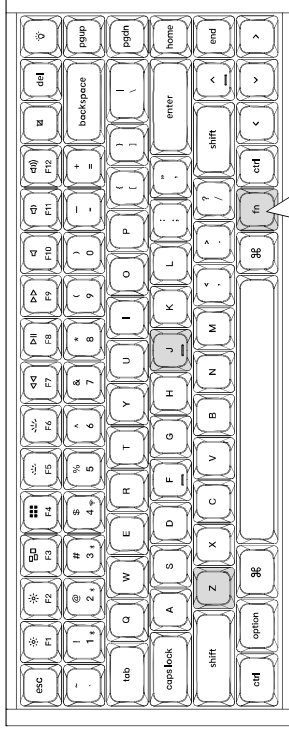

fn + J + Z

11 Warranty

 The keyboard is highly customizable and easy to be rebuilt. If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.

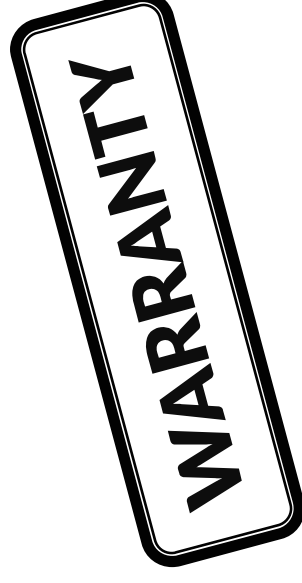

K3 HE SPECIFICATION


Number of keys: 84
Switch type: Magnetic
Battery: 2600mAh
Charging time: Around 3.8 hours
Charging port: Type-C
Mode: Bluetooth / Wired / 2.4GHz
Bluetooth operating distance: Within 10 meters (open space)
Name of Bluetooth device: Keychron K3 HE

LED STATUS OVERVIEW


LED Location	Function	Status
Power Indicator	Charging	Low Power - Red Light Blinking Charging - Static Red Full Charged - Static Green
Bluetooth / 2.4 GHz Channel Indicator	Bluetooth / 2.4 GHz	Reconnecting - Fast Blinking Paired - Light Off Pairing - Slow Blinking
Caps Lock Indicator	Caps Lock	Enable Caps Lock - Static White Disable Caps Lock - Light Off

K3 HE OVERVIEW

 K3 FILE W KEYLESS MAGNET CSW TCH KEYBOARD OVERVIEW EW

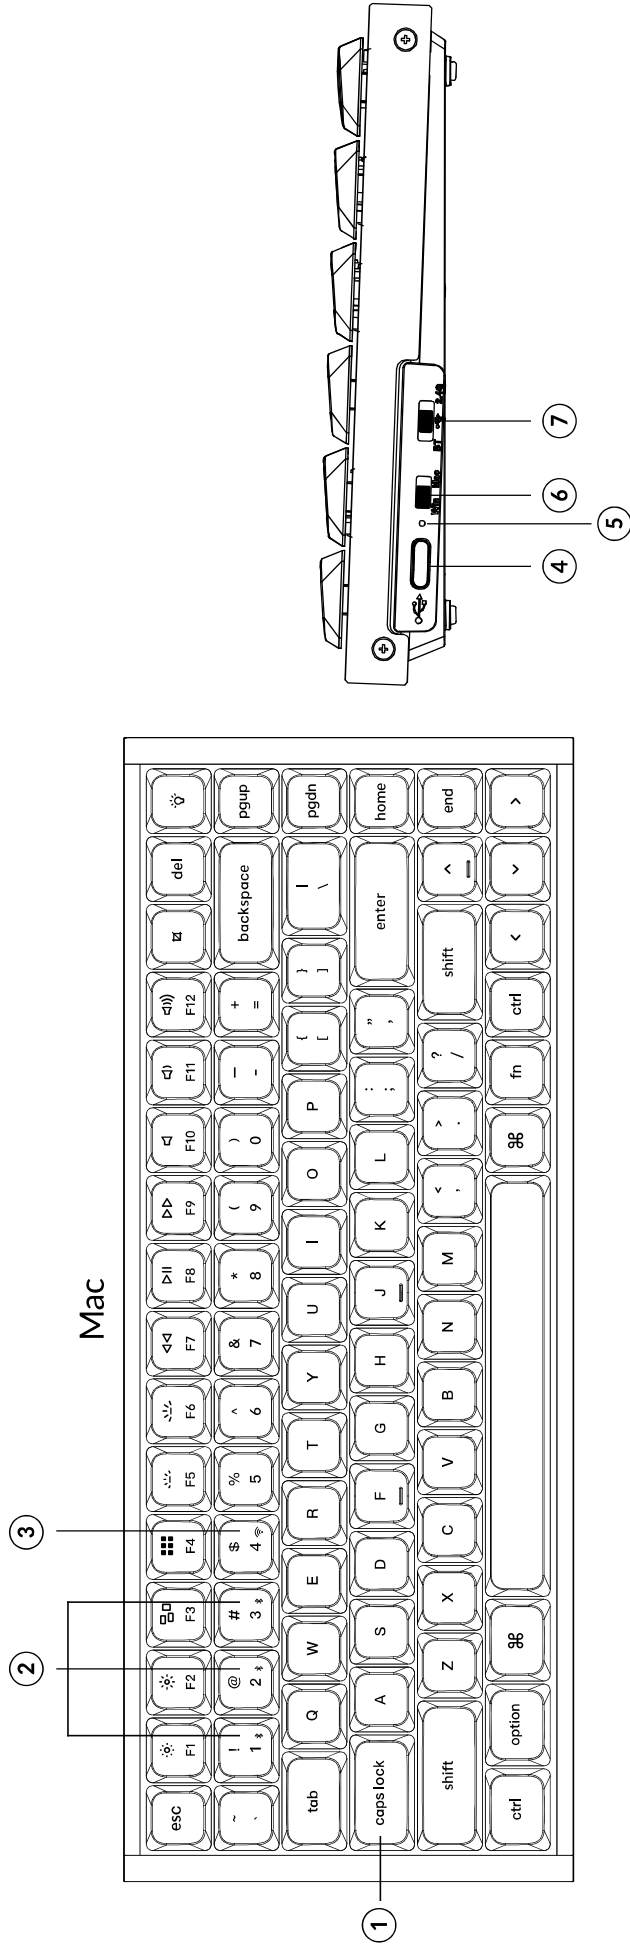

Windows

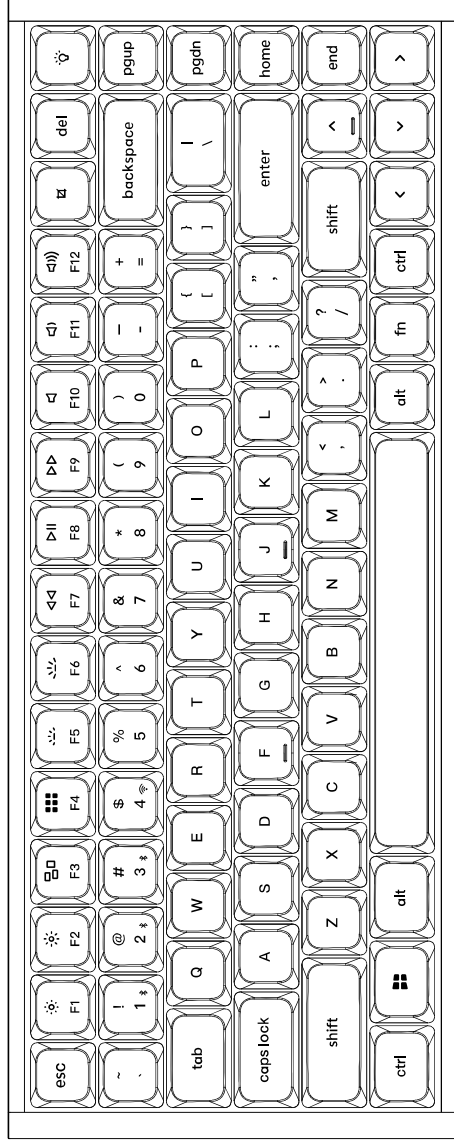 

- ① Caps Lock Indicator
- ② Bluetooth Channel Indicator
- ③ 2.4GHz Channel Indicator
- ④ Type-C Port
- ⑤ Power Indicator
- ⑥ Win/Android Mac/iOS(OS Toggle)
- ⑦ 2.4G / Cable / BT (Connection Mode Toggle)

DEFAULT KEY LAYOUT:

LAYER 0: This layer will be activated when your keyboard’s system toggle is switched to Mac.

esc	Scr-	Scr+	MCtl	LPad	Bright-	Bright+	Prvs	Play	Next	Mute	Vol-	Vol+	SShot	Del	RGB Md+
~ ,	! 1	@ 2	# 3	\$ 4	% 5	^ 6	& 7	* 8	(9	) 0	- _	+ =	backspace		pgup
tab	Q	W	E	R	T	Y	I	U	O	P	{ [	}]	!	\	pgdn
caps lock	A	S	D	F	G	H	J	K	L	:	" ;	enter			home
Left Shift	Z	X	C	V	B	N	M	< ,	> .	? /	Right Shift	< _			end
Left Ctrl	LOpt	LCmd	Space				RCmd	MO (1)	RCtl	<	>				

LOpt = Left Option LCmd = Left Command RCmd = Right Command