



P6

Wireless Mechanical Keyboard

Knob
Version

Fully Assembled Version

Keyboard

1x Fully Assembled Keyboard

Including

1x Aluminum Case

1x PCB

1x PC Plate

1x Sound Absorbing Foam

1x IXPE Foam

1x PET Film

1x EPDM Foam

1x Bottom Case Acoustic Foam

 
1x Bottom Case PET Film

16x Gaskets

4 sets x Stabilizers

1 set x Keycaps (PBT Double-shot)

1 set x Switches

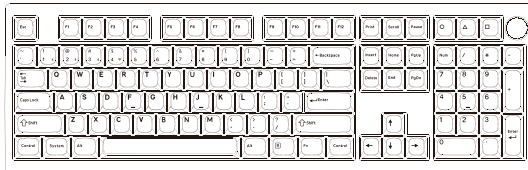

Cable

1x Type-C Cable

1x Type-A to Type-C Adapter

1x Extension Adapter for Receiver

 
Receiver

1x Type-A 2.4 GHz Receiver

Tools

1x Keycap & Switch Puller


1x Hex Key

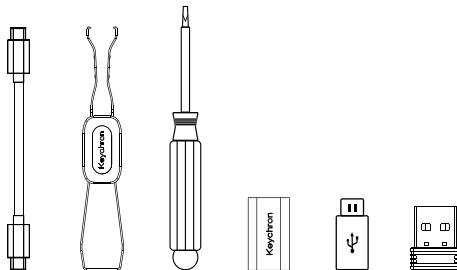

Quick Start Guide


If you are a Mac user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

 Windows / Mac

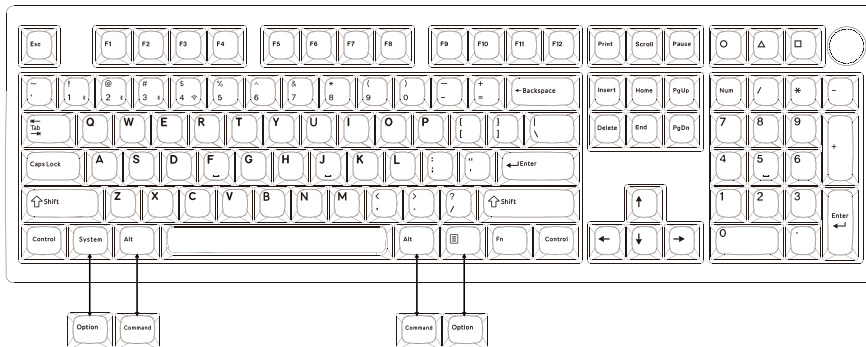

1 Connect 2.4 GHz Receiver

 Switch toggle to 2.4 GHz mode

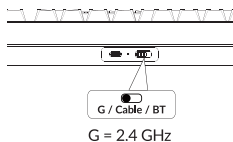


Press fn + 4 (for 4 seconds)




Connect the 2.4 GHz receiver to the device USB port.



 
Note: For the best wireless experience, we recommend using the extension adapter for receiver and putting the 2.4 GHz receiver somewhere on your desk close to your keyboard for a low rate of latency and fewer signal interferences.



2 Connect Bluetooth

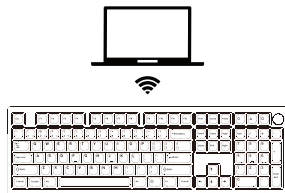 

Switch toggle to Bluetooth

 


Press fn + 1 (for 4 seconds) and pair with device named Keychron P6 Ultra 8K



3 Connect Cable



 Switch toggle to Cable



4 Switch To The Right System

Please switch the keyboard to the same system as your computer's operating system.

Press fn + caps lock to Switch Mac / Win

 


5 The Backlight

Press fn + Q to change the lighting effect



Press fn + tab to turn the backlight on/off

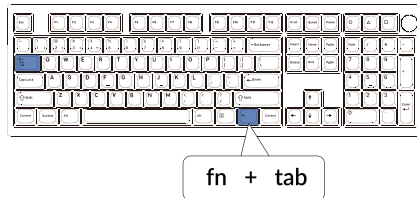

6 Adjust The Backlight Brightness

Press fn + W to increase the backlight brightness



fn + W

Press fn + S to decrease the backlight brightness



fn + S

7 Adjust The Backlight Speed

Press fn + T to increase the light effect speed



fn + T

Press fn + G to decrease the light effect speed



fn + G

8 The Keychron Launcher App

 
Please visit launcher.keychron.com to use the online Launcher web app to remap the keys, create macro commands, or flash the firmware. If the Launcher cannot recognize your keyboard, please reach our support to get the instructions.




* The online Launcher can only run on the latest version of Chrome, Edge, and Opera browsers.

9 The Layers

There are four layers of key settings on the keyboard. The layer 0 and layer 1 are for the Mac system. The layer 2 and layer 3 are for the Windows system.



 If your system toggle is switched to Mac, then the layer 0 will be activated.



If your system toggle is switched to Windows, then the layer 2 will be activated. Remember that if you are using it in Windows mode, please make changes to the layer 2 instead of the top layer (the layer 0). This is a common mistake people are making.

