


T10 Instructions

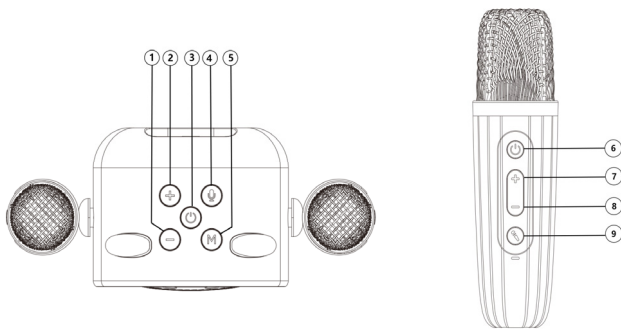

- 1.Short press to reduce volume, long press to go to the previous song Double press to play nervous and funny sounds
- 2.Short press to increase volume, long press to go to next song, double press to applaud
- 3.Long press to power on/off, short press to play/pause, double press to switch the light
- 4.Press REC1 shortly to record. Press shortly during recording to save Recording 1. After playing the recording, if you need to record again, press the M key shortly to switch to Bluetooth or AUX mode. Press and hold to play recordings (plays the most recent recording). Press and hold Volume Down to play the previous recording. Press and hold Volume Up to play the next recording. The memory card for recordings and the card for audio files (such as MP3) are best kept separate. If mixed, it may result in recordings being unplayable.
- 5.M key (mode key), short press Bluetooth, TF card, AUX, long press to turn on/off the original sound, double press to activate the speaker celebration sound.
- 6.Press and hold the microphone for three seconds to turn it on and off, and press it once to mute it.
- 7.Short press the microphone to increase the volume, double press the microphone to increase the reverb.
- 8.Short press to reduce the microphone volume, double press to reduce the microphone reverb.
- 9.Short press to switch to microphone sound effects such as magic sound, and long press to turn on/off the original sound.

Charging connection diagram

1. If the indicator light doesn't illuminate, check the power supply for the speaker.Or, connect the speaker to a 5V/1A power source to charge. Charging takes approximately 3 to 4 hours.
2. There's no sound from the microphone. The microphone may be disabled, the mode settings may be incorrect, or the volume may be off.Please adjust the microphone volume.
3. If there is no reverberation in the stereo, the reverb function may be turned off.Please turn on the reverb function.
4. If the microphone is noisy, it could be due to interference from ambient noise.
5. If Bluetooth playback is interrupted, it may be because the Bluetooth distance is too far, or there is an obstacle between the phone and the speaker, affecting the signal transmission.Try to get closer to the connected phone and avoid obstacles.
6. If you can't connect to Bluetooth, it may be because the distance is too far,there are obstacles, or another phone is connected. Move closer to the phone to avoid obstacles. Disconnect the other phone.

FCC Warning Statement
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates noise and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications; However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Product Name: Wireless Karaoke Speaker

Model:T10

Output power: 5W

Charging voltage: DC5V

Power supply mode: DC charging and built-in battery

