


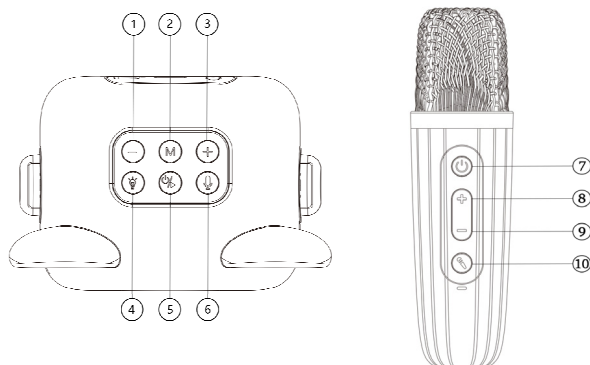

- 1. Short press to decrease volume, long press to skip to the previous song, double press to play a nervous and funny sound.
- 2. M button (Mode button): Short press to switch to BT, TF card, or AUX mode, long press to cancel the original sound, double press to play a celebratory speaker sound.
- 3. Short press to increase volume, long press to skip to the next song, double press to play applause and cheers.
- 4. Short press to switch lighting modes, double press to turn off the lights.
- 5. Long press to power on/off, short press to play/pause, double press to switch lighting modes.
- 6. After inserting a TF card, short press to record 1. While recording, short press to save the recording. After playing a recording, if you need to record again, short press M button to switch to BT or AUX mode. Long press to play a recording (plays the most recent recording, long press to decrease the volume to play the previous recording, long press to increase the volume to play the next recording). It's best to keep recording cards separate from audio files like MP3s. If mixed up, recordings won't play.
- 7. Short press to increase the microphone volume, double-press to increase the reverb.
- 8. Short press to decrease the microphone volume, double-press to decrease the reverb.
- 9. Short press to toggle microphone sound effects like Magic Sound, long press to turn the Cancel sound on/off.


Product Name: **WIRELESS KARAOKE SPEAKER**

● Model: T60

◆ Output Power: 5W

■ Charging Voltage: DC 5V

Power Supply: DC charging and internal battery

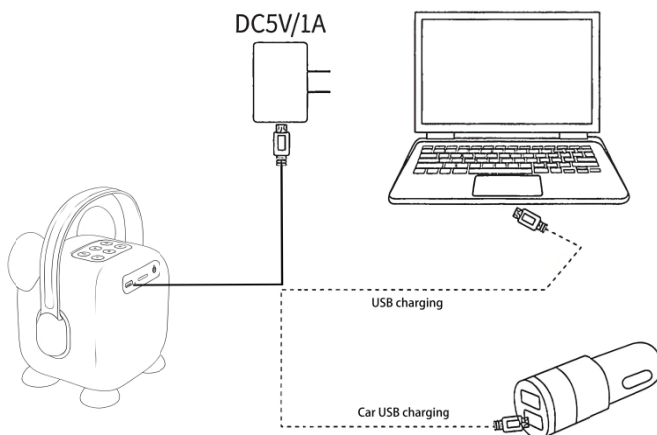

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential

installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.