

材质：铜版纸
印刷：彩色印刷
注：英文，需对折,对折后尺寸 70x122mm

封底

Button Configuration




AUX port


TF card port

USB port

TYPE-C port

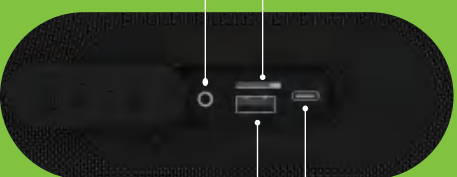

How to Use

 

- Long press for Turn On and Off
- Long press for On/Off the light mode
- Short press to Pause / Play music
- Short press to switch function mode
- Double-tap to disconnect BT
- Long press to enter dual pairing Pairing pairing mode
- Long press to cancel the dual pairing Pairing pairing mode



- Long press Button Next song
- Short press Button increase volume
- Long press Button Previous song
- Short press Button decrease volume

This device and its antenna(s) must not be colocated or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.

MUSIBABY

Wireless Connection





How to Enter/Exit Stereo Pairing

1.Turn on two speakers and make sure they haven't connected with any device.
2.Long press "∞" once on either speaker(Host Speaker) to enter stereo pairing mode.
3. Once successfully paired, the stereo pairing indicator will light up.
4.Turn on the Bluetooth function of your BT device, search&click SOONBOX- S8600PRO.
5.To exit stereo pairing mode, press and hold the "∞" button on either speaker.

Directions for use:

Wireless pairing:

Turn on the device, go to its BT settings, and select " SOONBOX-S8600PRO " to pair.

Play instructions:

- BT search status: the on/off light flashes quickly, approximately 0.5 seconds per time;
- BT pairing status: The on/off light is constantly on; while the playback status: The on/off light flashes slowly for about 1 second per time.

Charging indicator light:

The red light turns on while charging and turns off when fully charged.

Specifications:

Model	SOONBOX-S8600PRO
Color	Blue, Black
BT Version	5.3
Frequency Range	20HZ~20KHZ
Input Power	5V/2A via Type-C Port
Driver	4Ω
Charging Time	≈5 Hours

- There is a prompt tone when turning on/off;
- There is a prompt tone when the maximum volume is reached, and there is no tone at the minimum volume;
- Low Battery Warning: At 20% battery, a first alert sounds. About 20 minutes remain at 40% volume. After the second alert, the speaker shuts off in 1 minute. Please recharge promptly.

Mode switching:

- When turned on, it defaults to BT mode;
- Mode switching sequence: BT mode - FM mode- TF mode - USB mode - AUX mode, with priority given to rear insertion.

Volume requirements:

The default volume for startup is 50%(First use), when turned on again after use, the volume is the same as when it was last turned off.

Power saving function:

Automatically shut down after 10 minutes of inactivity.

Troubleshooting:

Automatic shutdown

When the battery power is low, the battery protection will be turned on automatically. Please charge for 4 hours after use.

Cannot play music

The storage path of the music file cannot be recognized by the player,please store it in the root directory of the removable device.

There is no sound when connecting to the computer

The computer intertace is connected incorrectly, please select the correct audio output port.

There is no response to the keys or the function is in disorder

Try again after shutting down.

Reset

If the machine can't shut down normally due to a malfunction, press and hold the power button for 10 seconds to force a restart.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

— Reorient or relocate the receiving antenna.

— Increase the separation between the equipment and receiver.

— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

— Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

MUSIBABY



SOONBOX-S8600PRO

WIRELESS SPEAKER

USER GUIDE

封面