

Quick Start Guide

Outdoor Pan/Tilt Security Wi-Fi Camera

©2025 TP-Link 7100001393 REV1.0.0
*Images may differ from actual products.

1 Set Up Your Camera


1. Download the App

Download the **Tapo** app from the App Store or Google Play. Open the app and log in with your TP-Link ID. If you don't have an account, create one first.




2. Power Up

Plug in the power adapter or connect to a PoE router via an Ethernet cable to power up your camera.

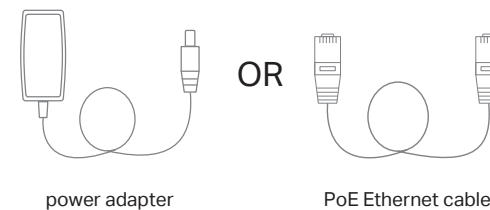

3. Set Up

Tap the **+** button > Add Device in the app and select your model. Follow the app instructions to set up your camera.

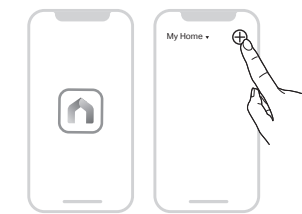


2 Mount Your Camera

Option 1: Wall Mount


1. Drill Holes

 Stick the mounting template to the desired place. Drill 4 screw holes according to the template.




2. Route the Cable

Route the cable through the grooves in the bracket. Make sure the rubber stopper remains at the end of the back groove to support the camera.

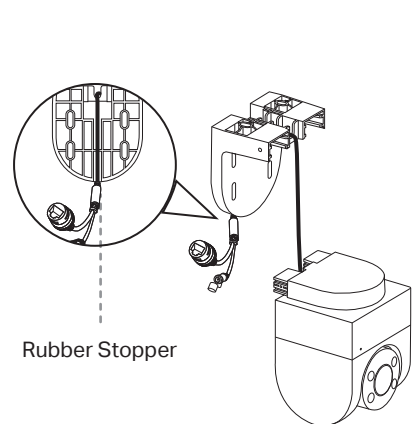


3. Install the Bracket

Insert 4 anchors into the holes and use the screws to affix the camera bracket over the anchors.

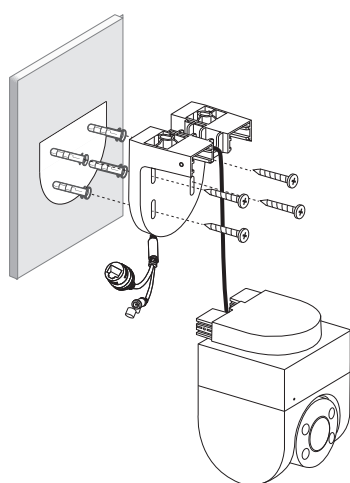

4. Secure the Camera


- Align and slide the camera base onto the bracket from the outside in.
- Use two bracket screws to affix the bracket and camera base.

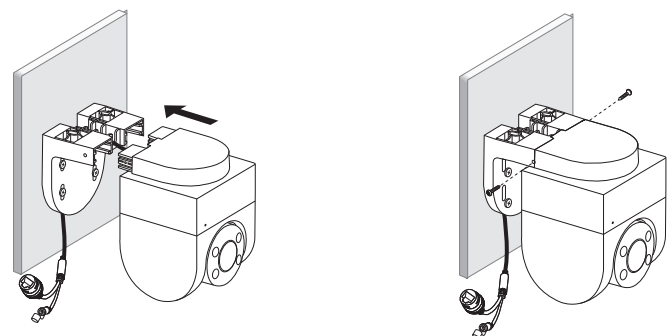

Option 2: Eave Mount


1. Drill Holes

 Stick the mounting template to the desired place. Drill 2 screw holes according to the template.




2. Route the Cable

Route the cable through the grooves in the bracket. Make sure the rubber stopper remains at the end of the upper groove to support the camera.

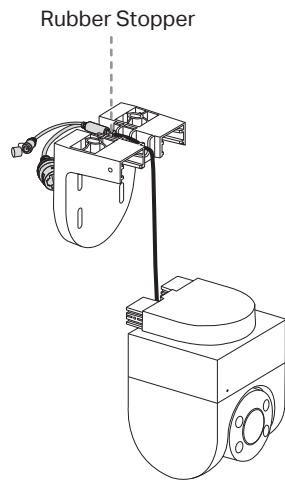

4. Secure the Camera


- Align and slide the camera base onto the bracket from the outside in.
- Use two bracket screws to affix the bracket and camera base.

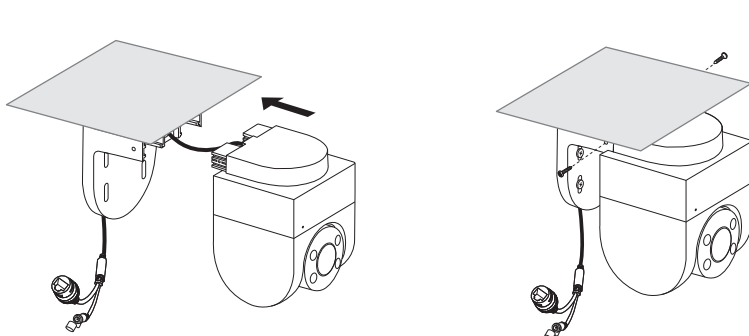

Option 3: Pole Mount


1. Route the Cable

Route the cable through the grooves in the bracket. Make sure the rubber stopper remains at the end of the back groove to support the camera.

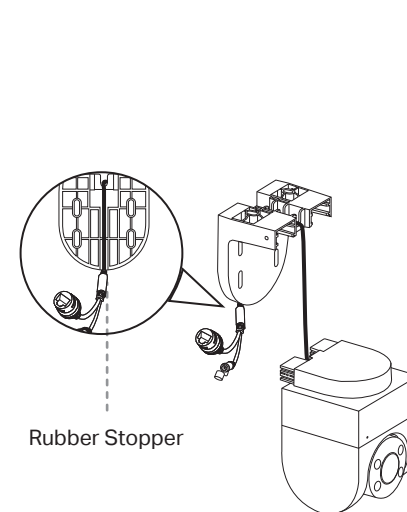


2. Install the Bracket

Mount the bracket on the pole using two pole-mounting loops* (loop width ≤ 12 mm).

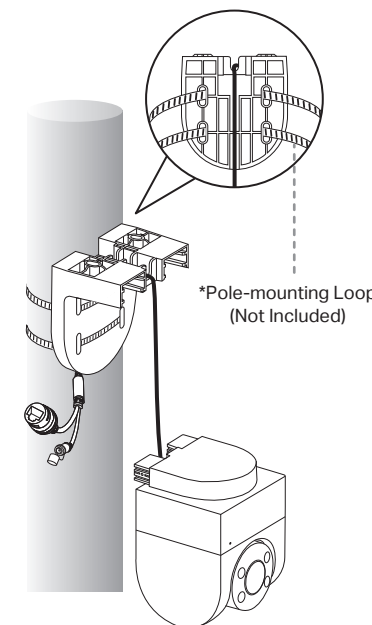

3. Secure the Camera


- Align and slide the camera base onto the bracket from the outside in.
- Use two bracket screws to affix the bracket and camera base.

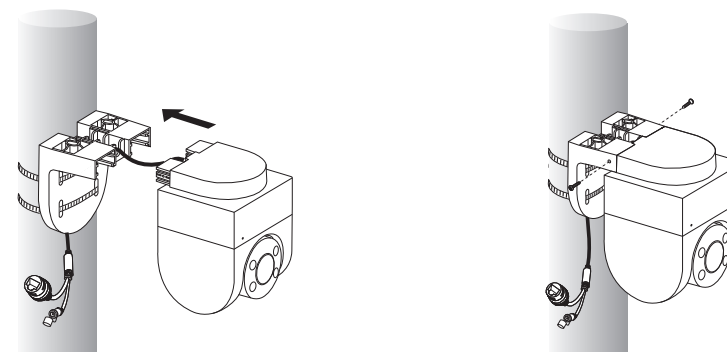

3 Install Waterproof Accessories

1. Install the Waterproof Seal for Power Connectors


Install the waterproof seal for the power connectors.

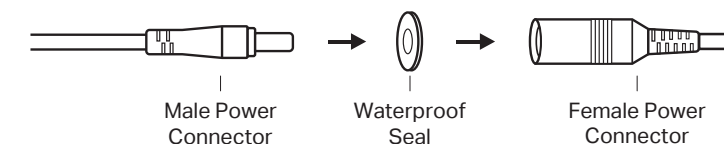

2. Install Waterproof Cable Attachments


Install the waterproof cable attachments for the network interface. Make sure each part is securely attached and the waterproof rings are flush to keep out water.

➤ When the Ethernet port connects to a network device

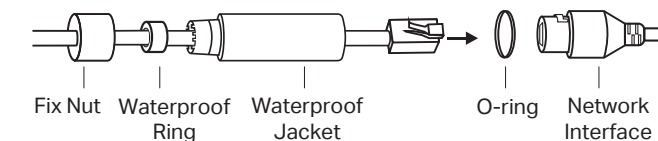


- Route the network cable through the following components in order: fix nut, waterproof ring, and then the waterproof jacket.
- Insert the waterproof ring into the waterproof jacket.
- Fix the O-ring to the network interface of the camera and connect the network cables.
- Attach the network interface with the waterproof jacket, then twist to lock. Rotate the fix nut to secure it to the waterproof jacket.

➤ When the Ethernet port does not connect to a network device

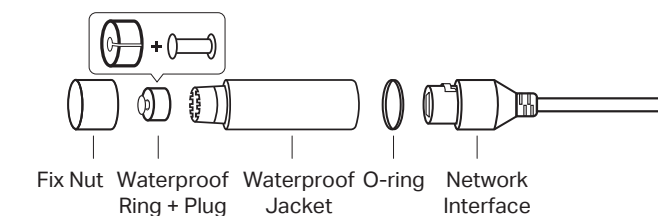

- Insert the waterproof plug into the waterproof ring, then insert them into the waterproof jacket.
- Fix the O-ring to the network interface of the camera. Attach the network interface with the waterproof jacket, then twist to lock. Rotate the fix nut to secure it to the waterproof jacket.

Appearance

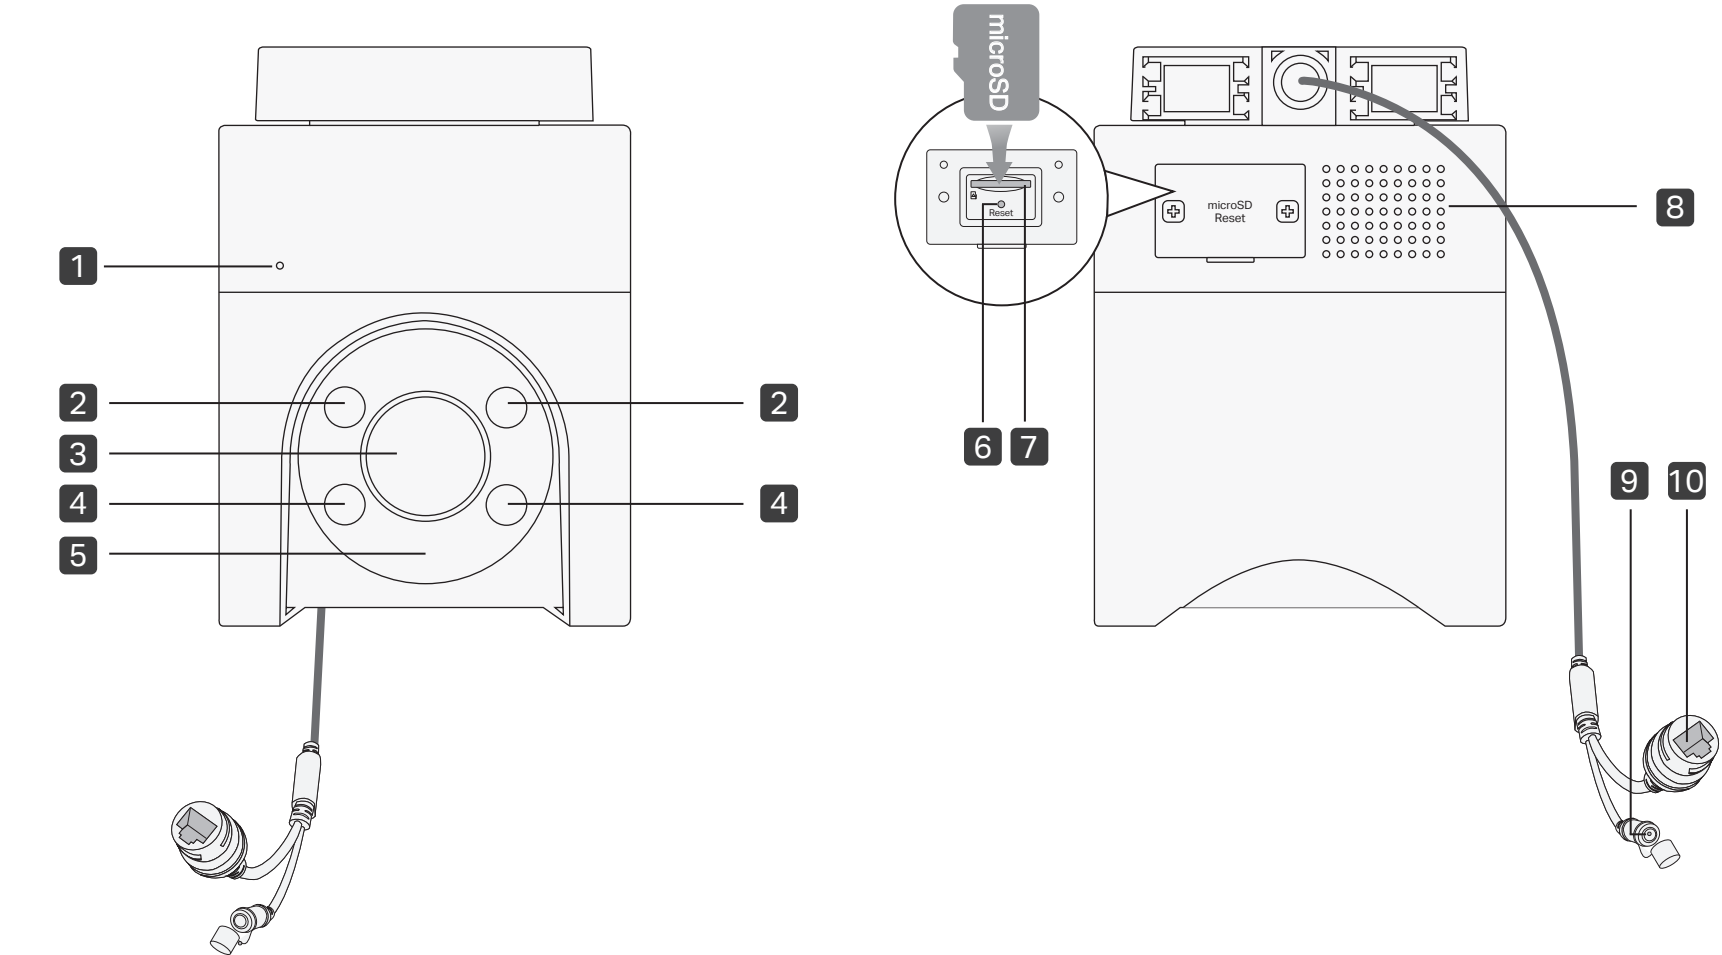

- 1

Microphone
- 2

White Light LEDs
- 3

Lens
- 4

Red-Blue Alarm Light
- 5

IR LEDs
- 6

Reset Button
- 7

microSD Card Slot
- 8

Speaker
- 9

DC Power Connector
- 10

PoE Ethernet Port

Red-Blue Alarm Light Indication

Solid red	Starting up
Blinking red and blue slowly	Ready for Wi-Fi setup
Blinking red slowly	Connecting to Wi-Fi
Blinking blue slowly	Connected to Wi-Fi or wired network
Solid blue	Connected to the cloud
Blinking blue quickly	Downloading/updating the firmware
Blinking blue 4 times	microSD card inserted
Blinking red quickly	Camera resetting; Wi-Fi resetting

Button Explanation

Reset Button
Open the silicone cover. While the camera is powered on, press and hold the RESET button to reset the camera.

- Press and hold for 5 seconds: Reset Wi-Fi settings only
- Press and hold for 10 seconds: Reset to factory settings

microSD Card Slot
Unscrew to remove the cover and insert a microSD card.* Initialize it on the Tapo app for local recording.
*microSD card not included.

FCC compliance information statement
Product Name: Outdoor Pan/Tilt Security Wi-Fi Camera
Model Number: Tapo C566WB
I.T.E. Power Supply T120100-2B1
Responsible Party: TP-Link Systems Inc.
Address: 10 Mauchly, Irvine, CA 92618
Website: <http://www.tp-link.com/us/>
Tel: +1 626 333 0234
Fax: +1 909 527 6804
E-mail: sales.usa@tp-link.com

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user’s authority to operate the equipment.

FCC RF Radiation Exposure Statement
This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.
"To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."

We, TP-Link Systems Inc., has determined that the equipment shown as above has been shown to comply with the applicable technical standards, FCC part 15. There is no unauthorized change is made in the equipment and the equipment is properly maintained and operated.
Issue Date: 2025-10-16
NCC Notice & BSMI Notice
注意！

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前述合法通信，指依電信管理法規定作業之無線電通信。
低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。
為避免本器材影像畫面遭偷窺或擷取，本器材使用者應先修改預設密碼，並定期更新密碼。
安全諮詢及注意事項

請使用原裝電源供應器或只能按照本產品注明的電源類型使用本產品。
清潔本產品之前請先拔掉電源線。請勿使用液體、噴霧清潔劑或濕布進行清潔。
注意防潮，請勿將水或其他液體潑灑到本產品上。
插槽與開口供通風使用，以確保本產品的操作可靠並防止過熱，請勿堵塞或覆蓋開口。
請勿將本產品置放於靠近熱源的地方。除非有正常的通風，否則不可放在密閉位置中。
不要私自拆開機殼或自行維修，如產品有故障請與原廠或代理商聯繫。
請勿將本產品浸入水或者其他液體中。
電源供應器应使用在环境温度低於或等於40℃的室內。
工作溫度：-30 C ~55 C