

四折页说明书：128g铜版纸，双面印刷，成品尺寸100x70mm，展开尺寸400x70mm

User Manual

Wireless RV Leveling System

Model: AM350-X V3



Download App




Requires iOS 12+ or Android 7.0+



SMART RV LEVELING

Main Interface Introduction

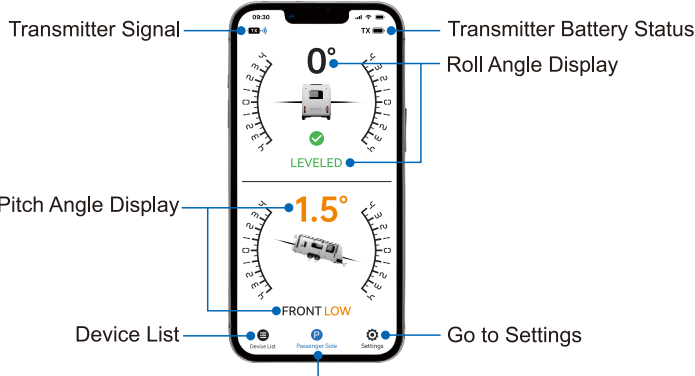

Transmitter Signal

Transmitter Battery Status

Roll Angle Display

Pitch Angle Display


Device List

Transmitter Orientation

Go to Settings

1

Device List

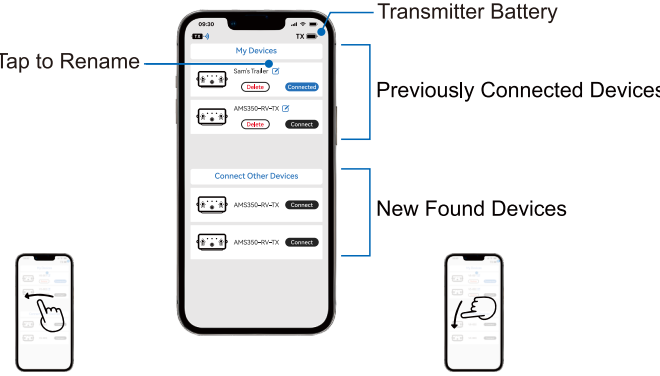

Transmitter Battery

Previously Connected Devices

New Found Devices

Tap to Rename


Swipe left to return

Swipe down to refresh

2

Settings Interface Introduction

* Make sure your RV is parked on level ground before calibration.

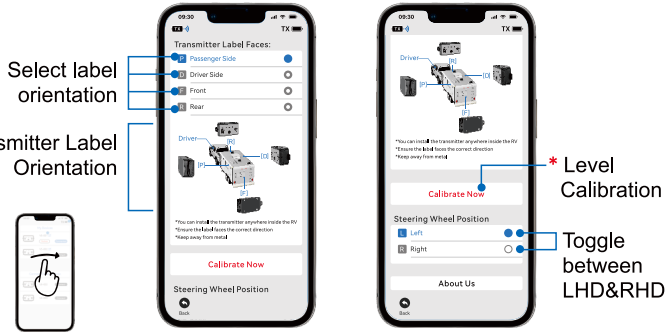

Select label orientation

Transmitter Label Orientation

Level Calibration


Toggle between LHD&RHD

Swipe right to return

3

正面

Installation of the Transmitter

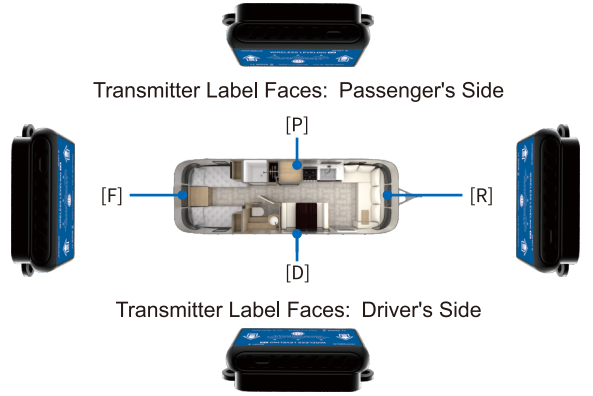

Transmitter Label Faces: Passenger's Side

Transmitter Label Faces: Driver's Side

Transmitter Label Faces: Front

Transmitter Label Faces: Rear

4

Transmitter Installation Instructions



Installation Guide

1. Arrow up, on a vertical wall (perpendicular to floor).

2. Don't mount outside – not waterproof.

3. Mount anywhere inside the RV – preferably away from metal, open and unobstructed.

4. Transmitter doesn't need to be perfectly level – close enough is fine. Important: RV must be perfectly level before calibration.

1. Install the transmitter base on the wall using double-sided tape or screws.

2. Attach the transmitter to the base, and installation finished.

5

Operation Method



Download App

1. Scan the QR code to download the app, and then turn on Bluetooth.

2. Long-press the Power button on the transmitter to turn it on.

3. Open the RV Leveling app. Your phone will now scan for nearby devices. When the transmitter shows up, tap to connect, and a "Connection Successful" prompt will appear.

4. Park your RV on a level surface, open the mobile app, and perform level calibration.

5. How to use: Easy 3 Steps

Step 1

Step 2

Step 3

Arrive at your destination.

Open the RV Leveling app.

Level your RV in real time

6

Transmitter Parameters

Item	Specification
Power Supply	Lithium Battery 3.7V/TYPER-C:5V
Operating Current	8mA
Power	1W
Operating Temperature	-20°C ~ 70°C
Weight	100g
Size	108.8(93.5)*31.4*52.5mm

After-Sale Service

We offer a 1-year warranty for the product and accessories from receipt, providing free repair or replacement with new parts; within 90 days of receipt, we cover shipping for free replacement parts with video or picture proof, while after 90 days the buyer bears the shipping cost, and the warranty excludes products from unauthorized channels and damage due to improper use or maintenance.

FC

CE

RoHS

MADE IN CHINA

7

背面

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.