



Intelligent handle Manual CL-06



I.Functions and Features


- supports fingerprint,password,IC card,and Bluetooth unlocking
- Features a "always open" mode,suitable for various applications

II. Performance Specifications

Fingerprint	Bluetooth gateway	支持
Password keypad	Fingerprint capacity	50
Access card	Password capacity	100
	Password length	6
	Keypad backlight	Whitelight
	APP Download	Search for "Smart Life" and "Tuya Smart" on each app download platform
Electrical Parameters	Bluetooth unlocking	Supports
	Fingerprint Management	Supports
	Password Management	Supports
	Temporary password	Supports setting validity period
	Dynamic password	Supports (valid for 5 minutes, no phone connection required to the device)
	User Management	Managed on a per-user basis. When a user is deleted, the fingerprints and passwords under that username are also deleted accordingly.
	Unlock Records	Supports
	Alarm	Various Lock Alarms
Bluetooth	Power Supply	3.7V/400mA lithium battery

II.Packing List


Open the product packaging. Check whether the following accessories are included.

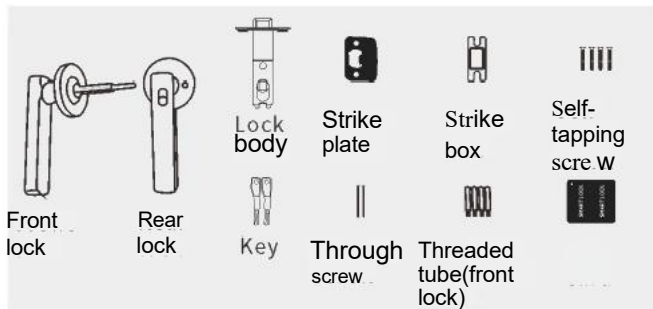


IV.Lock Body Installation

1. Confirm the door opening direction

① Right-hand opening

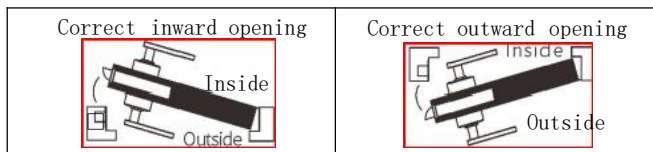

② Left handle opening

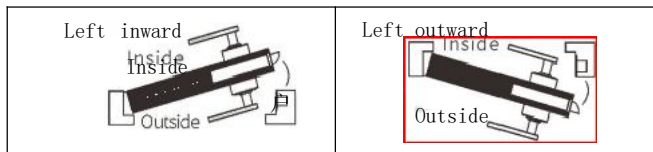

If the door opens inward (you push it open), the beveled (angled) surface of the latch bolt should face the outside of the door, while the flat surface of the latch bolt should face the inside of the door.

1. Latch Bolt Length Measurement and Adjustment

When installing the latch bolt, adjust the length according to the actual door thickness/distance as follows:

1. Measure the distance from the door edge to the center of the circular hole. If it is 60mm, no adjustment to the lock body is required. If it is 70mm, adjustment is needed. Adjust the lug/post backward to a distance of 60-70mm (Figure 3).

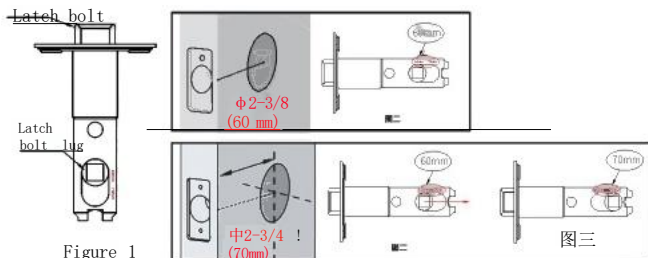


Figure 1

图三

1

Note: After installation, the square hole must be kept level.

V. Installation Steps

Install the lock body

Step 1:



1. Place the lock body into the door slot



2. Secure the lock body by tightening the self-tapping screws.



3. The square hole of the lock body must be centered in the circular hole

Install the strike box and strike plate.

Step 2:



1. Install the strike box and strike plate on the door frame.



2. Tighten the self-tapping screws.

Install the front panel

Step 3:



1. Screw the threaded tube onto the stud of the front lock.



2. Tighten the threaded tube.



3. Install the front lock. Pass the square rod and lock cylinder bar through the square hole of the lock body.



4. Close it against the door surface.

Install the rear panel

Step 4:



1. During installation, keep the tail bar horizontal. The rear handle lock button should show red.



2. When installing with the tail bar vertical, the rear handle lock button should show green.



3. Align the square hole of the rear lock with the cylinder bar, then close it against the door surface.



4. Align the through screw with the front lock threaded tube, screw it in to secure the rear lock, leaving some play (not fully tightened).



5. Ensure the front handle and rear handle are aligned horizontally, then tighten the screws.




6. Installation complete.

VI. Product Functions and Operation


When no users are registered, any fingerprint, or the default password 123456 can unlock the lock. Once a fingerprint or password is registered, unauthorized fingerprints/passwords will no longer work. To add new users: if no admin is registered, the lock will directly enter add mode; if an admin already exists, admin verification is required first.

1. Add User

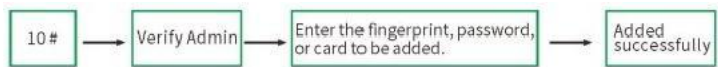


- 1. When verifying the admin: If no admin has been registered, you can use the default password "123456" to enter the add operation.
- 2. The first 10 users added will be administrators (IDs 001-010). All other users will be ordinary users.
- 3. The valid password length must be at least 6 digits.

2. Delete User

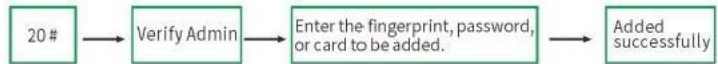

- 1. The last administrator cannot be deleted.

3. Volume Setting

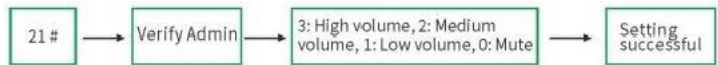

- 1. After entering the volume setting mode, only keys 1, 2, 3, and 0 are selectable. Other keys are invalid.

4.Physical Button Operation(Rear Handle Button)

Swipe left		Enable auto-lock
Swipe right		Disable auto-lock

Factory Reset

1.Slide the rear handle lock button left or right.

Continuously slide left and right for 5 complete cycles (the fingerprint sensor blinks red)

Press the #key or any fingerprint to restore factory settings.

2.Clear data and initialize in the Tuya mobile app.



- 10.Remove Device
- 11.1.Unbind
2.Unbind and clear data
- 12.Tap Confirm to unbind.

5.Low Battery Alert and External Power Supply

- 1)Low battery:Each unlock attempt will trigger three beeps and a red flashing fingerprint light.Recharge the battery promptly.
- 2)Depleted battery:Use the mechanical key or a 5V USB power source from outside the door for emergency unlocking.

If incorrect user information is entered more than 5 times consecutively, the system will lock for 60 seconds. During this time, the system will not respond to any operations.

6. Anti-peeping Password


For example, if your password is 123456, you can enter 96581234562875 - this adds random digits before and after the actual password. Then press # to confirm. **The maximum input length is 20 digits.**

7. Mobile App Download and Connection

Download the "Tuya Smart" or "Smart Life" app from the app store, or scan the QR code below to download the software.



App Registration: If you do not have an App account yet, you can choose to register or login via SMS verification code. Tap "Create New Account" to enter the account registration page. Follow the prompts to obtain an **SMS verification code** and **set a password**. If you already have an account, tap "Login with Existing Account" to access the App. Login methods include password, verification code, and social media accounts.

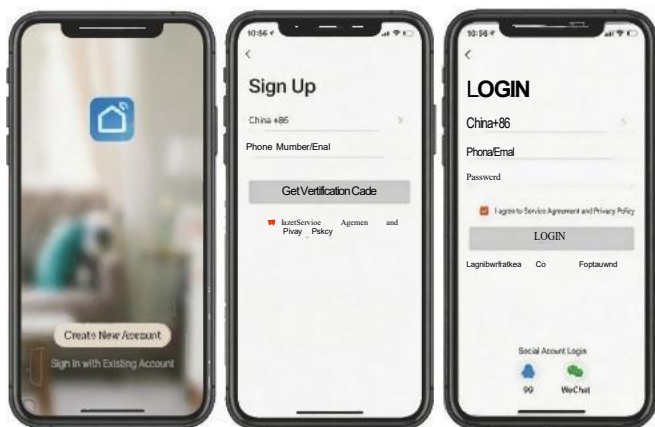

App Interface: The image below shows the main interface of an App with various smart home devices already configured. On the main App interface—under the "My Home" tab—you can select a home, add devices, view the current weather of your home, activate scenes, and control smart devices. Clicking on any smart device under "All Devices" will open its control panel, which includes all functions supported by the device in the App.



AI Devices Lng Room hostn Ron 2N Bocm...
Plarnt Groer

Add via Bluetooth:

- 1) No local admin → add lock when device wakes up.
- 2) Local admin exists → enter 29# to verify admin → start Tuya pairing.
- 3) Open App → phone auto-searches device → tap Add.
- 4) For Bluetooth locks, user settings via App are recommended.
- 5) After Bluetooth connection, the first admin can only be added via the App.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.