



Tablet computer

T10A863-21

USER MANUAL

Please read this manual thoroughly before using and
keep it for future reference.

SPECIFICATION

Size	10.1"	Connection	Wifi
Chipset	A537PX	CPU	Octa core 2.0GHz
GPU	Arm Mali-G57	RAM	4+8GB
Display/ Resolution	1280*800	Storage	128GB
Front-facing Camera	8.0MP	Network	802.11 ac/b/g/n/ac 2.4G+5G+WIFI6
Rear Camera	13.0MP	Power Supply	5V/2A
Battery	6000mAh	Touch	Multi-touch
Operating System	Android™15.0	Ports	Type-C

FUNCTION OVERVIEW



- | | | |
|-----------------------------|------------------------|-----------------|
| 1.USB-C Port/Headphone jack | 5.Flash lamp | 9. Rear Camera |
| 2. Memory Card Slot | 6. Microphone | 10.Power On/Off |
| 3. Volume + | 7. Front-facing Camera | |
| 4. Volume - | 8.Speakers | |

**Google, Android, Google Play and other marks are trademarks of Google LLC.*

BEFORE USE

Battery

- * A rechargeable Li-ion battery is installed in the tablet.
- * DO NOT attempt to replace the tablet battery by yourself because you may damage the battery, which might cause overheating, fire or injury.
- * DO NOT dispose of tablet in a fire.
- * DO NOT expose the tablet battery to any heat source, direct sunlight or high temperature.
- * Only use the ORIGINAL power adapter provided by us to charge the tablet battery.
- * We suggest you drain the battery completely once a month if only use your tablet occasionally.
- * The Li-ion battery in your tablet should be serviced or recycled by an authorized service provider, and must be recycled or disposed of separately from household waste.
- * Dispose of battery according to your local environmental laws and regulations.

Charging the battery

Charge your battery before first use and whenever there is a low battery indication. Do not use incompatible or substandard chargers or cables as this may cause incompatible or substandard chargers or cables as this may cause the battery to explode and cause damage.

Note:

- If the battery is completely discharged, the device cannot be switched on until the battery has been charged for a few minutes.
- If the tablet will not be used for a long time, it is recommended to charge it to full capacity once every two or three months.

To charge the tablet battery:

Connect the Type-C USB end of the Charging Cable to the Type-C USB Charging Port on the side of the tablet.

Plug in the Mains Adaptor to a suitable mains outlet and turn on at the outlet.

The battery icon on the top right corner indicates the charge level. Remove the charging cable promptly when fully charged.

GETTING STARTED

Power ON/OFF

- * Press and hold the power button for 2-3s to turn on your tablet, select your language and set up your tablet following the start guide.
- * Press and hold the power button for 2s, then release it, it will show power off and Restart on the screen, Tap Power off to turn off the tablet.
- * Press and hold the power button for 7-8s to do a forced reboot when it's frozen.

Shooting Mode

Press the power button twice on any interface to quickly turn on the camera.

Tip:

Go to Settings > System > Gestures > Quickly open camera > to turn on the switch.

Sleep Mode

Simply press the power button once to switch the tablet to the Sleep Mode when the tablet is ON; press again to wake it up.

Tip:

Go to Settings > Display > Screen timeout to set the time of entering the Sleep Mode.

Screenshot

 
- * Press and hold the Volume- button and the Power On/Off button together to capture a picture.
- * Quickly slide down with three fingers to capture the current screen image

Security

- * Please remember the password or pin that you have chosen. If you forget this, the only way to use the tablet again is to do a factory reset which will delete all user-generated data


HOME SCREEN

Swipe screen and touch screen

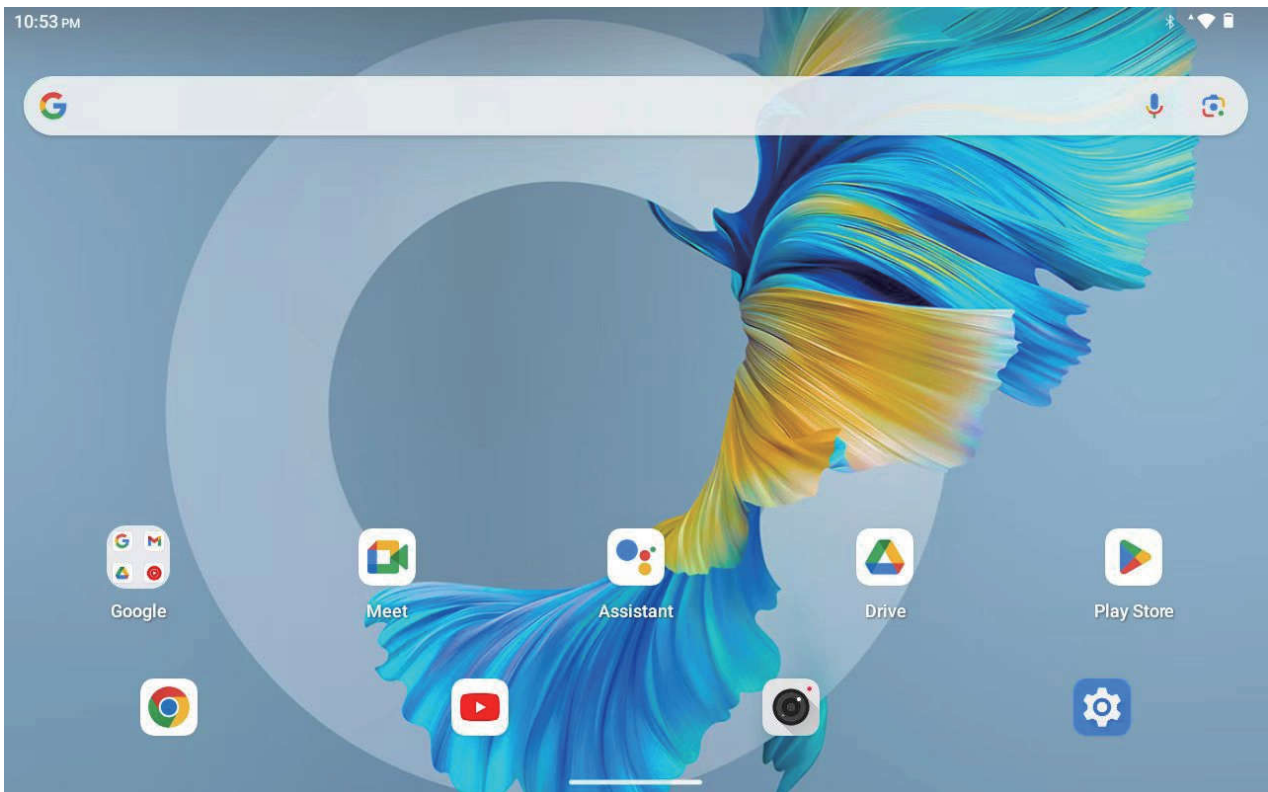

- * Swipe up from the Home page to access all installed Apps.
- * Swipe down from the Home page to display notifications and settings option.
- * Swipe from the left or right side of the Home page to the next page or back.
- * Swipe up from the '—' at the bottom of the the screen to view all running apps. You can swipe left or right to switch between the apps, or swipe up to close them.
- * Swipe up quickly from the '—' at the bottom of the screen to exit the app and return to the Home page.

 Home Settings and Wallpapers

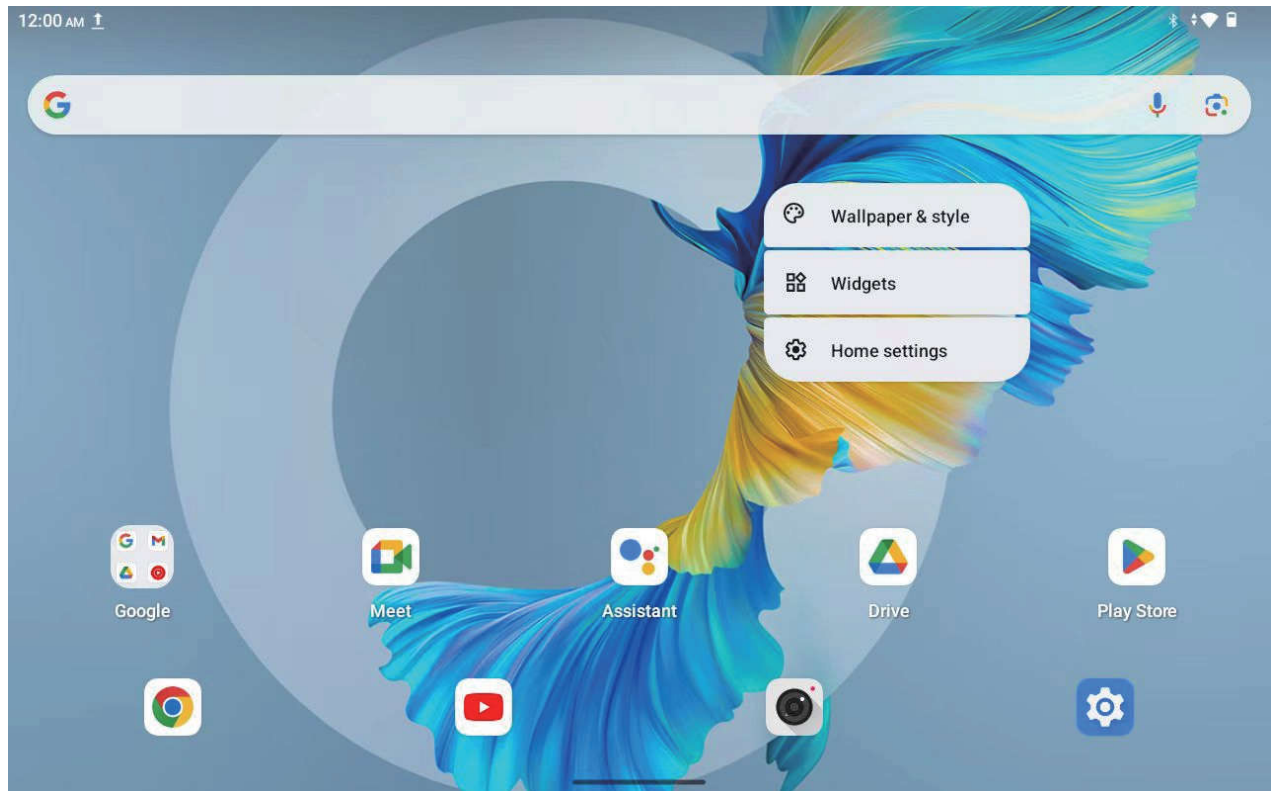

Tap and hold the empty section of a Home screen, **Home settings** and Wallpapers will be displayed.

1. Tap Home Settings to check the option of Add icon to Home screen:

Allow the new Apps installed on Play Store to be displayed on the Home Screen.

 
2. Tap Widgets, touch and hold any application (e.g. Clock), then slide and add it to a Home screen. Remove it by sliding it to **X Remove**.

3. Tap Wallpapers & style to change the current wallpaper of the tablet and its style, and more.

SETTING BASICS

Quick Settings

Swipe down from the top of the screen to access Quick Settings

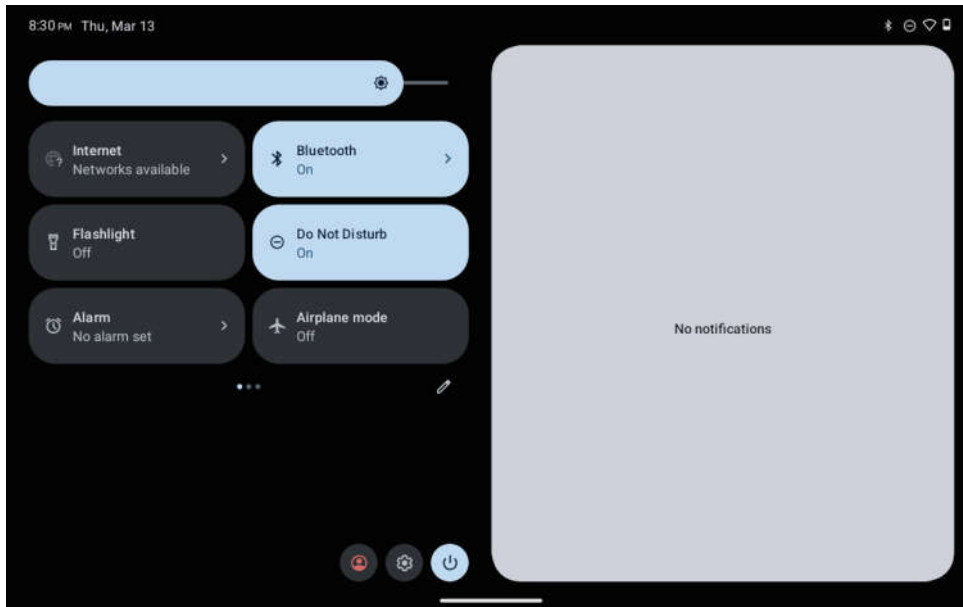


-  : **Internet.** Tap to connect/disconnect to a wireless network
-  : **Do not disturb.** Block sound after enabling this feature
-  : **Flashlight.** Tap to turn the flashlight on/off
-  : **Auto-rotate.** Turn on/off the Auto-rotate of the screen
-  : **Power saving mode.** Tap to choose the power setting you prefer to save battery time
-  : **Airplane mode.** Turn on/off all network connections
-  : **Screen Cast.** Mirror the display of the tablet to compatible devices, e.g. TV box or Fire TV Stick.
-  : **Night Light.** Enabling this reduces the amount of blue light emitted by the device display
-  : **Screen record.** Start and end the screen recording
-  : **Nearby share.** Enable feature , Users can share information with nearby devices quickly.
-  : **Screenshot.** Enabling this feature to take screenshot
-  : **Extra dim.** Turns on to darken the screen for more comfort when reading.

Tap the  icon to expand all the functional blocks, you can arrange and add.

More Settings

 Swipe down from the top of the screen, then tap the  icon to enter the detailed setting interface. Or, tap the **Settings** App on the Home screen to enter.

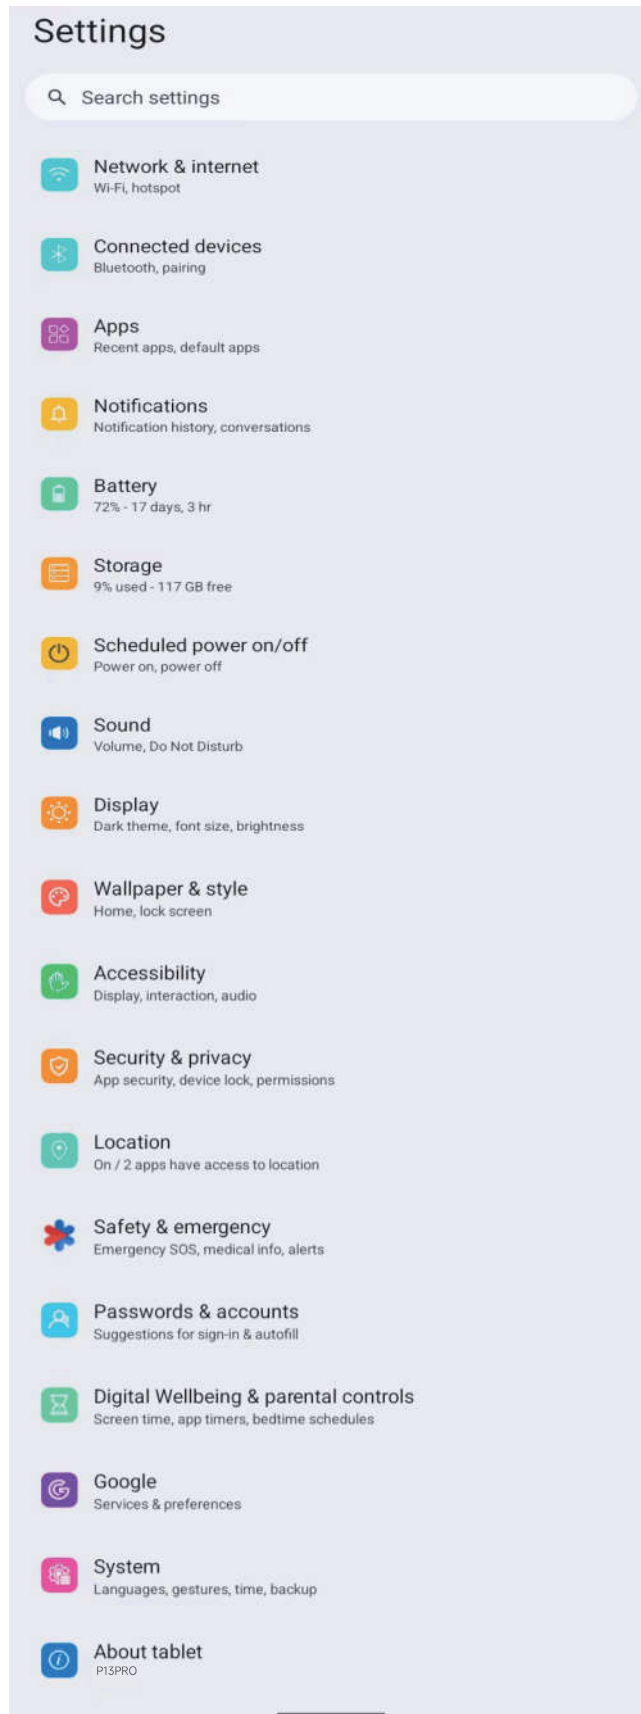

Network & internet

- * Connect to any working Wifi
- * Enable/disable the **Airplane Mode**
- * Turn on/off the **Data Saver**
- * Add VPN Connections
- * Select a private DNS mode

Apps

- * Check the Apps recently opened
- * Check all the Apps on the tablet
- * Clear the cache of the Apps
- * Uninstall the third-party Apps
- * Set default apps and check the unused apps
- * Check the screen time for Apps
and more

Notifications

- * Turn on/off the notification for each app
- * Show or hide the notification history
- * Set privacy preferences for notifications
- * Set notification displaying options when the screen is locked
- * Enable or disable the mode of **Do Not Disturb**
- * Allow or disallow the apps to show dot
and more

Connected devices

- * Pair New device, bluetooth will turn on to pair
- * See all saved devices, bluetooth will turn on
connection preferences

Battery

- * Check the time for **Screen usage since full charge**
- * Enable/disable **Battery Saver** and **Battery Manager**
- * Display or hide the remaining power as a percentage

Storage

- * View and manage your storage space

Sound

- * Set sound level for **Media**, **Alarm** and **Notification**
- * Enable/disable **Do Not Disturb** to mute sound
- * Show/hide the media player when the media session has ended
- * Set default notification sound and alarm sound
- * Enable/disable **Screen locking sound**, **Charging sounds**, and **Touch sounds** and more

Display

- * Adjust the screen brightness
- * Enable/disable the **Dark theme**
- * Turn on/off **Night Light**
- * Change the wallpaper
- * Adjust the time of entering the sleep mode
- * Turn on/off the auto-rotation of the screen
- * Adjust the font size and display size
- * Set a screen saver
- * Set what to show when the tablet is locked

Wallpaper

- * Choose wallpaper from your photos or the default wallpapers.

Accessibility

- * For vision and hearing impaired users, manage settings for **Screen reader**, **Display**, **Interaction controls**, **Captions**, **Audio** and **General**.

Security

- * Check the security status
- * Set screen lock pattern, e.g. Password, PIN, Swipe etc.
- * Choose a **Smart Lock** to keep the device unlocked if you preset a lock pattern
- * Allow the admin apps to **Find My Device** and lock or erase a lost device and more

Privacy

- * Check and set app permissions
- * Set to show/hide the password when input a password
- * Set what to show when the tablet is locked and more

Location

- * Turn on/off the location services for specific Apps
- * Set apps that have access to location
- * Check and set **Location services** and more

Passwords & accounts

- * Add and remove the google accounts, manage google passwords.

Digital Wellbeing & parental controls

- * Check your app usage based on **Screen time**, **Notifications received**, or **Times opened** from **Dashboard**
- * Manage the related notification settings to reduce interruptions
- * Set up **Parental controls** to help your kids balance their screen time and more

Google

- * Set the preferences for Google™ related services

System

- * Set Language

Tap **Languages & input** > **Languages** > **+Add a language** to add your language. After adding, hold and slide the  to the top to change the language

- * Set gestures of using the tablet

Tap System>Gestures>Navigation mode>selet Gesture navigation or 3-button navigation

- * Set the date and time
- * Turn on/off the option of **Backup**
- * Check and update the tablet's system
- * Manage multiple users and profiles
- * Restore factory setting

Tap **Reset options** > **Erase all data (factory reset)** to restore the factory setting

About tablet

 
 
- * Check the detailed information about the tablet

NETWORK CONNECTION

Wifi Connection

Go to network settings from the **Settings** App or by long pressing the Wifi icon in **Quick Settings**.

1. Tap **Network & internet** and turn on the **Internet**. All the WiFi connections available will be listed.
2. Select your WiFi and input the correct password.

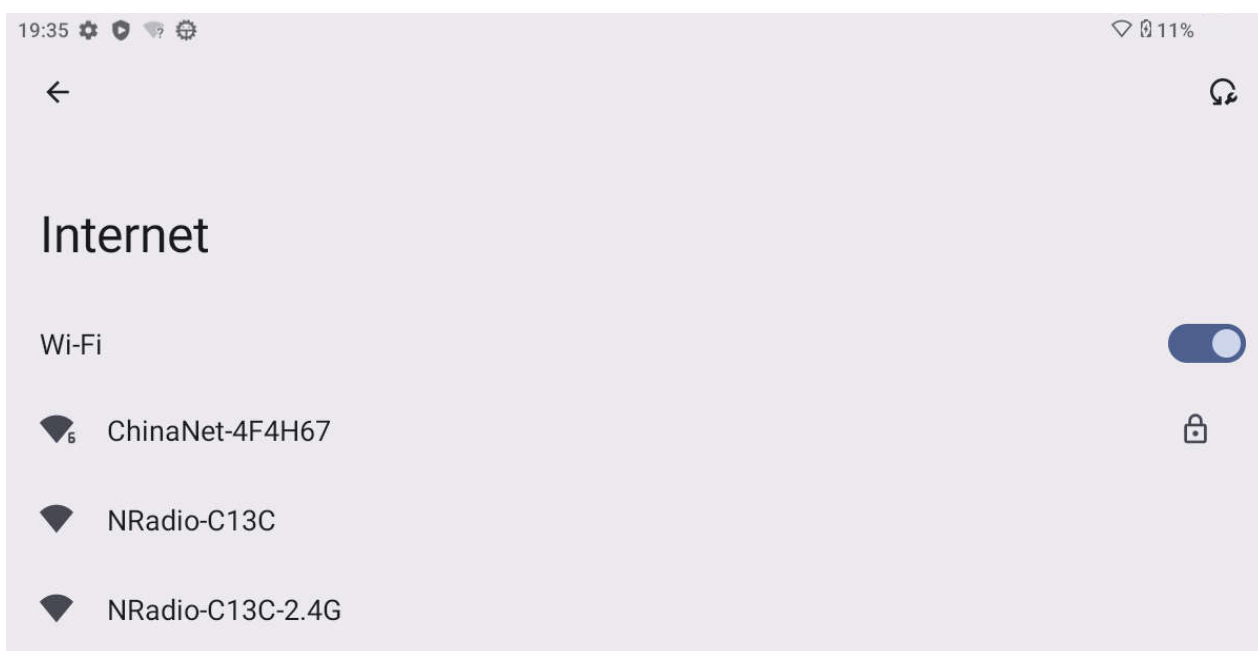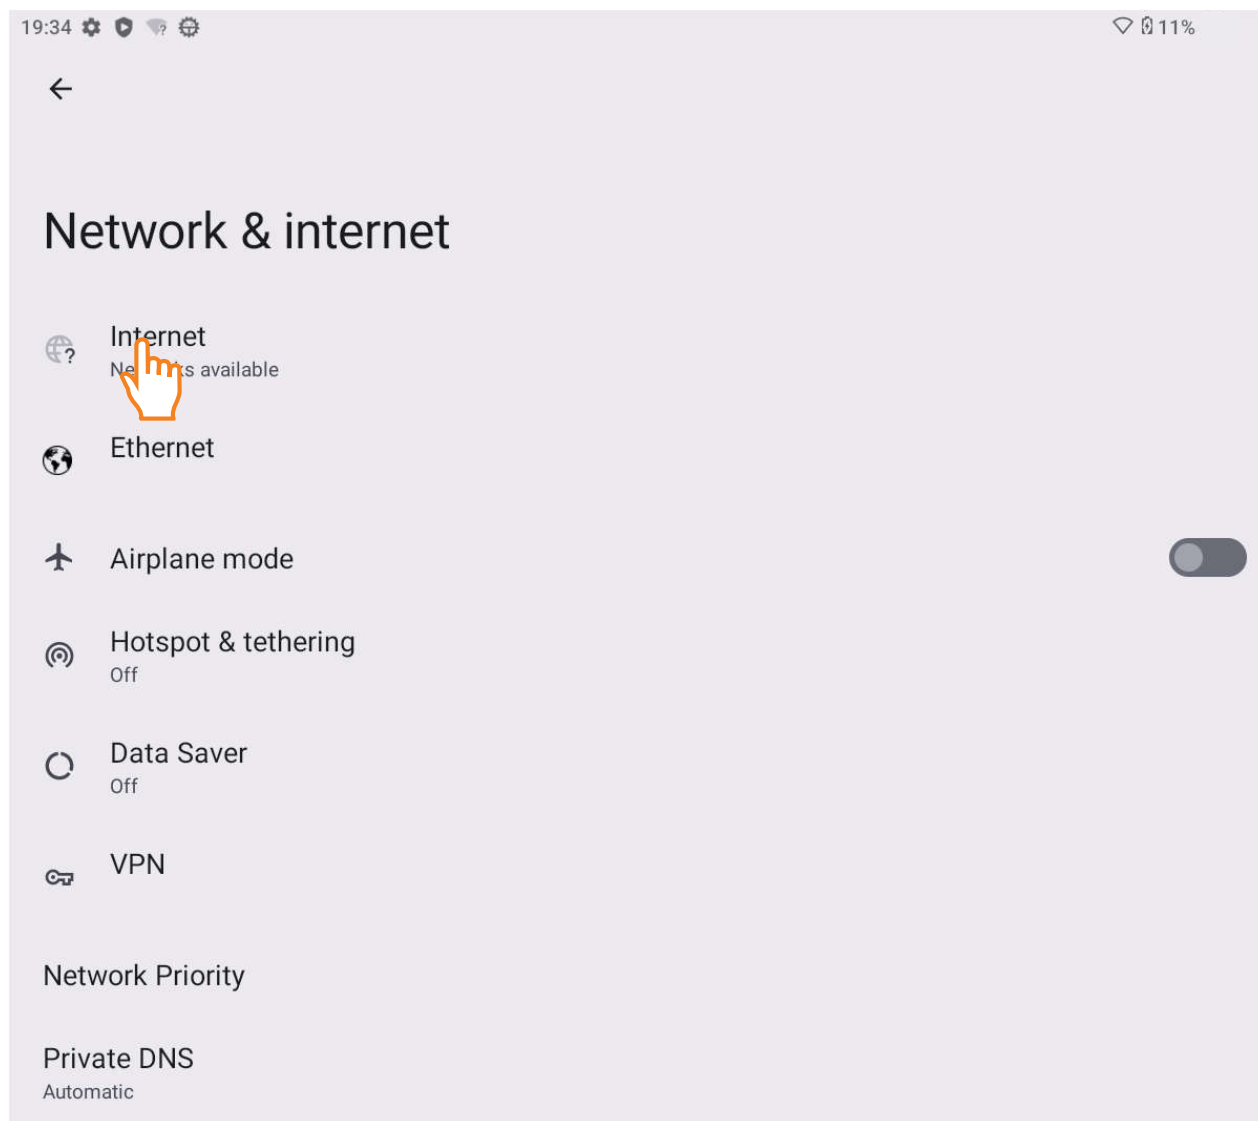

APP MANAGEMENT

App Download and Installation

1. Tap and open **Play Store** on the Home screen.
2. Log into your google account, search and download the App you need.

App Management

Move the App

Tap and hold the App, then slide it to a desired screen.

Remove the App from the Home screen

Touch and hold the App, then slide to  to remove it from your Home screen.

Uninstall the App

Touch and hold the App, then slide to the  to uninstall the App.

Clear the Cache of the App

1. Go to **Settings > Apps**.
2. Select an **App > Storage & cache > CLEAR CACHE** to clear the cache.

INTERNET NAVIGATION

Please make sure the tablet is connected to a working WiFi network before navigating the Internet.

You may use the pre-installed Chrome browser or use another browser downloaded from **Play Store**.

MULTIMEDIA

 
Connecting to a Computer

1. Connect your tablet to the computer with a USB cable.
2. **File Transfer** is the default setting. Go to your computer and find your tablet to transfer files between your tablet and computer.

Tips:

Go to **Quick Settings**, tap **USB file transfer turned on** > **Tap for more options** > **USB Preferences** to select the option preferred.

- * Select **MIDI** to play MIDI instruments on the tablet.
- * Select **PTP** to transfer photos between the devices.
- * Select **No data transfer** to charge your tablet.

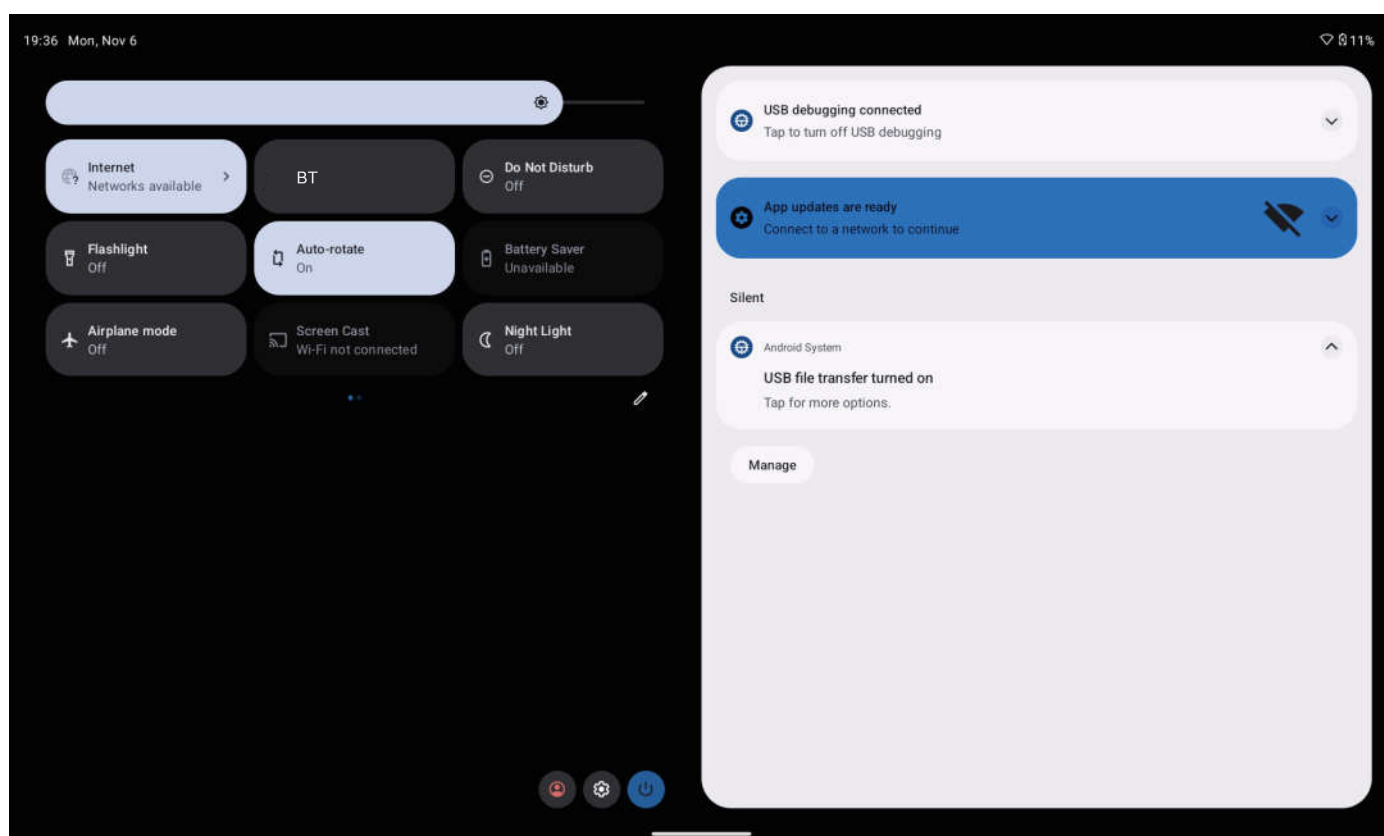

Connecting to an External Device

- 1.To insert a microSD card, gently push in the microSD card into the slot.
(side with words facing up).



- 2.Turn on the tablet, then go to Quick **Settings** > **Storage** > **SD card** to move files between the card and tablet.
- 3.To remove the microSD card,gently push in the microSD card until it 'pops' out, then pull it out carefully .

IMPORTANT: inserting and removing must only be done when tablet is turned off to avoid loss or damage to the files.

RESET/RESTORE THE TABLET

To avoid losing any data, we recommend backing up all your personal data and media on the tablet to another computer, a dedicated storage device or to the cloud server.

* If the software crashes, or the tablet stops working suddenly, you can first try turning off the tablet by pressing and holding the Power Button. Wait a few minutes, then turn on again.

* Reset using Reset Button: If this doesn't work, try a physical reset. Use a small pin or a paper clip to press the Reset Button.

Reset/Restore

* Factory Reset: To do a factory reset, go to Settings > System > Reset Options and do a 'Factory Reset'. Please note that this will DELETE ALL USER DATA.

Note: If the tablet does not turn on, you can do the factory reset as explained in 'Troubleshooting' section->'Forgot the PIN or password'.

TROUBLESHOOTING

Q1. The tablet doesn't power on.

- * Reboot your tablet after charging for more than 30 minutes.
- * Press the power button to check if the tablet is in the **Sleep Mode**.
- * Insert a pin to the **Reset Hole** to reboot it.

Q2. The tablet doesn't charge.

- * Make sure the USB cable is properly plugged into the charging port.
- * Try another compatible USB cable and adapter.

Q3. Error message occurs during the operation.

- * Uninstall the App with the error message, then download and install again.
- * Insert the pin into the **Reset Hole** to reboot it.

Q4. The tablet cannot be detected by the computer.

- * Make sure the tablet is powered on.
- * Try another USB cable.
- * Try another USB port on the computer.
- * Instead of **No data transfer**, choose **File Transfer** or **PTP** when connecting the tablet to the computer.

Q5. The tablet cannot connect to the WiFi.

- * Make sure the **WiFi** in your tablet is **ON**.
- * Make sure you input the correct password when connecting the WiFi.
- * Restart the router.
- * Make sure there is no filter setting or device connection limitation in the setting of the router.
- * Forget the current Wifi, reset the router and connect the Wifi again.

Q6. The storage space of the tablet is not enough.

- * Delete the Apps you don't use.
- * Clear the cache of the Apps regularly.
- * Install a memory card to expand the storage.

Q7. The tablet comes with scratches on the screen.

- * Check if the scratches are on the film. If yes, please remove the film.

Q8. The screen is unresponsive.

- * Check if the screen is dusty or greasy. If yes, please gently wipe the screen with a cloth to clean it.

Q9. The font size is too small to read.

- * Please go to **Settings > Display > Advanced > Font Size** to adjust the text size.

Q10. How to use your voice to search a fact?

- * Tap the microphone icon on Google Search bar, tell the tablet what you want to know and it will show you the search results.

FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

ISED Requirements

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil n' doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device has been tested and comply with IC SAR limits.

L'appareil a été testé et est conforme aux limites IC SAR.

Operation of this device in the band 5150-5250 MHz is restricted to indoor use only.

Le fonctionnement de cet appareil dans la bande 5150-5250 MHz est limité à une utilisation en intérieur uniquement.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet émetteur ne doit pas être colocalisé ou fonctionner en conjonction avec une autre antenne ou un autre émetteur.

This equipment should be installed and operated with minimum distance 0cm between the radiator & your body.

Cet équipement doit être installé et utilisé avec une distance minimale de 0 cm entre le radiateur et votre corps.

Notes:



1. High Sound Pressure
2. Hearing Damage Risk
3. Do not listen at high volume levels for long periods