 


MINI EXCAVATOR INSTRUCTIONS


Please read the instructions carefully before use and keep them in a safe place for future use.

1. Warning:

- This product is suitable for ages 6 and up.
- The car battery is not replaceable, but it is rechargeable.
- The remote control uses a replaceable CR2032 button battery. Batteries should only be replaced under adult supervision; swallowing is dangerous.
- Adult supervision is required during charging to prevent accidents, Always unplug the charger. Even if not used for extended periods, it requires charging and maintenance every two weeks.
- To prevent damage, avoid contact with water and chemicals. Do not use on soft surfaces such as blankets or sand, as this may affect speed and lifespan.

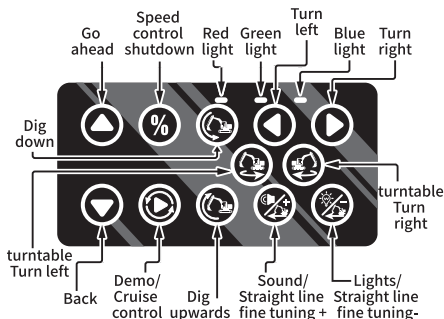

Button battery installation

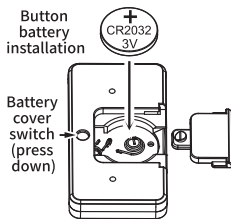


Open the remote control's battery cover, insert a 3V CR2032 button battery with the negative terminal facing down into the battery compartment, and replace the cover.

Note: When the remote control indicator light brightness decreases and the remote control distance becomes closer, please replace the remote control battery CR2032. Use a tool to press the battery cover switch to open the battery compartment, replace the battery with the same model and direction, and close the battery cover.

2. Remote control function description:

Pull the isolator upwards to activate the remote control

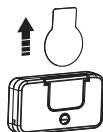


1. Key forward, Key Back, Key Turn left, Key Turn right
2. Short press or The excavator can be fine-tuned to travel in a straight line.
3. Long press Press the key for 2 seconds to turn off/on all vehicle lights.
4. Long press Press the key for 2 seconds to turn off/on the entire car sound.
5. Short press Press the key to switch to the second gear speed regulation, the green light will be on at low speed and the red light will be on at high speed.
6. Long press Press the key for 2 seconds to turn off the remote control, and press any key to turn it on.
7. Long press key for 2 seconds to enter the automatic demonstration, and press any key to exit the automatic demonstration.
8. Short-press the button to enter cruise control mode. The blue light will illuminate. A second short-press will reset the current gear. There are 5 fixed speeds.
 - ① Initially, the speed is in 0 gear with no power. Press the button to increase speed and the button to decrease speed. When the gear reaches the top, the blue light will flash three times.
 - ② Press the button to cancel cruise control.

9. App remote control distance is about 10M (the remote control distance will be affected by different models of mobile phones and the location). / Remote control distance $\leq 15M$ (the remote control distance will be affected by different locations).

A. ① Excavator function diagram


1. Short press  Key Dig down

 Short press  Key Dig upwards

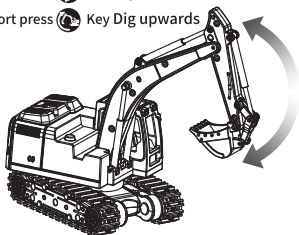

2. Short press  Key turntable
Turn left

 Short press  Key turntable
Turn right

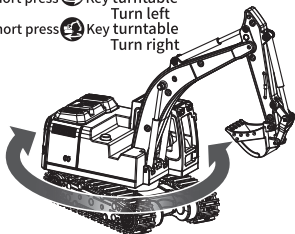

10. When the battery is low, all lights will flash rapidly and the vehicle will slow down, then shut down after about 50 seconds (please recharge immediately if the battery is low).

11. Lights will flash slowly when the vehicle is not paired. They will also flash slowly when the vehicle is in motion or if the vehicle loses frequency control beyond the distance of the remote controller.

 
12. After 3 minutes of inactivity, the vehicle will enter sleep mode and require a power cycle.

13. The center indicator light will illuminate while the vehicle is charging and dim when charging is complete. The charging process requires adult supervision. Unplug the charger once the vehicle is fully charged to prevent accidents.

14. The charging port is a Type-C charger that is compatible with common mobile phone chargers but does not support fast charging. The rear lights will flash when the vehicle is in reverse.



1. Do not swing the digging arm by hand (it is easy to be damaged)

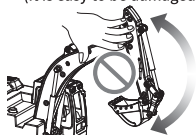

2. It is forbidden to turn the turntable by hand or put your hands on the turntable during operation (it is easy to cause damage or accidents)



3. It is forbidden to push the track by hand, touch the track during operation, or remove the track (it is easy to cause damage or accidents)

 


B. ② Excavator function diagram

Short press the power button to turn on the device, and long press it for 3 seconds to turn off the device.

Charging indicator light

Type-C charging port

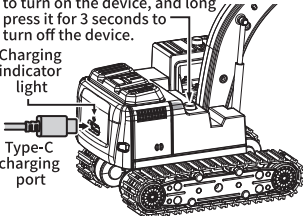

C. Mobile APP Introduction



iPhone: Search for the RC Car model on the App Store and download it, or scan the QR code using your browser to download.

Android phones: Scan the QR code using any browser to download and install.

Note: When using the mobile app to control the car, please turn off the remote control to prevent it from interfering with the app.