

INSTRUCTIONS

AGES 3+

Thank you for using our company's toy products. In order to have a better understanding of this product, please read the following instructions before use, which will bring you a different operating experience.


NOTE

This product is suitable for children 3 years old and above. After assembled / charged by adults, play with children again.
Please Use This Product Under The Supervision Of An Adult.
Warning: please do not disassemble or modify the product without authorization, any changes may cause the product to not work properly.


SPECIAL WARNING:

The used output power of charging plug should be 5V. Please do not use the quick-charging plug and quick-charging cable, so as to avoid the condition that the too quick current output during charging causes overheated battery charging and results in dangerous matters such as product burnout.

Product Configuration

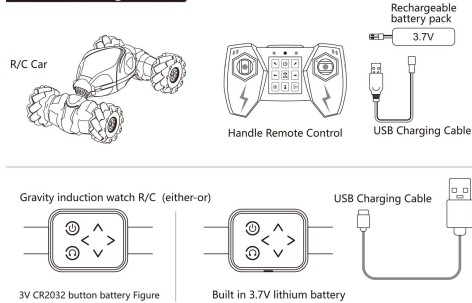


Car Battery Installation

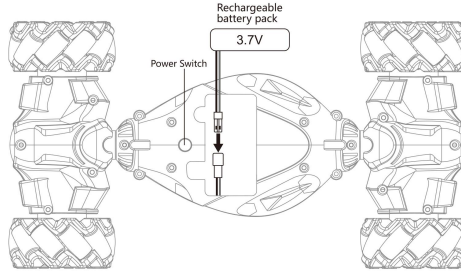


Battery installation
Open the body battery cover, Connect the rechargeable battery pack to the power socket, Close the battery cover.

Battery Charging Mode

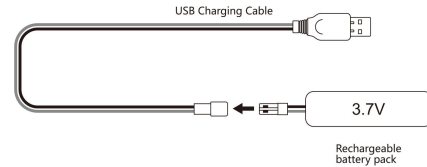


1. Connect the Rechargeable battery pack to the USB charging cable
2. Plug the other end of the USB charging cable into the USB port for charging

R/C Function introduction and battery installation

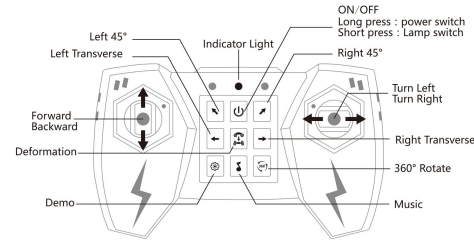

 1. Press down the "Demo" key: the R/C car enters the automatic demonstration mode; press any key to exit from the automatic demonstration mode.
2. Press down the "Music" key: Press the first time to play the engine sound, Press the second time to play music, Press for the another music a third time, and press the fourth time to stop the music.
3. The effective control distance of the handle remote controller is about 40m.



Battery installation

Open the body battery cover and install 2x 1.5V "AA" non-rechargeable batteries in the right polarity direction and cover the battery cover. (Battery not included)

Function introduction of remote controller of gravity induction Watch

ON/OFF
Long press: power switch

 

Short press: Lock all function, All lights are on at the same time.

Short press again to release, Light 2 and Light 3 are on.

Function Conversion

Long press: Enter automatic presentation mode (Press any key to exit)
Short press: Enter mode two (Press any key to exit)

The effective control distance of the gravity induction watch remote controller is about 35m.

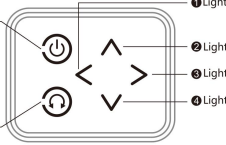

TIPS

When the car moves, please do not touch the wheels of the remote control car, so as to avoid injury.

Maintenance Matters

Battery charges that use this toy must be repaired regularly to prevent damage to the wires and other components and, if damaged, must be replaced for safety.

Instructions


Symptoms	Cause Or Issue	Approach
Vehicle Can Not Drive	1. The remote control is not connected or the battery is low. 2. The remote control car switch is not turned on. 3. The rechargeable battery power is low.	1. Turn on the control car and connect again. 2. Charge the battery pack correctly. 3. Charge the battery pack.
Abnormal Protect	When the function of the remote control car is short-circuited, the circuit battery is short-circuited.	1. Replace the battery inside the remote control car with a new battery or charge the rechargeable battery pack. 2. Change the venue.
Control within a certain distance	1. There is not enough power in the remote control battery or rechargeable battery pack. 2. The controller or the car does not load the power protection.	1. Replace the battery inside the remote control car with a new battery or charge the rechargeable battery pack. 2. Change the venue.

General Trouble Shooting

To The Consumer

RF exposure statement
This equipment complies with the FCC RF exposure limits set forth for an uncontrolled environment. This equipment must not be co-located or operated in conjunction with any other antennas or transmitters. **RF exposure statement**
This equipment complies with the FCC RF exposure limits set forth for an uncontrolled environment. This equipment must not be co-located or operated in conjunction with any other antennas or transmitters. **NOTE 2:** Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

1. When playing remote control car indoors, please be careful not to damage furniture or glass.
2. Please play outside in a safe place. Do not play remote control car in the road and the crowd.
3. Play remote control car after playing with dirt, dust must be gently wiped with a damp cloth.
4. Do not put the toy in the water, it will damage the electronic components.
5. Do not drive the remote control car, please keep it away from fire and high temperature.
6. Do not throw the remote control car, please keep it away from fire and high temperature.
7. When playing remote control car, please keep it away from fire and high temperature.
8. The car uses a complex electronic circuit and a large number of components, please do not disassemble or modify the circuit board.
9. Replace the battery inside the remote control car with a new battery or charge the rechargeable battery pack.
10. Do not put the toy in the water, it will damage the electronic components.
11. The handle remote control and watch remote control cannot be synchronized at the same time. If you want to replace the other handle remote control or watch remote control, you must turn off the already synchronized remote control and the car power supply, and then re-synchronize the frequency.

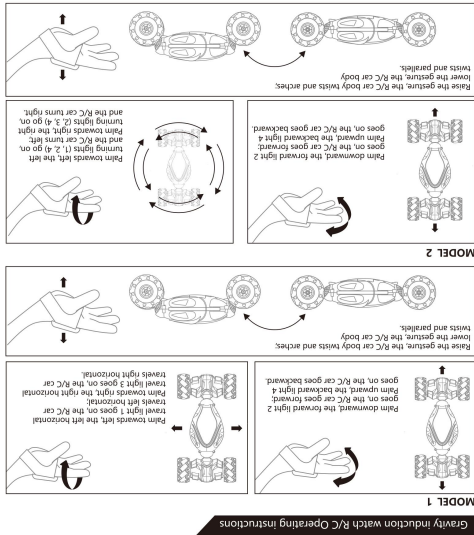


1. Long press the power switch of the gravity remote controller to start the frequency alignment. When the frequency alignment succeeds, the light 2 and light 3 of the remote controller go on. In case of no operation, the sleep mode starts one minute later.
2. When the frequency alignment fails, the light 1 and light 4 of the remote controller flash continuously. When the frequency alignment fails, please repeat the above operations.
3. If there is no operation after connection frequency, the remote control car and the remote control enter the sleep mode, and the frequency needs to be re-linked.

Gravity sensing watch remote control battery description


- 2 Gravity Induction remote controls (Operate as shown below)
1. Built in 3.7V lithium battery 2. 3V CR2032 button battery

 BUILT-IN BATTERY CHARGING



1. Connect the Gravity Induction R/C to the USB charging cable
2. Plug the other end of the USB charging cable into the USB port for charging

 INSTALL THE BATTERY



Open the battery cover, Install 3V CR2032 button battery, Close the battery cover.

PRECAUTIONS FOR BATTERY USE

- * Before playing please charge the new battery pack.
- * The output power of charging plug is 5V;
- * The higher the actual milliampere of the rechargeable battery, the longer the charging time;
- * Rechargeable batteries can only be charged under adult supervision;
- * During charging, the light of the USB charging cable head is on red. When the light goes out, it indicates that the lithium battery is fully charged. The charging time is 3-4 hours.
- * First plug the battery pack plug in the charger, then plug the charger plugged in the socket.
- * Take out and put in the battery according to the mark on the toy battery room;
- * Non-rechargeable batteries cannot be charged;
- * Use only the same or identical battery as recommended;
- * Do not mix-use old and new batteries or different types of batteries;
- * Batteries should be placed in the correct polarity;
- * Remove the exhausted battery from the toy;
- * Power terminals should not be short-circuited;
- * The charger must be checked regularly for damage to its wires, plugs, housings and other components. If damage is found, stop using the charger until it is repaired.

Handle Remote Control Operating instructions

1. First, turn on the power switch of the automobile body. The light of the automobile body flashes.
2. Then, turn on the power switch of the remote controller, and the frequency alignment starts.
3. If there is no operation after connection frequency, the remote control car and the remote control enter the sleep mode, and the frequency needs to be re-linked.