

100 mm

90 mm



01 开机动画

- A. 首次开机时候有动画进行
B. 首次开机用按键长按 3 秒开启;
C. 设置里选择语言和主题风格;



 
02 表盘设置

- A. 左右选择锁屏画纸 (也就是表盘选择); (共有 3 张图片)
B. 停留在当前图片, 点击图片即为选择了当前图片。



03 音乐控制功能

- A. 控制上下曲、播放暂停;
B. 歌词同步显示功能 (可以看到手机设备播放软件播放的歌曲的歌词, 这里请注意的一点, 是需要设置播放器的“车载 play”或者是上传歌词功能, 请针对不一样播放器做一定的设置, 方可使用。);

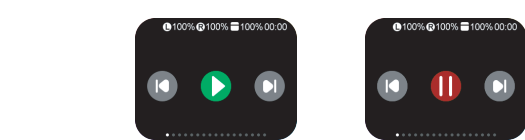

04 均衡器功能

- 注: 耳机连上了仓才能选择
A. 左右滑动可以选择不一样的 5 种特定 EQ 音效



 
05 空间音频功能

- 注: 耳机连上了仓才能选择
A. 音频模式 B. 游戏模式



06 查找耳机功能

- 耳机连上了仓才能选择
A. 可以查找 L 左耳, R 右耳;
B. 进入了 L 或者 R 后, 进入查找响应界面 (图标提醒要在耳机不在耳朵上使用此功能, 避免不舒适感);

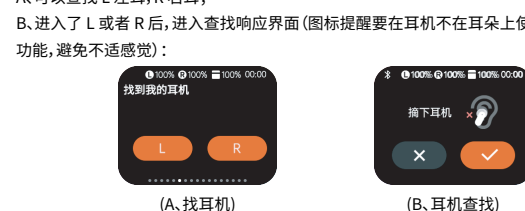

07 通话界面功能

- 耳机连上了仓并且连上了手机才能显示
A. 电话提醒功能: 当耳机连上手机, 仓内显示, 此时来电显示如图
B. 电话呼叫中显示界面
C. 通话中显示界面



08 语音助手/自拍器功能

- A. 进入到这个界面, 然后点击中间麦克风图标, 进入打开手机语音助手, 进行语音控制;
B. 自拍器功能 (需要耳机仓并连上手机才能使用—有一定手机品牌和版本的兼容性情况) 留在拍照界面, 短按屏幕中的照相机, 会出现照相机启动动画 (PS: 手机端需要进入到拍照界面, 这样才有拍照功能; 正常手机端未进入拍照模式时候, 按仓的拍照会启动手机端的音量 - 功能; 或者有部分手机会呈现其他功能, 请知悉。);



 
09 亮度调节/计时器功能

- A. 总共 3 档的亮度调节 (通过 + 和 - 进行调节)
B. 左右按钮选择时间, 可选择 5-10-15-20-25-30-60 分钟, 点击下方按钮即可开始计时;



10 耳机按键功能

- 🔊 开/关机
开机: 长按触摸 3 秒
关机: 长按触摸 5 秒, 主/副耳
🔊 音量调节
音量加: 三击右声道加音量
音量减: 三击左声道减音量
🔄 切换上/下曲
下一曲: 双击右声道切换歌曲
上一曲: 双击左声道切换歌曲
🗣️ 语音助手
长按 2s 任意声道唤醒语音助手
📞 来电状态
接听/挂断: 单击接听, 通话中单击挂断电话
拒接来电: 长按左/右声道 2 秒拒接电话
🔄 中英文切换
长按手机双击功能键即可切换中英文

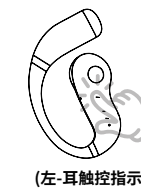

11 LED 灯闪烁

- 蓝灯闪烁:
1. 开机
■ 红灯闪烁:
1. 配对中
■ 白灯常亮:
1. 充电中
■ 不闪灯:
1. 关机 2. 连接成功 3. 音乐播放 4. 音乐暂停 5. 来电 6. 通话中 7. 低电量 8. 充满电

12 参数展示

配对名称	LX-90	产品类型	挂耳式耳机
芯片版本	V5.4	播放时长	约 4-5H
喇叭尺寸	φ12	频率响应	20Hz-20kHz
耳机电池容量	45mAh	充电时间	0.5-1H
充电方式	顶针接触	待机时间	约 120H

■ 智能屏参数

屏幕尺寸	2.4 寸	屏幕分辨率	240*320
电池容量	600mAh	充电方式	TYPE-C
喇叭尺寸	1712		

13 耳机注意事项

- 请勿以任何理由拆开、维修或改装耳机, 否则可能会导致起火、电子击穿甚至彻底损坏本产品。
- 请勿将产品置于温度过低或过高 (0°C 以下或 45°C 以上) 的环境下。
- 请勿在雷雨天气使用本产品, 雷雨天气可能会导致设备故障或电击危险。
- 请勿使用腐蚀性化学品、清洗剂或强洗涤剂清洗设备或其配件。
- 请勿将设备靠近热源或裸露的火源, 如电暖器、微波炉、烤箱、热水器、炉火蜡烛或其他可能产生高温的地方。
- 请勿长时间大音量听音乐会造成听力损害, 使用该设备时请调整到适当音量。
- 请勿自行更换电池, 本设备配有不可拆卸的内置电池, 以免损坏电池或设备。不建议私自更换。
- 清洁和维护前, 请停止使用本设备, 关闭所有应用, 并断开与其他设备的所有连接或线缆。

14 屏幕注意事项

- 操作按钮或触摸屏: 请按说明书中的指示正确操作按钮或触摸屏, 避免错误操作。
- 显示内容: 显示屏可以显示各种信息, 包括来电通知、音乐播放状态、电池电量等。请确保了解屏幕上显示的各种信息的含义和操作方法。
- 屏幕保护与维护: 为了保护屏幕免受划伤和损坏, 建议避免在尘土或潮湿环境中使用耳机。请使用柔软的布清洁屏幕, 并避免使用含有化学成分清洁剂。
- 电源状态指示: 显示屏通常会显示电池电量、连接状态等信息。请注意屏幕上显示的相关指示符号或图标, 以便了解耳机的当前状态。
- 避免用力过度造成损坏
在将耳机存放或携带时, 请注意避免将重物或压力施加在显示屏区域, 以免导致屏幕损坏或压碎。并确保屏幕不会受到外部压力或碰撞影响。

15 禁止

- 禁止拆解、撞击、挤压电池或投入火中、插入异物, 以免引起电池漏液过热、起火或爆炸。Reorient or relocate the receiving antenna.
- 本设备并非玩具, 儿童应在成人监护下使用本设备配件要求。
- 若出现严重肿胀禁止继续使用。
- 禁止置于高温环境中, 远离火源。
- 电池浸水或其它液体中后禁止使用。

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

100 mm

90 mm



 
01 Boot animation

- A. Animation is going on during the first boot
B. Press the key for 3 seconds for the first time to start the machine.
C. Select the language and theme style in the Settings;



02 Dial setting

- A. Slide left and right to select the lock screen drawing (that is, the dial selection); (3 images in total)
B. Stay in the current picture and click the picture to select the current picture.

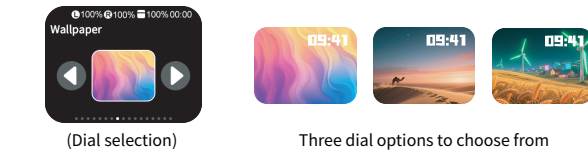

03 Music control function

- A. Control up and down songs, pause playback;
B. Lyrics synchronous display function (You can see the lyrics of the songs played by the mobile device playback software. Please note that it is necessary to Set up the "car play" or lyrics upload function for the player, please make certain settings for different players Can be used。);



04 Adaptive equalizer

- Note: Only when the earphones are connected to the compartment can they be displayed
A. Swipe left and right to select different 5 specific EQ sound effects



05 Space audio function

- Note: Only when the earphones are connected to the compartment can they be selected
A. Audio mode B. Game mode



 
06 Search for headphone features

- The earphones can only be selected after being connected to the compartment
A. You can search for L left ear and R right ear;
B. After entering L or R, enter the search response interface (icon reminder to use this when the headphones are not on the ear) Function to avoid discomfort;



07 Call interface function


- The earphones need to be connected to the compartment and the phone before they can be displayed
A. Telephone reminder function: when the headset is connected to the mobile phone, it will be displayed in the warehouse, and the incoming call will be displayed as shown in the figure
B. Display interface in telephone call
C. Display interface during the call

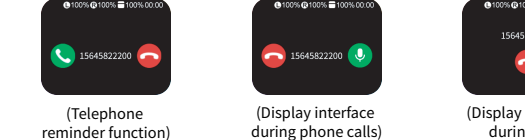

08 Voice assistant/self-timer function

- A. Enter the interface and click the middle microphone icon to open the voice assistant of the phone for voice control;

 - B. The function of the self-timer (only when the headset is connected and the phone is connected - there is a certain compatibility of the phone brand and version) is left in the camera interface. Press the camera on the screen, and the camera swing animation will appear (PS: the mobile phone needs to enter the camera interface, so as to have the camera function; When the normal mobile terminal does not enter the photo mode, shooting by the warehouse will start on the outgoing - function of the mobile terminal; Or some phones will display other functions, please be aware.);



09 Brightness adjustment/timer function

- A. a total of 3 levels of brightness adjustment (through + and - adjustment)
B. The left and right buttons select the time, you can choose 5-10-15-20-25-30-60 minutes, click the button below to start the timing;



10 Headphone button function

- 🔊 On/Off
Power on: Long press the touch button for 1.5 seconds
Shutdown: Long press the touch button for 3 seconds, main/secondary ear

🔊 modulation

- Volume up: Three clicks on the right channel to increase volume
Volume reduction: Three clicks on the left channel to reduce volume

- 🔄 Click on the left/right ear to play pause music
Next track: Double click on the right channel to switch songs
Previous track: Double click on the left channel to switch songs
🔄 Play/Pause
Click on the left/right ear to play pause music
🔄 Click on the left/right ear to play pause music
Long press any channel for 2s to wake up the voice assistant
📞 Incoming call status
Answer/Hang up:
Click on answer, during call, click on hang up
Reject call: Long press the left/right channel for 2 seconds to reject the call
🔄 Switching between Chinese and English
Double click the function key on an unconnected phone to switch between Chinese and English



12 Parameter display

Pairing Name	LX-90	Product type	Hanging earphones
Chip version	V5.4	Playback duration	Approximately 4-5H
Drive Unit	φ12	Frequency response	20Hz-20kHz
Earphone battery capacity	45mAh	Charging time	0.5-1H
Charging method	Thimble contact	Standby time	Approximately 120H

■ Smart screen parameters

Screen size	2.4 in	Inch screen resolution	240*320
Battery capacity	600mAh	Charging method	TYPE-C
Drive Unit	1712		

13 Earphone precautions

- Do not disassemble, repair, or modify headphones for any reason, as this may cause fire, electronic breakdown, or even completely damage this product.
- Do not place the product in an environment where the temperature is too low or too high (below 0 °C or above 45°C).
- Do not use this device in thunderstorm weather as it may cause equipment malfunction or electric shock hazards.
- Do not use strong chemicals, cleaning agents, or strong detergents to clean equipment or its accessories.
- Do not place equipment near heat sources or exposed sources of fire, Such as electric heaters, microwaves, ovens, water heaters, or stoves candles or other places that may generate high temperatures.
- Please do not listen to music at high volume for a long time, which may cause hearing damage. When using this device, please adjust the volume to the appropriate level.

7. Do not replace the battery by yourself. This device is equipped with a non removable built-in battery to avoid damaging the battery or device. It is not recommended to replace without authorization. Before cleaning and maintenance, please stop using this device, close all applications, and disconnect all connections with other devices connection or cable.

14 Screen precautions

- Operate buttons or touch screens: Please follow the instructions in the manual to accurately operate buttons or touch screens and avoid incorrect operations.
- Display content: the display can display a variety of information, including call notification, music playback status, battery power and so on. Make sure you understand what the various information displayed on the screen means and how to operate it.
- Screen Protection and Maintenance: To protect the screen from scratches and damage, it is recommended to avoid exposure to dust or humid environments Use headphones Please use a soft cloth to clean the screen and avoid using cleaning agents containing chemicals.
- Power status indicator: The display screen usually displays information such as battery level and connection status. Please pay attention to the information displayed on the screen Relevant indicators or icons to understand the current status of the headphones.
- Avoid prolonged use of the screen under strong light to avoid affecting the display effect. Please lightly press the screen during operation. Avoid excessive force causing damage.
- Storage precautions: When storing or carrying headphones, please be careful not to apply heavy objects or pressure to the display screen Area to prevent screen damage or crushing. And ensure that the screen is not affected by external pressure or collisions.

15 Prohibit

- It is prohibited to disassemble, impact, squeeze the battery, or put it into fire or insert foreign objects to avoid causing battery leakage and overheating ignite or explode. The accessories for this device are required.
- This device is not a toy and children should use it under adult supervision.
- If there is severe swelling, it is prohibited to continue using.
- Do not place in a high-temperature environment and keep away from sources of fire.
- Do not use the battery after immersion in water or other liquids.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.