

## M60 Spaceship Bluetooth® Sound System

Our company reserves all patents, trademark copyrights and other intellectual property rights. If the functional parameters of the product are changed without prior notice, please submit to the entity.

### Product parameters:

|                               |                    |                         |               |                           |                 |
|-------------------------------|--------------------|-------------------------|---------------|---------------------------|-----------------|
| Product name:                 | spaceship BT sound | Model:                  | M60           | Product material:         | ABS+PC+silicone |
| Audio frequency output power: | 2*5W(RSM)          | Stereo channel:         | 2.0           | Frequency response range: | 50Hz~16KHz      |
| Frequency response range:     | 50Hz~16KHz         | BT version:             | Jerry 5.1+EDR | Frequency 2+2:            | 48KHz           |
| Charging output voltage:      | DC4.8-5V(700mA)    | TF card support format: | MP3/WAV       | Charging input voltage:   | DC 5V~15A       |
| Battery capacity:             | 3.7V/1850mAh       | Bluetooth battery:      | 3000mAh       | Color:                    | white           |


Product functions: Wireless BT sound, BT hands-free calling, clock display, Alarm clock setting, RGB night lamp, card playing, FM radio, USB sound card

Reception distance: 10M-15M (barrier-free reception distance, reception distance a little difference due to different environment)

(Note: the above configuration data will be continuously improved according to the master control upgrade, the details are subject to the entity)

### Packaging accessories

The package include  
**Spaceship BT sound**\*1, **Manual**\*1, **Maintain warranty card**\*1, **Qualified certificate**\*1  
**TYPE-C-USB power supply data wire** x1

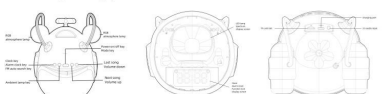

### Chapter 1: Product function keys instruction

#### 1. Function key introduction and operation:

##### 1. Button on/off:

Long time press **[ ]** key to turn on. After hearing the start machine remind sound, the product starts to work, and the default BT mode. If the BT search does not pairing the mobile phone within 10 minutes, BT will enter low power consumption mode, and you need to simply click **[ ]** key to activate the BT search state. Long time press the **[ ]** key to shut down. (Double click **[ ]** key to shift between Chinese and English voices)

##### 2. Key on/off RGB atmosphere lamp (four gears color regulating)

Under the power on status, short time press the **[ ]** key and shift to the RGB color change, long time press the button **[ ]** key to turn off/on the backlight

##### 3. Clock setting key

Long time press the **[ ]** key to enter the clock adjustment. When the number on the screen flashes, adjust the clock number by short pressing **[ ]** or **[ ]** keys, then short time press the **[ ]** key to enter the minute setting. Short time press **[ ]** or **[ ]** key to adjust the minute number, and long time press **[ ]** hold to confirm the setting.

##### 4. Alarm clock setting key

Long time press the **[ ]** key to enter the clock settings interface. When the number on the screen flashes **[ ]** to enter the alarm clock adjustment mode. The alarm symbol will flash. At this time, the **[ ]** key to enter the minute setting. Through short time press **[ ]** or **[ ]** key to adjust the clock number, then short time press the key again **[ ]** to the right to adjust the number of minutes **[ ]**, and long time press the alarm clock key to confirm the setting.

### 2. Alarm clock double click settings: when the alarm clock is turned on, quickly double click the alarm clock key, and the alarm clock will disappear, that is, the alarm clock mode is turned off.

(This product is set to wake up the alarm clock twice. When the alarm clock sounds, if you don't turn off the alarm clock manually, it will alarm again within 5 minutes)

### The ampersand + key =

Long time press **[ ]** the volume up, long time press the = volume down, and short time press the key to = go up a short song. Short time press key to = next song

### 2.TF card extends MP3 music playing

The first step is to confirm that the memory card is +3.0G. The memory format is preferably FAT32 bit format, the built-in ones are in MP3 format. Insert the TF card into the card slot, and wait for the system to recognize and play songs

### 3. Wireless on BT playing

After start machine, the default state without a TF card in BT mode, you also can shift to BT mode manually through short time pressing the M key Connection: open the mobile phone and open the phone's BT search and select the BT device "M60 Smart BT" pairing. After successful pairing, a connection prompt will show, indicating that the BT connection is successful and music on the BT device can be played normally.

### 4.FM radio settings

Short time press **[ ]** key to shift to radio mode, then short time press **[ ]** (alarmclock key) to enter the FM automatic search state, automatically save the radio after the search is complete, and press the **[ ]** and **[ ]** keys to select the radio (note: when the station cannot be searched, please plug in the charging cable; using the charging cable as an FM radio antenna)

### 5.TWS coupling mode:

If two devices are turned on at the same time, they will automatically connect, and a prompt will be displayed if the connection is successful (connected to the box)

### 6. Charging indicator lamp:

when charging, the battery icon normally lighting; when fully charged, the battery icon turns off

### Chapter III Troubleshooting

#### 1. Multiple connections and unsuccessful pairing

Turn off the FM search and turn the mobile phone on, and make sure the connection name is: M60 Smart BT Sound

#### 2. The sound is interrupted when playing music

A. Whether the connection distance is out of range or there is an obstacle between the sound box and the mobile phone;  
 B. Whether the mobile phone network is smooth and whether the sound box battery power is low.

#### 3. Play silently

Check if the sound box is at its lowest volume (long time press the **[ ]** key to adjust the volume)

#### 4. Unable to start machine

Check if there is electricity, plug in the USB charging cable, charge for 2 hours and try again

#### 5. Occurred machine problem

Find a pin and gently plug it into the audio port to reset and restart to solve the device machine problem

### Chapter 4: Charging Instructions

Please use a standard configuration or equivalent parameters power adapter to charge the sound box

b. When the power level of the product is low or insufficient during use, it should be charged as soon as possible

c. Do not use this device under high temperature and pressured.

d. When not in use for a long time, it is recommended to charge the sound box once a month to ensure sufficient battery power and normal use of the sound box when needed!

### Chapter 5: After-sales Service Instructions

Dear users, thank you very much for using our products. In order to effectively protect your rights and interests, make it clear that distribution agents and companies should assume responsibility for product maintenance, replacement, and return (simply called three guarantees), please read the following matters:

- According to the three-guarantee principle of who sells and who is responsible for product quality issues, contact the dealer with a warranty card, and the dealer provides service to the customer, while our company provides service support to the dealer;
- The company promises that from the date of sale (the date is subject to the valid receipt and order date on the online platform), if there is a quality problem within 7 days, the customer can choose to return the product for replacement and repair, the customer can choose to return it for three months (no damage to the appearance), and within one year, the customer can enjoy free maintenance (the customer bears the corresponding transportation costs). If the warranty exceeds the scope of the warranty and quality problems occur, each after-sales agent will only charge the cost of materials and transportation costs;
- You will not be eligible for the three guarantees service in the following situations,
  - Which exceeds the three-guarantee period
  - Which is not used in accordance with the requirements of the instructions and is damaged due to improper operation
  - Crash embossed by itself, making it unusable
  - Caused by force majeure

### Chapter 6: Safety Guidelines

- If consumers use a power adapter for power supply, they should also use a power adapter that has obtained conventional certification and meets the requirements of relevant standards.
- The product has a built-in lithium battery, which is not replaceable, and should not be thrown away or placed in a fire to avoid damage.

The final interpretation of the above content belongs to the Company

Qualified Certificate

Inspectors: 

**CCC Attention:**  
 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.  
**NOTE:** The manufacturer has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. This equipment does not produce, use, or radiate radio frequency energy and, therefore, it does not interfere with other radio frequency devices. This equipment does not receive radio frequency energy, therefore, there is no guarantee that interference will not occur in a particular location.  
 If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures:  
 • Reorient or relocate the receiving antenna.  
 • Increase the separation between the equipment and receiver.  
 • Connect the equipment to an electrical outlet on a circuit different from that to which the receiver is connected.  
 • Consult the dealer or an experienced radio/TV technician for help.  
 The device has been reviewed to meet general FRP software requirements. The device can be used in portable operation condition without restriction.

### M60 太空船AI智能蓝牙音响

我司保留所有专利、商标版权及其它知识产权  
产品功能参数如果变更，恕不另行通知，产品以实物为准

**产品参数：**

|       |                                              |         |             |          |          |
|-------|----------------------------------------------|---------|-------------|----------|----------|
| 产品型号： | 太空船AI智能蓝牙音响                                  | 频段范围：   | 50Hz-16KHz  | TF卡支持规格： | MP3 WAV  |
| 产品尺寸： | 100mm*100mm*45mm                             | 蓝牙版本：   | 4.2         | 充电电压输入：  | DC 5V±1A |
| 产品重量： | 150g                                         | 蓝牙功率：   | 2.4-2.48GHz | 充电电压输出：  | 5V       |
| 产品材质： | ABS+PC+硅胶                                    | 蓝牙传输距离： | 100m        | 充电电压输入：  | DC 5V±1A |
| 产品颜色： | 白色                                           | 蓝牙传输速率： | 12.5-24Mbps | 充电电压输出：  | 5V       |
| 产品接口： | AUX接口 无线蓝牙接口 蓝牙充电接口 时钟显示 闹钟设置 网络接口 红外接口 TF卡槽 | 蓝牙传输距离： | 100m        | 充电电压输入：  | DC 5V±1A |
| 产品配件： | 充电线 说明书                                      | 蓝牙传输速率： | 12.5-24Mbps | 充电电压输出：  | 5V       |

**包装内容：**

太空船蓝牙音响\*1 用户使用手册\*1 保修卡\*1  
合格证\*1 TYPE-C-USB数据数据线\*1



### 第一章：产品功能键说明

#### 1.功能键介绍与操作：

【**键**】开/关机：

长按**键**【**键**】开机，听到开机提示音后产品开机，并默认蓝牙模式，蓝牙搜索10秒内不配对成功，蓝牙将进入低功耗模式，需单击**键**唤醒蓝牙搜索状态。长按**键**【**键**】关机。（双击**键**可以切换至中文语音）

【**键**】开/关RGB氛围灯（四档调色）

开机状态下，依次短按**键**【**键**】切换RGB变色，长按**键**【**键**】开关关灯

【**键**】时钟设定

长按**键**【**键**】进入时钟设置界面，当显示屏闪烁时，通过短按**键**【**键**】或**键**【**键**】进入分钟设置，短按**键**【**键**】或**键**【**键**】进入小时设置，短按**键**【**键**】或**键**【**键**】确认设定。

【**键**】闹钟设定

长按**键**【**键**】进入时钟设置界面后，再短按（两下**键**）可进入闹钟设置模式，此时显示屏闪烁，此时短按**键**【**键**】或**键**【**键**】通过短按**键**【**键**】或**键**【**键**】输入数字，再短按**键**【**键**】或**键**【**键**】切换到右闹钟分钟数字短按，长按**键**【**键**】闹钟确认设定。

【**键**】闹钟关闭设定：在开机状态下，快速双击闹钟键，闹钟图标消失，即为闹钟模式关闭。  
（本产品设定了闹钟2次唤醒功能，当闹钟响起，若手动关闭闹钟会在5分钟内再响一次）

### 第二章：产品使用指南

#### 2.1.快速入门

**2.1.1.快速入门MP3播放：**第一步，请确认内存卡是1-32G（内存格式最好是FAT32位格式），内置是MP3格式歌曲，将TF卡插入卡槽，手机会自动识别并播放歌曲。

**2.1.2.无线蓝牙播放：**开机后，不插TF卡状态默认为蓝牙模式，也可以通过打开手机蓝牙功能到设备蓝牙连接：打开手机并开启手机蓝牙搜索并选择连接设备“M60智能蓝牙音响”进行配对，配对成功后会发出连接提示音，表示蓝牙已连接成功，可以正常的播放音乐。

**2.1.3.FM收音机设置：**

短按**键**【**键**】切换到收音模式，再短按**键**【**键**】（闹钟键），进入FM自动搜台，搜台完成后自动保存电台，按**键**【**键**】选择电台（备注：搜不到台时，请插入充电线，充电线为FM收音天线使用）

**2.1.4.蓝牙配对模式：**两台同时开机，会自动连接，连接成功会提示（对箱已连接）

**2.1.5.充电指示：**充电时，电池图标点亮；充满电，电池图标熄灭。本产品是一款AI智能音箱，下载小云助手APP，语音唤醒（您好，小云）即可智能聊天及点播。

### 第三章：产品使用指南

#### 3.1.快速入门

**3.1.1.快速入门MP3播放：**第一步，请确认内存卡是1-32G（内存格式最好是FAT32位格式），内置是MP3格式歌曲，将TF卡插入卡槽，手机会自动识别并播放歌曲。

**3.1.2.无线蓝牙播放：**开机后，不插TF卡状态默认为蓝牙模式，也可以通过打开手机蓝牙功能到设备蓝牙连接：打开手机并开启手机蓝牙搜索并选择连接设备“M60智能蓝牙音响”进行配对，配对成功后会发出连接提示音，表示蓝牙已连接成功，可以正常的播放音乐。

**3.1.3.FM收音机设置：**

短按**键**【**键**】切换到收音模式，再短按**键**【**键**】（闹钟键），进入FM自动搜台，搜台完成后自动保存电台，按**键**【**键**】选择电台（备注：搜不到台时，请插入充电线，充电线为FM收音天线使用）

**3.1.4.蓝牙配对模式：**两台同时开机，会自动连接，连接成功会提示（对箱已连接）

**3.1.5.充电指示：**充电时，电池图标点亮；充满电，电池图标熄灭。本产品是一款AI智能音箱，下载小云助手APP，语音唤醒（您好，小云）即可智能聊天及点播。

### 第四章：产品使用指南

#### 4.1.快速入门

**4.1.1.快速入门MP3播放：**第一步，请确认内存卡是1-32G（内存格式最好是FAT32位格式），内置是MP3格式歌曲，将TF卡插入卡槽，手机会自动识别并播放歌曲。

**4.1.2.无线蓝牙播放：**开机后，不插TF卡状态默认为蓝牙模式，也可以通过打开手机蓝牙功能到设备蓝牙连接：打开手机并开启手机蓝牙搜索并选择连接设备“M60智能蓝牙音响”进行配对，配对成功后会发出连接提示音，表示蓝牙已连接成功，可以正常的播放音乐。

**4.1.3.FM收音机设置：**

短按**键**【**键**】切换到收音模式，再短按**键**【**键**】（闹钟键），进入FM自动搜台，搜台完成后自动保存电台，按**键**【**键**】选择电台（备注：搜不到台时，请插入充电线，充电线为FM收音天线使用）

**4.1.4.蓝牙配对模式：**两台同时开机，会自动连接，连接成功会提示（对箱已连接）

**4.1.5.充电指示：**充电时，电池图标点亮；充满电，电池图标熄灭。本产品是一款AI智能音箱，下载小云助手APP，语音唤醒（您好，小云）即可智能聊天及点播。

第二章：产品使用指南

2.1.快速入门

2.1.1.快速入门MP3播放：第一步，请确认内存卡是1-32G（内存格式最好是FAT32位格式），内置是MP3格式歌曲，将TF卡插入卡槽，手机会自动识别并播放歌曲。

2.1.2.无线蓝牙播放：开机后，不插TF卡状态默认为蓝牙模式，也可以通过打开手机蓝牙功能到设备蓝牙连接：打开手机并开启手机蓝牙搜索并选择连接设备“M60智能蓝牙音响”进行配对，配对成功后会发出连接提示音，表示蓝牙已连接成功，可以正常的播放音乐。

2.1.3.FM收音机设置：短按【键】切换到收音模式，再短按【键】（闹钟键），进入FM自动搜台，搜台完成后自动保存电台，按【键】选择电台（备注：搜不到台时，请插入充电线，充电线为FM收音天线使用）。

2.1.4.蓝牙配对模式：两台同时开机，会自动连接，连接成功会提示（对箱已连接）。

2.1.5.充电指示：充电时，电池图标点亮；充满电，电池图标熄灭。本产品是一款AI智能音箱，下载小云助手APP，语音唤醒（您好，小云）即可智能聊天及点播。

第三章：产品使用指南

3.1.快速入门

3.1.1.快速入门MP3播放：第一步，请确认内存卡是1-32G（内存格式最好是FAT32位格式），内置是MP3格式歌曲，将TF卡插入卡槽，手机会自动识别并播放歌曲。

3.1.2.无线蓝牙播放：开机后，不插TF卡状态默认为蓝牙模式，也可以通过打开手机蓝牙功能到设备蓝牙连接：打开手机并开启手机蓝牙搜索并选择连接设备“M60智能蓝牙音响”进行配对，配对成功后会发出连接提示音，表示蓝牙已连接成功，可以正常的播放音乐。

3.1.3.FM收音机设置：短按【键】切换到收音模式，再短按【键】（闹钟键），进入FM自动搜台，搜台完成后自动保存电台，按【键】选择电台（备注：搜不到台时，请插入充电线，充电线为FM收音天线使用）。

3.1.4.蓝牙配对模式：两台同时开机，会自动连接，连接成功会提示（对箱已连接）。

3.1.5.充电指示：充电时，电池图标点亮；充满电，电池图标熄灭。本产品是一款AI智能音箱，下载小云助手APP，语音唤醒（您好，小云）即可智能聊天及点播。

第四章：产品使用指南

4.1.快速入门

4.1.1.快速入门MP3播放：第一步，请确认内存卡是1-32G（内存格式最好是FAT32位格式），内置是MP3格式歌曲，将TF卡插入卡槽，手机会自动识别并播放歌曲。

4.1.2.无线蓝牙播放：开机后，不插TF卡状态默认为蓝牙模式，也可以通过打开手机蓝牙功能到设备蓝牙连接：打开手机并开启手机蓝牙搜索并选择连接设备“M60智能蓝牙音响”进行配对，配对成功后会发出连接提示音，表示蓝牙已连接成功，可以正常的播放音乐。

4.1.3.FM收音机设置：短按【键】切换到收音模式，再短按【键】（闹钟键），进入FM自动搜台，搜台完成后自动保存电台，按【键】选择电台（备注：搜不到台时，请插入充电线，充电线为FM收音天线使用）。

4.1.4.蓝牙配对模式：两台同时开机，会自动连接，连接成功会提示（对箱已连接）。

4.1.5.充电指示：充电时，电池图标点亮；充满电，电池图标熄灭。本产品是一款AI智能音箱，下载小云助手APP，语音唤醒（您好，小云）即可智能聊天及点播。