

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in 0mm exposure condition, compliance with exposure requirements. Only in the stated conditions, the device is shown to fully comply with the FCC RF Exposure requirements of KDB 447498.

INSTRUCTION MANUAL

MODEL:DV-690




The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.

WARNING
RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BLACKENED USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.



The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

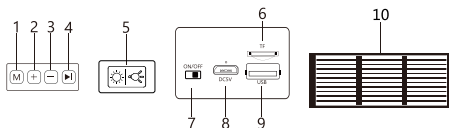

FUNCTION

1. M button
2. + kbutton
3. - kbutton
4. ▶ kbutton
5. light button
6. TF/Micro SD Slot
7. Power ON/OFF
8. Mobile Charge Slot
9. USB Slot
10. Solar Charging

M button

short press : mode conversion

▶ kbutton

short press: pause/play/short press in radio mode for automatic channel search

long press: TWS connect/disconnect

Light button

push forward : turn on the lights.

push back : turn on the flashlight.

middle: turn off the lights and flashlight

+ kbutton

short press: next song

long press: increase the volume

- kbutton

short press: last song

long press: reduce the volume

Key and socket description:

1. DC 5V charging port: plug in the charging cable here for charging.
2. TF card slot: supports playing songs in MP3 format.
3. USB slot: it supports playing songs in MP3 format.
4. On key: on/off; The function key: when play USB/TF/ bluetooth.
5. When playing a song, short press is the last song, long press to reduce the volume.
6. When playing a song, short press is the next song, and long press increases the volume.
7. When playing USB/ TF/ Bluetooth function, short press is pause / play; After the phone is connected to Bluetooth pairing , click Yes; In the radio state, press auto channel search briefly, and then click to stop channel search.
8. M: mode conversion.