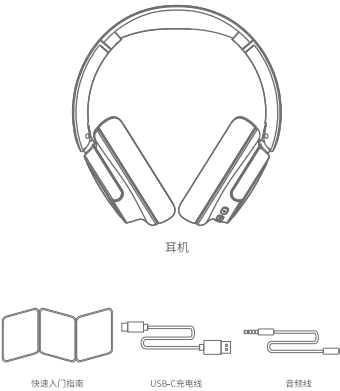 
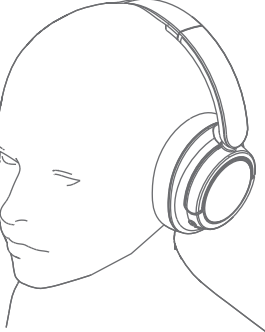 
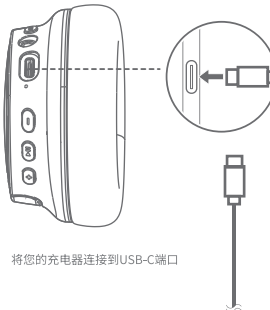 
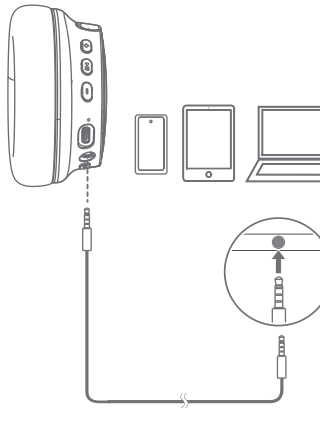 
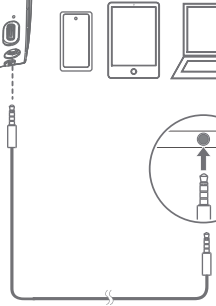 
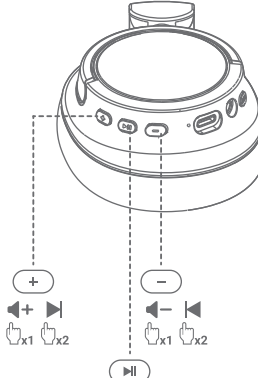 
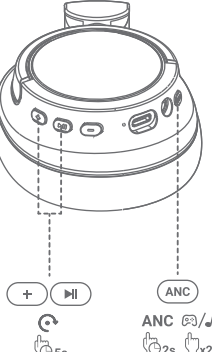 
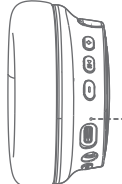 


hTC 头戴式无线蓝牙耳机10  快速入门指南 使用前请阅读使用说明书 HTC HP10	产品规格 型号: HTC HP10 蓝牙 范围: ≈10m 版本: 6.0 喇叭 直径: 40mm 阻抗: 32Ω 功率 输入: 5V=500mA 电池容量: 500mAh 使用时间: ≈25小时 充电时间: ≈2小时	物品清单  耳机 快速入门指南 USB-C充电线 音频线	如何正确佩戴耳机 	连接到蓝牙设备   在您的设备上, 打开蓝牙并选择连接到“HTC HP10”。	充电  将您的充电器连接到USB-C端口	基本操作   音频有线接口: 使用 3.5mm 音频线将耳机连接至设备, 耳机所有按键功能将自动失效, 您可通过设备控制媒体播放。	快速入门指南   + + ▶ ▶ ⏮ ⏮ ⏸ ⏸  - - ▶ ▶ ⏮ ⏮ ⏸ ⏸  - - ▶ ▶ ⏮ ⏮ ⏸ ⏸																																		
快速入门指南   5s  ANC	开机/关机 按下 [ON] 2秒, 开机/关机。 注: 开机后, 3分钟未与蓝牙设备配对连接, 自动关机; 超出有效连接距离, 未与蓝牙设备连接, 3分钟后自动关机。 功能操作 - 暂停/播放: 点击 [P] 一次 - 音量加: 点击 [+] 一次 - 音量减: 点击 [-] 一次 - 上一曲: 点击 [P-] 两次 - 下一曲: 点击 [P+] 两次 - 通话接听/结束: 点击 [M] 一次 - 通话拒接: 按住 [M] 2秒 - 激活语音助手: 点击 [M] 两次 - ANC模式切换: 按住 [ANC] 2秒 注: 切换顺序为: ANC打开、通透模式、ANC关闭 - 游戏模式与音乐模式切换: 点击 [ANC] 两次 注: 出厂设置默认为音乐模式, 通知声音较大的是游戏模式 - 断开蓝牙连接: 点击 [M] 四次 - 恢复出厂设置: 同时按住 [M] 和 [P-] 5秒	指示灯显示 <table border="1"> <thead> <tr> <th>指示灯</th> <th>状态</th> </tr> </thead> <tbody> <tr> <td>红灯和蓝灯交替闪烁</td> <td>开机/未配对</td> </tr> <tr> <td>熄灭</td> <td>配对成功/充满电</td> </tr> <tr> <td>红色常亮</td> <td>充电中</td> </tr> </tbody> </table>  蓝牙耳机指示灯	指示灯	状态	红灯和蓝灯交替闪烁	开机/未配对	熄灭	配对成功/充满电	红色常亮	充电中	产品中有害物质名称及含量 产品中有害物质的名称及含量 <table border="1"> <thead> <tr> <th rowspan="2">部件名称</th> <th colspan="5">有害物质</th> </tr> <tr> <th>铅(Pb)</th> <th>汞(Hg)</th> <th>镉(Cd)</th> <th>六价铬(Cr(VI))</th> <th>多溴联苯(PBB)</th> <th>多溴二苯醚(PBDE)</th> </tr> </thead> <tbody> <tr> <td>印刷电路组件</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>外壳等小结构件</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> </tbody> </table> 本表格依据SJ/T 11364的规定编制。 ○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。 ×: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。 表单标记“X”的部件, 皆因全球技术发展水平限制而无法实现有害物质的替代。 印刷电路板组件: 包括印刷电路板及其零部件, 电子元器件等, 根据产品型号不同, 您所购买的产品可能不会含有以上所有部件。	部件名称	有害物质					铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)	印刷电路组件	○	○	○	○	○	○	外壳等小结构件	○	○	○	○	○	○	重要安全说明 在使用本产品之前, 请仔细阅读本说明书中的所有安全说明。 - 小心使用本产品, 并将其存放在没有极端温度、高温高压和潮湿的清洁环境中, 确保产品存放在不易弯曲或挤压的地方。 - 维修和更换只能由授权的售后服务人员进行。 - 请勿自行拆卸或更换产品的任何部件, 以防受伤或损坏设备。 - 对产品的任何未经授权修改都将使保修无效。 - 仅在允许蓝牙传输的环境中使用本产品。 如果产品有明显缺陷或出现膨胀或温度过高等异常, 请勿使用。 执行需要安全关注的防风险任务时, 请勿使用本产品。 为了保护您的听力, 请勿长时间高音量收听。 请将产品及其包装放在儿童和宠物接触不到的地方, 以防发生吞咽和窒息等事故。	售后服务电话: 4009933981	法律声明 商标和许可: HTC和HTC标志为HTC公司的商标。 授权给深圳市卜兰沃德科技有限公司使用。 2026版权©归深圳市卜兰沃德科技有限公司所有。 本文档仅供参考, 不构成任何形式的保证, 本公司保留所有权利。	快速入门指南   5s  ANC
指示灯	状态																																								
红灯和蓝灯交替闪烁	开机/未配对																																								
熄灭	配对成功/充满电																																								
红色常亮	充电中																																								
部件名称	有害物质																																								
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)																																			
印刷电路组件	○	○	○	○	○	○																																			
外壳等小结构件	○	○	○	○	○	○																																			

htc Wireless Headphones 10 Quick Start Guide HTC HP10	Product Specifications Model: HTC HP10 Bluetooth Range: ≈10 m Version: 6.0 Speaker Diameter: 40 mm Impedance: 32 Ω Power Input: 5 V≈500 mA Battery capacity: 500 mAh Battery life: ≈ 25 hrs Charging time: ≈ 2 hrs 12	What's in the box Quick Start Guide USB-C cable Audio cable 13	How to put on the headphones 14	Connect to Bluetooth device 15	Charging Connect your charger to the USB-C port. 16	Connect your headphones to your device using the 3.5 mm audio cable. All the earphone buttons are disabled automatically. You can control your media through your device. 17	Basic operations 18										
Power on/off Press and hold [Power] for two seconds. Note: The device will power off automatically if it is not paired with Bluetooth for more than three minutes or is out of range. Key functions • Play/Pause: Press [Play/Pause]. • Volume up: Press [Volume Up]. • Volume down: Press [Volume Down]. • Play previous track: Press [Previous] twice. • Play next track: Press [Next] twice. • Answer/End call: Press [Call]. • Reject call: Press and hold [Call] for two seconds. • Activate voice assistant: Press [Voice Assistant] twice. • Switch between ANC mode: Press and hold [ANC] for two seconds. Note: Switching order is ANC on, transparency mode, ANC off. • Switch between Game and Music modes: Press [Game/Music] twice. Note: Music mode is the default. • Disconnect: Press [Power] four times. • Reset to factory settings: Press and hold [Power] and [Volume Down] simultaneously for five seconds.	Indicator LEDs <table border="1"> <thead> <tr> <th>LED</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>Blinking red and blue</td> <td>Powering on/Unpaired</td> </tr> <tr> <td>Off</td> <td>Paired/Fully charged</td> </tr> <tr> <td>Solid red</td> <td>Charging</td> </tr> </tbody> </table> 19	LED	Status	Blinking red and blue	Powering on/Unpaired	Off	Paired/Fully charged	Solid red	Charging	Important Safety Instructions Carefully read all the safety instructions in this document before using the product. General safety instructions • Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be bent or squeezed. • Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device. Any unauthorized modification to the product voids the warranty. • Only use the product in environments where Bluetooth transmission is permitted. Personal safety instructions • Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating. • Do not use the product when performing high-risk tasks that require your full attention. • For your hearing protection, do not listen at high volume for long periods. • Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking. 20	Battery safety instructions The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal. • Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight. • Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F). • Do not use or store the product in dust-prone, smoke-prone, high-temperature, high-pressure, or highly humid environments. • Keep the product dry and away from liquids or moisture. • Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC. • Do not use the product while charging. • Do not leave the product charging for longer than eight hours. • Dispose of the product responsibly according to your local waste management guidelines. 21	FCC ID: 2BHJR-HP108 FCC Caution: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. 22	• Consult the dealer or an experienced radio/TV technician for help. *RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. <table border="1"> <thead> <tr> <th>US REP</th> </tr> </thead> <tbody> <tr> <td>Company Name:HOORAY INDUSTRY LLC FRN:0033926106 Contact Name:Cindy wu Address:1408 Pinon Place Fullerton, CA 92835 United States Phone:(626)910-5808 Email:cindynewhope@gmail.com</td> </tr> </tbody> </table> 23	US REP	Company Name:HOORAY INDUSTRY LLC FRN:0033926106 Contact Name:Cindy wu Address:1408 Pinon Place Fullerton, CA 92835 United States Phone:(626)910-5808 Email:cindynewhope@gmail.com	Customer Service Email: service@yhemi.net Legal notice Trademarks and permissions: HTC and the HTC logo are trademarks of HTC Corporation and used under license by Shenzhen Brands World Technology Co., Ltd. Copyright © 2026 Shenzhen Brands World Technology Co., Ltd. All rights reserved. THIS DOCUMENT IS FOR INFORMATION PURPOSES ONLY AND DOES NOT CONSTITUTE ANY KIND OF WARRANTY.	htc
LED	Status																
Blinking red and blue	Powering on/Unpaired																
Off	Paired/Fully charged																
Solid red	Charging																
US REP																	
Company Name:HOORAY INDUSTRY LLC FRN:0033926106 Contact Name:Cindy wu Address:1408 Pinon Place Fullerton, CA 92835 United States Phone:(626)910-5808 Email:cindynewhope@gmail.com																	