

尺寸：70*95mm

材质：80g书写纸

双面印刷

红线为分割线（不打印显示）

MINISO

PRODUCT MANUAL

 
Wireless Earbud MS102

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE
PRODUCT AND KEEP IT IN A SAFE PLACE.

CATALOGUE

01 How to wear headphones correctly	5
02 Product Introduction	9
03 Touch Operation	12
04 Charging compartment operation	20
05 Item list	32
06 Warranty Statement	34


Welcome to MINISO wireless earphones

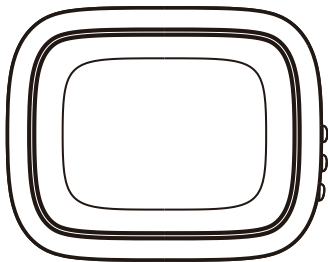

Take out and pair it

When using for the first time, take out both the left and right earphones simultaneously.
When the white and red lights of the earphones flash alternately, the earphones will enter automatic pairing mode automatically.

 How to wear headphones correctly

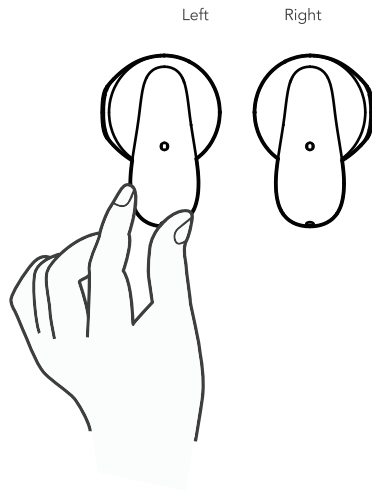


1



2



 3

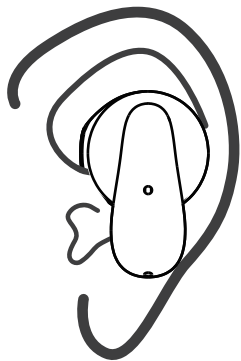


4


Product Description




Multi function key
touch position

 Wireless LED
indicator light

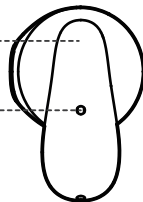

Charging Contacts

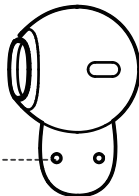 

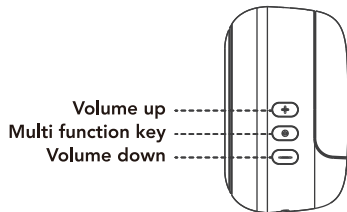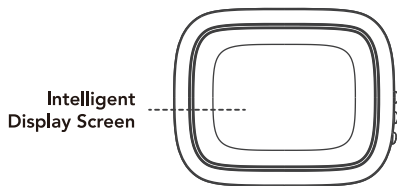   

Specification of Product

Model of Product: MS102

Version: V6.0

Effective Distance: Approx. 10m

Speaker Diameter: $\phi 13\text{mm}$

Impedance: 32Ω

Frequency Respinse: 20Hz-20KHz

Microphone Sensitivity: $-42\text{dB}\pm 1\text{dB}$

Earphone Input: $5\text{V}\approx 25\text{mA}$

Charging Case Input: $5\text{V}\approx 300\text{mA}$

Charging Case Output: $5\text{V}\approx 50\text{mA}$

Earphone Battery Capacity: 25mAh

 
Charging Case Battery Capacity: 300mAh

Duration: Approx. 3.5 H (Earphone)


Earphone Charging Time: Approx. 1.5 H

Charging Time of the Charging Case: Approx. 1.5 H


Connect with Wireless device

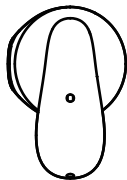

 Open the wireless settings option of the wireless device to be paired, enter the options and find the wireless pairing name of the headset "MINISO-MS102 ".Click the pairing name to pair.

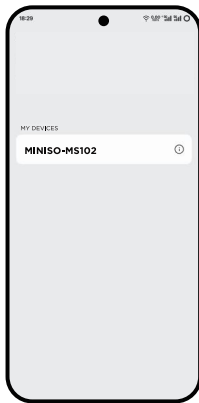

Indicator Light Description

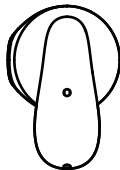 


- When the headset is turned on:
White and red lights flash alternately.

- When the headset is turned off:
After the white light is on, it goes off.


- Successful pairing of left and right ears:
The main earphone's white and red lights flash alternately, and the light on the secondary earphone is off.

 - Wireless device successfully connected:
no light

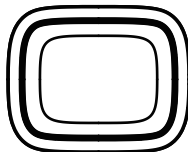

- Headphone Charging: The white light on the earphones is always on.
After being fully charged, the white light on the earphones goes off.

 - Charging of the Charging case:
The charging case display screen shows the battery level, and when fully charged, the charging case screen shows 100%
*Note: After the charging status is displayed on the display screen of the Charging Case, it will automatically turn off after about 18 seconds of inactivity. Sliding can enter the display screen.

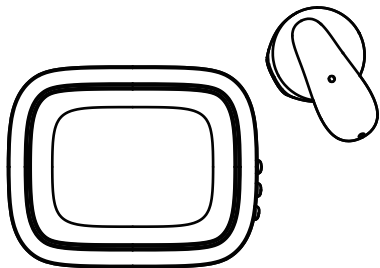

Power On

Automatic power on: Taking the earphones out of the charging case will automatically turn them on.

Manual power-on: Long press for 3 seconds, the Earphone will be powered on, with the prompt sound of "Du".

 
Power Off

Auto power off: Placing the earphones in the charging case will automatically turn them off.

Manual power off: Long press for 5 seconds, the Earphone will be powered off, with the prompt sound of "Du".

Note: After powering on, if it is not paired with a Bluetooth device for 3 minutes, it will automatically shut down; Exceeded the effective connection distance and did not connect to the Bluetooth device, it will automatically power off after 3 minutes, with the prompt sound of "Du".

Once Press

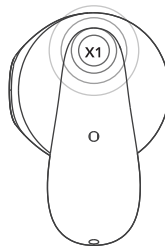

Music mode



 
Play/Pause

Phone mode



Call Answer/End

Double Press

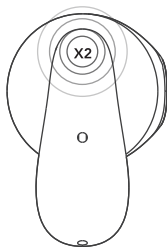

Music mode

 


Double press the right ear:
Volume up



Double press the left ear:
Volume decreases

Long Press

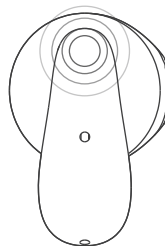

Wake up voice assistant



 
When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant

Phone mode



Press and hold the left (or right) ear multi-function button for two seconds: call rejection

Triple Press

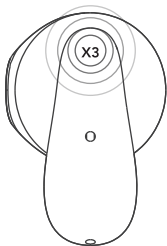

Music mode

 


Triple press on the left ear:
Previous song



Triple press on the right ear:
next song

Switch between game mode and music mode

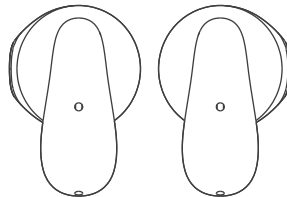

Game mode



Press and hold the multi-function
button on the right ear for 2 seconds

Music mode




Press and hold again for 2
seconds

Note 1: When using one earphone, you cannot switch between
game mode and music mode.

Note 2: The factory setting defaults to music mode

Clear Wireless pairing history

 
When both ears cannot be paired, you need to clear all connected devices and click the left and right earphones 5 times at the same time.

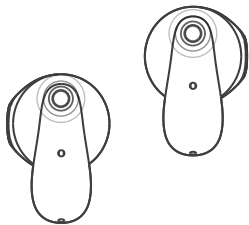

Wireless pairing mode

1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.
2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep"

 Charging compartment operation

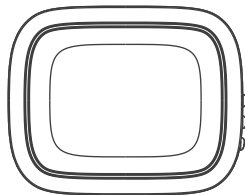

Lighting up the display screen

Method 1: Press the multifunctional button of the Charging Case once to light up the screen.

Method 2: Double click on the Charging case screen, the display screen will light up.

Turn off display screen.

Automatic shutdown: After turning on the screen for 20 seconds without operation, the display screen will automatically turn off.

Manual closing: Press the Charging Case multifunctional button once to turn off the display screen.

Note 1: First time use, please activate power on

Method 1: Charge and activate the charging case through the TYPE-C interface.

Method 2: Long press the multifunctional button on the charging case for 3 seconds to turn on the device

Tip: This product defaults to shutdown mode when it leaves the factory, First use requires activation and startup.

Icon Introduction



Wireless status

Red status: The charging compartment is not connected to the headphones

White status: The charging compartment is connected to the earphones, but the earphones are not connected to the phone

Blue status: The charging compartment is connected to the headphones, and the headphones are connected to the phone.

Battery status



Charging status indicator icon for the charging compartment

green lightning icon: Charging in progress

White: Normal battery level, not charging



Headphone charging status indicator icon

Green: The earphones are charging in the Charging Case

White: Normal battery level, not charging

Lock screen interface



Unlock: Slide to the left or right to unlock the screen

Menu interface



Tap an item to access its options.

Music interface



Volume down



Previous Song



Play/Pause



Next Song



 
Volume up

Equalizer interface




Equalizer sound effect switching: Pop, Rock ,
Jazz, Standard, classic

Voice assistant interface

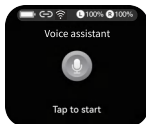

Tap to activate your phone's voice assistant.

 Find my earphones

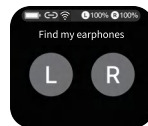

Tap **L** or **R** depending on
which earphone you want to find.
Tap again when you find the earphone to stop the beep.

Game interface interface



 
Tap to switch and launch the corresponding game

Translation interface



Displays translated content synchronized
with the connected app.

System Settings

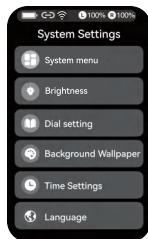

Tap an item to access its options.

System Menu



Tap to enter About, Factory reset, Restart, power Off

Brightness



Brightness: Swipe up or down.

Screen timeout: Swipe left to select a time for the screen to turn off when left idle.

Dial setting



 
On the Lock screen, press and hold the screen for three second to change the wallpaper. You can also change it in Settings.

Background Wallpaper



Can be switched to other Background Wallpapers.

Time Settings

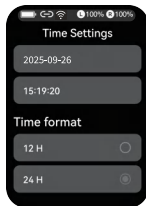

Tap the date or time to set it. Choose also the time format you want to use.

Language



 
Tap the language to use for the charging case display.

TikTok Page flipping and like function

Needs to be connected to a Wireless device such as a cell phone

- 1.This function is only available for use with TikTOK software, and other software may not be able to use it.
- 2.This feature may have compatibility issues with some phones, and some phones may not be able to use it.
- 3.If there are situations where it cannot be used, please ignore this feature.

Explanation: Apple needs to open phone settings - Accessibility - Touch - Assistive Touch

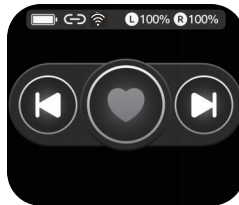

Click this icon, the current short video will be liked



Clicking on this icon will switch to the previous short video



Clicking on this icon will switch to the next short video

Photography function

Needs to be connected to a Wireless device such as a cell phone

1. This function is only available for taking photos with the built-in camera of the phone. Other shooting software may not be able to use it.
2. This feature may have compatibility issues with some phones, and some phones may not be able to use it.
3. If there are situations where it cannot be used, please ignore this feature.

 
Explanation: Some phones use volume control to take photos

- (1) Open the camera on your phone and click on the volume adjustment button to default to taking photos;
- (2) If the camera is not turned on on the phone, clicking on the camera will increase or decrease the volume



Open the phone camera, click the button, and the phone will start taking photos

Definition of multifunctional button functions

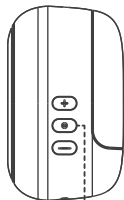

Multi function key



 
Press once: Turn the screen on/off.

Press three times: Link earphones to charging case.

Press and hold for five seconds: Enter the system menu (About, Factory reset, Restart, Power off)

Press and hold for three seconds: Power on when the device is off

Item list

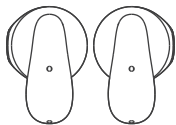

Headphones *2



Charging case *1



Instruction *1



Charging cable *1



Lanyard *1

FCC ID: 2BHJR-MS102

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

US REP

Company Name: MIRAMONT SOLUTIONS LLC
Address: 19 GEORGETOWN, IRVINE, CA 92612
United States
Contact Name: Wenyi Wang
Telephone No: (951) 401-3633
Email: wenyiwang@miramontsolutions.com

Warranty statement

MINISO product warranty card

Product number			SN number	
User info	name		Purchase date	
	telephone			
	address			
	Invoice number			
Sales unit information	name	(stamp)		
	address			
	telephone			

The above guarantee does not apply to the following situations

1. The validity period of the three guarantees has exceeded;
2. Altering of the warranty cards and product code do not match the product itself;
3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;
4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;
5. Zippers and tower buckles are damaged due to excessive force;
6. Off-line or tear caused by overloading;
7. Any damage caused by sharp objects;
8. Products with signs of burn damage or water logging;
9. Damage caused by unauthorized dismantling and modification;
10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.
11. If the product's original logo or label is changed or damaged, this warranty will be invalid.

The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.

MINISO Product service policy

If you encounter a problem, please contact our customer service to solve it.

Customer Service Email: customercare@yhemi.net



Warranty Policy

Disclaimer:

This manual does not come with any form of warranty, position expression or other implication. The products, specifications and information mentioned in this manual are for reference only, and the content will be updated on the website at any time without prior notice.

Warranty statement:

The following guarantee is made for the products attached to this document: If the product is damaged due to quality defects under normal use within twelve(12) months from the date of your purchase (the "Warranty Period"), and if it can be repaired, it will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period(a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen(13) months from the product production date.

If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.

Guidelines for safe and effective use

Note: Please read this information first before using your Wireless headset. If the user makes modifications or modifications to this Wireless headset without permission, the user will lose the right to continue to enjoy the services included in the device

① Electromagnetic interference:

Electronic devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your Wireless device in accordance with regulations in places with clear instructions.

Civil Aviation: After boarding the plane, please turn off your Wireless headset according to the flight attendant's instructions. It is strictly prohibited to use Wireless headsets during flight to avoid interference with the aircraft communication system.

② Safety matters:

Placement: It is recommended that when you are not using the Wireless headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.

Children: Do not let children play with Wireless headsets. Some of the small parts are detachable and may be swallowed and cause danger.

Important safety tips

● Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.

 
● This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, Puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging, or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun, heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type. battery usage.

● After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.

● During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Wireless signals, WIFI signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lags, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.

● When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause The battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

Enjoy the company of MINISO

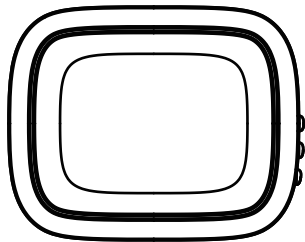

Copyright©2025 MINISO Group affiliated
companies and its licensors. All rights reserved

Creating sound to live with