

产品说明书 尺寸:60x90mm 材质:80g书写纸 双面印刷 风琴折

MINISO

PRODUCT MANUAL

Wireless Earbud MS108

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE PRODUCT AND KEEP IT IN A SAFE PLACE.

What's in the box

Charging case

2 Earphones (A)

2 Earphones (B)

Quick Start Guide

Lanyard

USB-C cable

Components

Earphone LED

Touchpad

Charging contacts

Charging case display

USB Type-C port

How to put on the earphones

Basic operations

Power on/off

Music mode

Reset earphones

3s/5s

x2

x1

x2

x2s

x5

x1

2s

x5

x1

x3

2s

x3

x3

2s

How to reset the earphones

Key functions

Note: Mode switching is disabled when you're using a single earphone only.

Indicator LEDs

Earphone (A) LED	Status
Blinking ice-blue	Both earphones: Powered on
Solid ice-blue	Single earphone: Unpaired
Off	Paired or fully charged
Earphone (B) LED	Status
Blinking red and blue	Both earphones: Powered on
Solid red	Single earphone: Unpaired
Off	Paired or fully charged
Charging case display	Status
Flashing	Case charging
Shows 100%	Case fully charged

Power on

Power off

Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected.

Connect to Bluetooth device

On your device, turn on Bluetooth and choose to connect to "MINISO-MS108A".

Connect to Bluetooth device

On your device, turn on Bluetooth and choose to connect to "MINISO-MS108B".

FCC ID: 2BHJR-MS108

FCC Warning:

The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.

The above guarantee does not apply to the following situations

1. The validity period of the three guarantees has exceeded;

2. Altering of the warranty cards and product code do not match the product itself;

3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;

4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;

5. Zippers and tower buckles are damaged due to excessive force;

6. Off-line or tear caused by overloading;

7. Any damage caused by sharp objects;

8. Products with signs of burn damage or water logging;

9. Damage caused by unauthorized dismantling and modification;

10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.

11. If the product's original logo or label is changed or damaged, this warranty will be invalid.

MINISO Product service policy

Customer Service Email: customercare@yhemi.net

US REP

Company Name: MIRAMONT SOLUTIONS LLC

Address: 19 GEORGETOWN, IRVINE, CA 92612

United States

Contact Name: Wenyi Wang

Telephone No: (951) 401-3633

Email: wenyiwang@miramontsolutions.com

Warranty Policy

Disclaimer:

The following guarantee is made for the products attached to this document: If the product is damaged due to quality defects under normal use within twelve(12) months from the date of your purchase (the "Warranty Period"), and if it can be repaired, it will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period (a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen(13) months from the product production date.

If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.

Guidelines for safe and effective use

Note: Please read this information first before using your Bluetooth headset.

If the user makes modifications or modifications to this Bluetooth headset without permission, the user will lose the right to continue to enjoy the services included in the device

①Electromagnetic interference:

Electronic devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your Bluetooth device in accordance with regulations in places with clear instructions.

Civil Aviation: After boarding the plane, please turn off your Bluetooth headset according to the flight attendant's instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid interference with the aircraft communication system.

②Safety matters:

Placement: It is recommended that when you are not using the Bluetooth headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.

Children: Do not let children play with Bluetooth headsets. Some of the small parts are detachable and may be swallowed and cause danger.

Important safety tips

● Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.

● This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, Puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging, or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun, heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age.

If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type.

battery usage.

● After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.

● During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WIFI signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lags, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.

● When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

Enjoy the company of MINISO

Creating sound to live with

Copyright©2025 MINISO Group affiliated companies and its licensors. All rights reserved