

尺寸：70*95mm

材质：80g书写纸

双面印刷

红线为分割线（不打印显示）

MINISO

PRODUCT MANUAL

 
Wireless Earbud MS116

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE
PRODUCT AND KEEP IT IN A SAFE PLACE.

CATALOGUE

01 How to wear headphones correctly	5
02 Product Introduction	9
03 Touch Operation	12
04 Item list	32
05 Warranty Statement	34

Welcome to MINISO Wireless Earphones

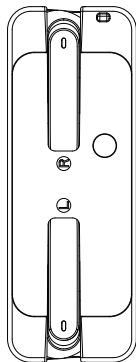


Open the lid and pair

When using the Headphones for the first time, please
Take the headphones out of the charging case the
orange/ice blue lightsflash alternately,the secondary ear
lights are off, and theheadphones will automatically pair.



How to wear headphones correctly


Left

 Right

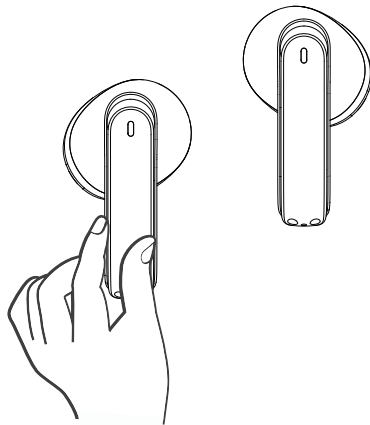


1

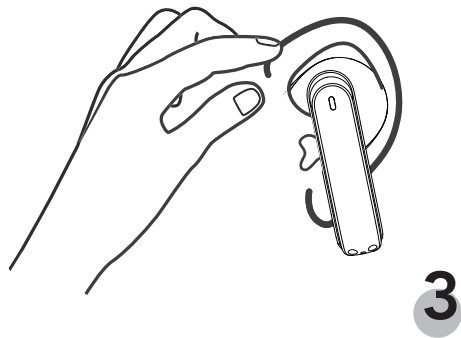 
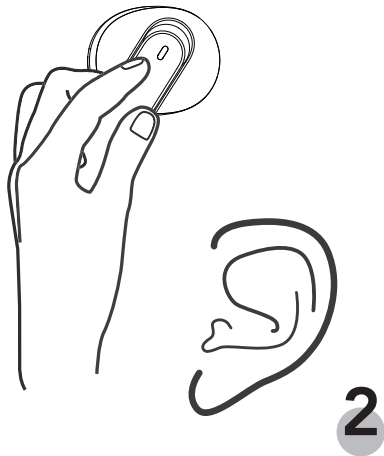 


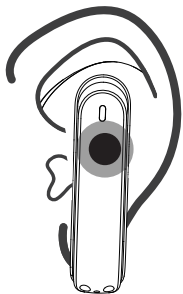 

4

   Product Description

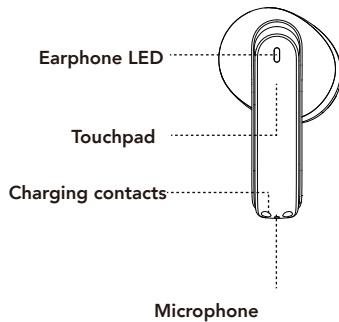

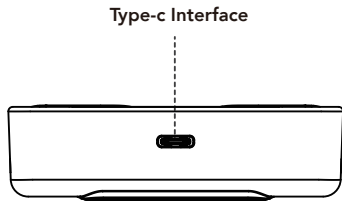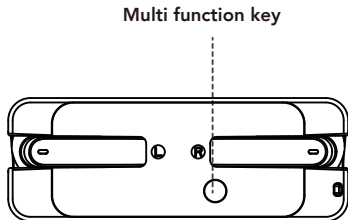

Specification of Product

Model of Product: MS116

Version: V6.0

Effective Distance: Approx. 10m

Speaker Diameter: $\phi 13\text{mm}$

Impedance: $29 \pm 15\% \Omega$

Frequency Respinse: 20Hz-20KHz

Microphone Sensitivity: $-38\text{dB} \pm 1\text{dB}$

Earphone Input: $5\text{V} \rightleftharpoons 35\text{mA}$

Charging Case Input: $5\text{V} \rightleftharpoons 300\text{mA}$

Charging Case Output: $5\text{V} \rightleftharpoons 70\text{mA}$

Earphone Battery Capacity: 35mAh

 
Charging Case Battery Capacity: 300mAh

Duration: Approx. 5 H (Earphone)


Earphone Charging Time: Approx. 1.5 H

Charging Time of the Charging Case: Approx. 2 H


Connect with Wireless device

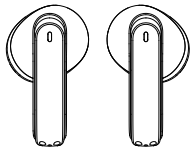

 
Open the Wireless settings option of the Wireless device to be paired, enter the options and find the Wireless pairing name of the headset "MINISO-MS116". Click the pairing name to pair.

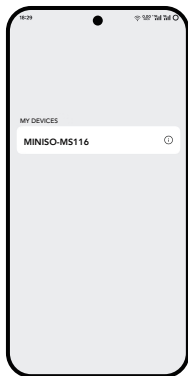

Indicator Light Description


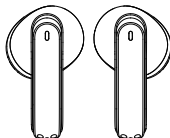 


 - Headphones turn on: The Orange light alternates with the ice blue light.
- Earphone off: The orange light flashes three times and then goes out.
- Pairing success: the Orange light and ice blue light of the main engine alternately flash, and the auxiliary engine is off.
- Connection successful: No light.



- Earphone charging: The orange light on the headphones remains on constantly. When fully charged, the orange light goes out. Then, it turns to ice blue and stays on for 10 seconds before going out
- Charging bin Charging: The charging screen status is green. It shows 100% when fully charged

  *Note: After the harging case is displayed on the display screen of the charging bay, The charging case screen will automatically shut down after approximately 30 seconds of no operation



Power On

Auto power on: Take out the earphones from the charging case, and they will automatically power on, and the prompt tone is "Du" .

Manual power on: When the headset is turned off (outside the charging bay), long press the multi-function touch key of the headset for about 3 seconds, and the headset is turned on, The "Du" tone .

 
Power Off

Auto power off: Put the earphones back into the charging case, and the earphones will turn off.

Manual power off: When the headphones are turned on and not connected, hold down the multi-functional touch keys on both sides for about 5 seconds. The headset is powered off and The "Du" tone .

Note: After turning on the device, if it is not paired and connected to the Wireless device for 3 minutes, it will automatically shut down; Exceeded the effective connection distance and did not connect to the Wireless device. After 3 minutes, it will automatically shut down with a beep sound.

Once Press



Music mode



 
Play/Pause

Phone mode



Call Answer/End

Double Press



Music mode

 


Double press the right ear:
Volume up



Double press the left ear:
Volume decreases

Long Press



Wake up voice assistant



 
When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant

Phone mode



Press and hold the left (or right) ear multi-function button for two seconds: call rejection

Triple Press



Music mode



 
Triple press on the left ear:
Previous song



Triple press on the right ear:
next song

Clear Wireless pairing history


When the two headphones cannot be paired, tap the left ear and the right ear respectively for 5 times (no need to switch simultaneously, operate the left and right ears respectively). After clearing the information of the earphone connection device and the earphone team, turn off the device. When you restart it, it will automatically pair.

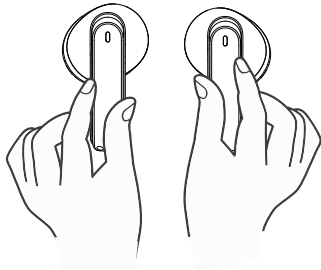

Wireless pairing mode

1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.
2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep"

 Switch between game mode and music mode (Binaural operation)



Game mode



Press and hold the multi-function button on the right ear for 2 seconds

Music mode



Press and hold again for 2 seconds

Note 1: When using one earphone, you cannot switch between game mode and music mode.

Note 2: The factory setting defaults to music mode

Charging Case operation



Lighting up the display screen

Method One: When the screen is off, touching it lightly twice in a row can wake it up and light it up.

Method 2: Press the multi function key of the Charging Case once to light up the screen.

Turn off display screen

Self-extinguishing screen: After turning on the screen for 30 seconds without operation, the display screen will automatically turn off .

Manual closing: Press the Charging Case multi function key once to turn off the display screen.

Note 1: First time use, please activate power on Method 1. Charge and activate the charging case through the TYPE-C interface.

Method 2. Long press the multi function key on the charging case for 3 seconds to turn on the device
Tip: This product defaults to shutdown mode when it leaves the factory, First use requires activation and startup.



Icon Introduction

Wireless status

Red status: The Charging Case is not connected to the headphones.

White status: The Charging Case is connected to the earphones, but the earphones are not connected to the phone.

Blue status: The Charging Case is connected to the headphones, and the headphones are connected to the phone.

Battery status



Charging status for the Charging Case

Green icon: Charging in progress

The battery display on the screen shows 100%:

The battery is fully charged



Headphone status

White icon: Normal battery level, not charging

Green icon: The headphones are charging.

Lock screen interface



Double-click the screen to light it up

Music interface



Previous Song



Reduce volume



Play/Pause



Next Song



 
Increase volume

Spatial sound interface




Switch between different EQ sound effects:
Standard, rock, pop, classic, jazz

Voice assistant interface



Click the button to start the voice assistant

 Game interface




Click on the game item to start playing

Screen lock interface



Swipe left or right to switch between different lock screen wallpapers.
(Emoji theme, click emoji to switch emoji)

 Menu list interface

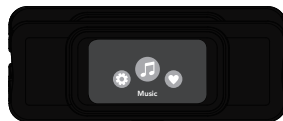

Swipe right to open the menu list interface, then
Swipe left and right to select the menu and click to enter
Enter the sub-menu, swipe right to exit the sub-menu,
and swipe Left/Right again to exit the menu list.

System setting interface



Click to enter the system Settings menu, select the Settings you need to adjust, and then enter the menu

Brightness setting interface



 
Swipe left and right to adjust the brightness level

Screen on time setting interface



Swipe the screen to the left to set the screen time

Time setting interface




Click the Settings list and set the time

Language interface



Swipe up and down to click on the language list to switch languages

 
Find My Earphone interface



L R

Click the L/R button on the interface, and the headphone speaker will continue to emit sound. Click the L/R button again, and the headphone speaker will stop emitting sound
Swipe right to exit this interface

 TRANSLATORS



Open

Click to open, the screen will enter translation

 
Camera function

Needs to be connected to a Wireless device such as a cell phone

1.This function is only available for taking photos with the built-in camera of the phone.Other shooting software may not be able to use it.

2.This feature may have compatibility issues with some phones, and some phones may not be able to use it.

3.If there are situations where it cannot be used, please ignore this feature.




Open the phone camera, click the button, and the phone will start taking photos

TIKTOK Page flipping and like function

Needs to be connected to a Wireless device such as a cell phone

 - 1.This function is only available for use with TIKTOK software, and other software may not be able to use it.
- 2.This feature may have compatibility issues with some phones, and some phones may not be able to use it.
- 3.If there are situations where it cannot be used, please ignore this feature.



Click this icon, the current short video will be liked

 


Clicking on this icon will switch to the previous short video



Clicking on this icon will switch to the next short video

Definition of multi function key functions



Click once: The screen is on or off.

Three strikes: Tap three times in a row to pair the headphones with the charging case

 
Press and hold for 2 seconds: in the startup state, press and hold for 2 seconds, and the shutdown and restart and restore factory ICONS will pop up on the screen. Click the icon to shut down or restart or restore factory release.

Press and hold for 3 seconds: Off state, press and hold for 3 seconds to turn it on.

Press and hold for 5 seconds: Power-on status, press and hold for 5 seconds to turn it off.

Press and hold for 10 seconds: When the system freezes, press and hold for 10 seconds to reset


Item list



Headphones *1



 Charging cable *1



Charging case *1



Lanyard*1



Instruction *1

FCC ID: 2BHJR-MS116

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

US REP

Company Name: MIRAMONT SOLUTIONS LLC
Address: 19 GEORGETOWN, IRVINE, CA 92612
United States
Contact Name: Wenyi Wang
Telephone No: (951) 401-3633
Email: wenyiwang@miramontsolutions.com

Warranty statement

MINISO product warranty card

Product number			SN number	
User info	name		Purchase date	
	telephone			
	address			
	Invoice number			
Sales unit information	name	(stamp)		
	address			
	telephone			

The above guarantee does not apply to the following situations

1. The validity period of the three guarantees has exceeded;
2. Altering of the warranty cards and product code do not match the product itself;
3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;
4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;
5. Zippers and tower buckles are damaged due to excessive force;
6. Off-line or tear caused by overloading;
7. Any damage caused by sharp objects;
8. Products with signs of burn damage or water logging;
9. Damage caused by unauthorized dismantling and modification;
10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.
11. If the product's original logo or label is changed or damaged, this warranty will be invalid.

The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.

MINISO Product service policy

If you encounter a problem, please contact our customer service to solve it.

Customer Service Email: customercare@yhemi.net



Warranty Policy

Disclaimer:

This manual does not come with any form of warranty, position expression or other implication. The products, specifications and information mentioned in this manual are for reference only, and the content will be updated on the website at any time without prior notice.

Warranty statement:

The following guarantee is made for the products attached to this document: If the product is damaged due to quality defects under normal use within twelve(12) months from the date of your purchase (the "Warranty Period"), and if it can be repaired, it will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period (a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen(13) months from the product production date.

If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.

Guidelines for safe and effective use

Note: Please read this information first before using your Wireless headset. If the user makes modifications or modifications to this Wireless headset without permission, the user will lose the right to continue to enjoy the services included in the device

① Electromagnetic interference:

Electronic devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your Wireless device in accordance with regulations in places with clear instructions.

Civil Aviation: After boarding the plane, please turn off your Wireless headset according to the flight attendant's instructions. It is strictly prohibited to use Wireless headsets during flight to avoid interference with the aircraft communication system.

② Safety matters:

 
Placement: It is recommended that when you are not using the Wireless headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.

Children: Do not let children play with Wireless headsets. Some of the small parts are detachable and may be swallowed and cause danger.

Important safety tips

- Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.
- This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, Puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging, or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun, heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type. battery usage.
- After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.
- During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Wireless signals, WIFI signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lags, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.
- When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause The battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

Enjoy the company of MINISO

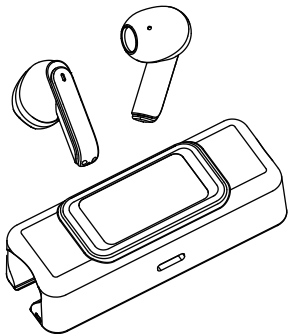

Copyright©2025 MINISO Group affiliated
companies and its licensors. All rights reserved

Creating sound
to live with