

Lock screen interface

Unlock: Slide to the right to unlock the screen

Music interface

Previous Song Play/Pause Next Song

Equalizer interface

Switch between different EQ sound effects:
Standard,Red,POP,Classic,Jazz

Language switching interface

Click to switch languages from different countries

Background wallpaper interface

Click to switch between different background wallpapers,
the current screen is the selected background wallpaper

Tiktok page flipping and like function

Needs to be connected to a wireless device such as a cell phone
1.This function is only available for use with TIKTOK software,
and other software may not be able to use it.
2.This feature may have compatibility issues with some phones,
and some phones may not be able to use it.
3.If there are situations where it cannot be used,
please ignore this feature.

Clicking on this icon will be liked Tap the switch to enable the headset to control Tiktok. When turned off the headset cannot control Tiktok

Photography function

This function is only available for taking photos with the built-in camera of the phone
Other shooting software may not be able to use it.
This feature may have compatibility issues with some phones,
and some phones may not be able to use it.

Open the phone camera, click the button, and the phone will start taking photos

Menu interface

Swipe to select the corresponding function to use

Volume adjustment interface

Reduce volume, minimum music is 0 Increase volume, maximum volume is 16

Mode selection interface

Music mode Game mode

Lock wallpaper interface

Click to switch between different lock screen wallpapers,
the current screen is the selected lock screen wallpaper

Find my earphones interface

Click the headphone button on the interface,
and the headphone speaker will continue to emit sound.
Click the headphones button again, and the headphone speaker will stop emitting sound. Swipe right to exit this interface

FCC ID: 2BHRJ-MS126

FCC Warning:
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference
(2) This device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
*RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

The above guarantee does not apply to the following situations

- 1.The validity period of the three guarantees has exceeded;
- 2.Alteration of the warranty cards and product code do not match the product itself;
- 3.Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;
- 4.Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;
- 5.Zippers and lower buckles are damaged due to excessive force;
- 6.OH-line or tear caused by overloading;
- 7.Any damage caused by sharp objects;
- 8.Products with signs of burn damage or water logging;
- 9.Damage caused by unauthorized dismantling and modification;
- 10.Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.
- 11.If the product's original logo or label is changed or damaged, this warranty will be invalid.

The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should respect the product on site when receiving it and raise objections to any discrepancies.

MINISO Product service policy

If you encounter a problem, please contact our customer service to solve it.
Customer Service Email: customerservice@miniso.com

US REP

Company Name: MIRAMONT SOLUTIONS LLC
Address: 17 GEORGETOWN, IRVINE, CA 92612
United States
Contact Name: Weny Wang
Telephone No: +81 601 3633
Email: wenywang@miamontsolutions.com

Warranty statement

MINISO product warranty card

Product number	name	S/N number	Purchase date
User info	telephone		
	address		
	Invoice number		
Sales unit information	name	(stamp)	
	address		
	telephone		

Warranty Policy

Disclaimer:
This manual does not come with any form of warranty/policy explanation or other implication. The products, specifications and information mentioned herein manual are for reference only and the content will be updated on the website at any time without prior notice.
Warranty statement:
The following guarantee is made for the products attached to this document: If the product is damaged due to quality defects under normal use within twelve(12) months from the date of your purchase the "Warranty Period", and if it can be repaired, it will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period (a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen(13) months from the product production date.
If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.

Guidelines for safe and effective use

Note: Please read this information first before using your wireless headset.
If the user makes modifications or modifications to this wireless headset without permission, the user loses the right to continue to give the services included in the device.
①Electromagnetic interference:
Electronic devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your wireless device in accordance with regulations in places with clear instructions.
Civil Aviation: After boarding the plane, please turn off your wireless headset according to the flight attendant's instructions. It is strictly prohibited to use wireless headsets during flight to avoid interference with the aircraft communication system.
②Safety matters:
Placement: It is recommended that when you are not using the wireless headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.
Children:Do not let children play with wireless headsets.Some of the small parts are detachable and may be swallowed and cause danger.

Important safety tips

- Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.
- This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun/heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, dry smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself! If the battery is not replaced properly, there is a risk of explosion. Can only be replaced by an after-sales service provider of the same or equivalent type.
- After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.
- During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, wireless signals, WIFI signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional loss, voice cut-off or disconnection. If this happens, please reconnect the headphones or stay away from interference.
- When charging, please use a charging device with an output voltage of DC 5V/1A. We must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

Enjoy the company of MINISO

Creating sound to live with

Copyright©2026 MINISO Group affiliated companies and its licensors. All rights reserved