

MINISO PRODUCT MANUAL Wireless Earbud MS128 PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE PRODUCT AND KEEP IT IN A SAFE PLACE.	CATALOGUE 01 How to wear headphones correctly 02 Product Description 03 Touch Operation 04 Charging compartment operation 05 Item list 06 Warranty Statement 5 9 12 21 33 36	Welcome to MINISO Wireless Earphones Take out and pair it When using for the first time, take out the left and right earphones at the same time. When the white and ice blue lights of the earphones flash alternately, the earphones will enter automatic pairing mode.	How to wear headphones correctly Left Right 1 2 3 4			
Product Description Wireless LED indicator light Multi function key touch position Charging Contacts	Intelligent Display Screen Type-C Interface Multi function key	Specification of Product Model of Product: MS128 Version: V6.0 Effective Distance: Approx. 10m Speaker Diameter: Ø10mm Impedance: 32Ω Frequency Respinse: 20Hz-20KHz Microphone Sensitivity: ±42dB±3dB Earphone Input: 5V±25mA Charging Case Input: 5V±300mA Charging Case Output: 5V±50mA Earphone Battery Capacity: 25mAh Charging Case Battery Capacity:300mAh Duration: Approx. 3.5 H (Earphone) Earphone Charging Time: Approx. 1 H Charging Time of the Charging Case: Approx. 1.5 H	Touch Operation Connect with wireless device Open the wireless settings option of the wireless device to be paired, enter the options and find the wireless pairing name of the headset "MINISO-MS128". Click the pairing name to pair.	Indicator Light Description When the headset is turned on/White and ice blue lights flash alternately. When the headset is turned off. The white light flashes three times and then goes off. Pairing status:After successful pairing, the main earphone's white and ice blue lights flash alternately and the secondary earphone goes off. Connection successful: no light. Headphone Charging: The white light on the earphones is always on. After being fully charged, the white light on the earphones goes off. Charging of the Charging case: The charging case display screen shows the battery level, and when fully charged, the charging case screen shows 100%. Note: After the charging status is displayed on the display screen of the Charging Case, it will automatically turn off after about 30 seconds of inactivity. Sliding can enter the display screen.	Power On Auto power on: The Earphone are taken out of the charging case, the Earphone will be powered on, with the prompt sound of "Du". Manual power-on: Long press for 3 seconds, the Earphone will be powered on, with the prompt sound of "Du". Power Off Auto power off: Put the Earphone in the charging case, the Earphone will be powered off. Manual power off: Long press for 5 seconds, the Earphone will be powered off, with the prompt sound of "Du". Note: After turning on the device, if it is not paired and connected to the Bluetooth device for 3 minutes, it will automatically shut down; Exceeded the effective connection distance and did not connect to the Bluetooth device. After 3 minutes, it will automatically shut down with a beep sound.	Once Press Music mode Play/Pause Phone mode Call Answer/End
Double Press Music mode Double press the right ear: Volume up Double press the left ear: Volume decreases	Long Press Wake up voice assistant When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant. Phone mode Press and hold the left (or right) ear multi-function button for two seconds: call rejection	Triple Press Music mode Triple press on the left ear: Previous song Triple press on the right ear: next song	Clear wireless pairing history Wireless pairing mode 1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps. 2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "du".	Switch between game mode and music mode Game mode Press and hold the multi-function button on the right ear for 2 seconds Music mode Press and hold again for 2 seconds Note 1: When using one earphone, you cannot switch between game mode and music mode. Note 2: The factory setting defaults to music mode	Charging compartment operation Open the display screen Method 1: When the screen is turned off, double click on the charging compartment display screen to turn it on. Method 2: Click the multifunction button on the charging case, and the charging compartment display screen will light up. Turn off the display screen Automatic shutdown: The screen will turn off automatically after 30 seconds of inactivity. Manual shutdown: Click the multifunction button on the charging case to shut down the display screen. Note 1: First time use, please activate power on Operation method: Charge and activate the charging compartment through the TYPE-C interface. Tip: This product defaults to shutdown mode when it leaves the factory, and it needs to be activated and turned on by charging for the first time. Note 2: In the case of a stuck charging compartment, in non-charging mode, press and hold the Reset button at the bottom for 10 seconds to forcibly restart the charging compartment.	Icon Introduction Wireless status Red status: The charging compartment is not connected to the headphones White status: The charging compartment is connected to the headphones Blue status: The earphones are connected to a Bluetooth device Battery status Charging status indicator icon for the charging compartment Display battery status Headphone charging status indicator icon Yellow: Earphones are charging in the charging case. Grey: Earphones are fully charged in the charging case. White: Earphones are out of the case and connected to the charging case.

正面

Home screen interface

Menu: Swipe left on the screen to Menu.

Menu interface

Swipe to select the corresponding function to use

Music interface

Previous Song Play/Pause Next Song

Equalizer interface

Tap any of the equalizer presets to use it.

Mode selection

Music mode Game mode

Volume interface

Reduce volume, minimum volume is 0 Increase volume, maximum volume is 16

Find my earphones interface

Click the headphone button on the interface, and the headphone speaker will continue to emit sound. Click the headphone button again, and the headphone speaker will stop emitting sound. Swipe right to exit this interface.

Photography function

This function is only available for taking photos with the built-in camera of the phone. Other shooting software may not be able to use it. This feature may have compatibility issues with some phones, and some phones may not be able to use it.

Open the phone camera, click the button, and the phone will start taking photos

Phone interface

Tap to make a call.

Stopwatch interface

Tap to record a lap Tap to reset Tap to start or pause the timer

Voice assistant

Click to activate the voice assistant

Key settings

Customize the behavior of each touchpad gesture.

Game interface

Bird: Click on the screen to help the bird avoid obstacles

Tiktok page flipping and like function

If you're browsing TikTok while your earphones are connected to your phone, you can use your earphones to scroll through and like videos.

Action

Display

Earphones

View previous video

Tap

Tap any touchpad twice

Like the video

Tap

Long press any touchpad

View next video

Tap

Tap any touchpad once

Note: After enabling Earbud control, you can operate Douyin, but music control will be unavailable. To resume music control, please disable this feature.

Settings interface

Configure your charging case settings.

Sstsem menu

System menu, can restore factory settings, restart, shut down

Display interface

Swipe left/right: Adjust screen brightness

Touch wake up

Enable this option so you can turn on the display by double-tapping it.

Language interface

Click to switch languages from different countries

Lock screen wallpaper

Choose the wallpaper to use for the lock screen.

Menu style

Choose a menu style.

Time setting interface

Set the time, date, and format to use for the display.

Definition of multifunctional button functions

Press once: Turn the screen on/off
Press and hold for ten seconds: Restart the case display
Press and hold for one second: Open the System menu
The system menu contains the following options: About, Factory reset, and Power off.

Item list

Headphones *2

Charging case *1

Instruction *1

Charging cable *1

FCC ID: 2BXHR-MS128

FCC Warning:
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
*RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

US REP

Company Name: AOGES CO., LIMITED
Address: 1624 Market St., Ste 226, #30327
Denver CO 80202 US
Contact Information: MICHYAN LAI
Title: General Manager
Telephone No.: +1 303 623 1940
Email: laioyoyan@aoges-cl.com
FNN: 0037647647

Warranty statement

MINISO product warranty card

Product number	name	SN number	Purchase date
User info	telephone		
	address		
	Invoice number		
Sales unit information	name	(stamp)	
	address		
	telephone		

Warranty Policy

Disclaimer:
This manual does not come with any form of warranty position expression or other implication. The products, specifications and information mentioned in this manual are for reference only, and the content will be updated on the website at any time without prior notice.
Warranty statement:
The following guarantee is made for the products attached to this document: If the product is damaged due to quality defects under normal use within twelve(12) months from the date of your purchase (the "Warranty Period"), and it can be repaired, it will be repaired free of charge. If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period (a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen(13) months from the product production date.
If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.
Safety matters:
Electronic devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your wireless device in accordance with regulations in places with clear instructions. Civil Aviation: After boarding the plane, please turn off your wireless headset according to the flight attendant's instructions. It is strictly prohibited to use wireless headsets during flight to avoid interference with the aircraft communication system.
Battery usage:
Placement: It is recommended that when you are not using the wireless headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury. Children: Do not let children play with wireless headsets. Some of the small parts are detachable and may be swallowed and cause danger.

Guidelines for safe and effective use

Note: Please read this information first before using your wireless headset.
This product contains a built-in rechargeable battery. It is prohibited to use, squeeze, puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun, heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type.
After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.
During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, wireless signals, WIFI signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional high voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.
When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the headphones or stay away from interference. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

Important safety tips

Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.
This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun, heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type.
After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.
During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, wireless signals, WIFI signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional high voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.
When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the headphones or stay away from interference. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

Enjoy the company of MINISO

Creating sound to live with

Copyright©2026 MINISO Group affiliated companies and its licensors. All rights reserved

反面