

MINISO

PRODUCT MANUAL

Wireless Earbud MS209

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE PRODUCT AND KEEP IT IN A SAFE PLACE.

CATALOGUE

01 How to wear headphones correctly

02 Product Introduction

03 Touch Operation

04 Item list

05 Warranty Statement

5

9

12

21

24

Welcome to MINISO Wireless Earphones

Take out and pair it

Please remove the left side when using for the first time. Wear headphones on the right side simultaneously. When the red and blue indicator lights are on, the earphones flash alternately, and the earphones will enter Automatic pairing mode.

4

How to wear headphones correctly

1

2

5

6

Product Description

Bluetooth LED Display light

Multi function key touch position

Charging Contacts

Charging Indicator

Type-c Interface

9

10

Specification of Product

Model of Product: MS209

Version: V6.0

Effective Distance: Approx. 10m

Speaker Diameter: φ14.2mm

Impedance: 16Ω

Frequency Respinse: 20Hz-20KHz

Microphone Sensitivity: 42dB±3dB

Earphone Input: 5V≈40mA

Charging Case Input: 5V≈300mA

Charging Case Output: 5V≈80mA

Earphone Battery Capacity: 40mAh

Charging Case Battery Capacity: 300mAh

Duration: Approx. 5 H (Earphone)

Earphone Charging Time: Approx. 1.5 H

Charging Time of the Charging Case: Approx. 1.5 H

11

Touch Operation

Connect with Bluetooth device

12

13

14

Indicator Light Description

When the headset is turned on: Red and blue lights flash alternately

When the headset is turned off: The Red light flashes three times and then goes out.

Successful pairing of left and right ears: The main earphone's Red and blue lights alternate flashing, while the secondary earphone goes out.

Bluetooth device successfully connected: no light

Headphone Charging:The red indicator light on the headphones is still on After being fully charged, the red light turns to blue and stays on for 5-7 seconds. It went out afterwards

Charging of the Charging case: The red indicator light flashes, and after being fully charged, the red light stays on for a long time

Note: After turning on the device, if it is not paired and connected to the Bluetooth device for 3 minutes, it will automatically shut down; Exceeded the effective connection distance and did not connect to the Bluetooth device. After 3 minutes, it will automatically shut down with a beep sound.

Once Press

Music mode

Play/Pause

Phone mode

Call Answer/End

15

Double Press

Music mode

Double press the right ear: Volume up

Music mode

Double press the left ear: Volume decreases

16

Long Press

Wake up voice assistant

When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant

Phone mode

Press and hold the left (or right) ear multi-function button for two seconds: call rejection

17

Triple Press

Music mode

Triple press on the left ear: Previous song

Triple press on the right ear: next song

18

Clear Bluetooth pairing history

Wireless pairing mode

1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.

2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep"

19

Switch between game mode and music mode

Game mode

Press and hold the multi-function button on the right ear for 2 seconds

Music mode

Press and hold again for 2 seconds

Note 1: When using one earphone, you cannot switch between game mode and music mode.

Note 2: The factory setting defaults to music mode

20

Item list

Headphones *1

Charging case *1

21

Product warranty card

Product number		SN number	
User info	name	Purchase date	
	telephone		
	address		
	Invoice number		
Sales unit information	name	(stamp)	
	address		
	telephone		

22

23

24

Warranty Policy

Disclaimer:

This manual does not come with any form of warranty,position expression or other implication. The products, specifications and information mentioned inthis manual are for reference only, and the content will be updated on the website at any time without prior notice.

Warranty statement:

The following guarantee is made for the products attached to this document: If the product is damaged due to quality defects under normal use within twelve(12) months from the date of your purchase (the "Warranty Period"), and if it can be repaired, it will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period (a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen(13) months from the product production date.

If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.

26

Guidelines for safe and effective use

⚠ Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.

⚠ This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, Puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun/heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age.

⚠ If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type, battery usage.

⚠ After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.

⚠ During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WiFi signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional left, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.

⚠ When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

27

Important safety tips

⚠ Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.

⚠ This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, Puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun/heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age.

⚠ If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type, battery usage.

⚠ After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.

⚠ During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WiFi signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional left, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.

⚠ When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

28

Enjoy the company of MINISO

Creating sound to live with

Copyright©2025 MINISO Group affiliated companies and its licensors. All rights reserved

29

正面

背面