

[illegible]

Wireless Earphones 22 Quick Start Guide HTC NE22	Product Specifications Model: HTC NE22 Bluetooth Range: ≈10 m Version: 6.0 Speaker Diameter: 13 mm Impedance: 32 Ω Earphone power Input: 5 V≈35 mA Battery capacity: 35 mAh Battery life: ≈ 4.5 hrs Charging time: ≈ 1.5 hrs Charging case power Input: 5 V≈300 mA Output: 5 V≈70 mA Battery capacity: 300 mAh Charging time: ≈ 1.5 hrs Earphone recharges: 3 charges (when case is fully charged) 1 2	What's in the box Charging case 2 Earphones Quick Start Guide USB-C cable 6 ear tips 1 3	Components Touchpad ----- Earphone LED ----- Charging contact ----- Earphone speaker ----- Charging case LED ----- USB Type-C port ----- 1 4	Magnetic self-adaptive speakers Switch between True Wireless Stereo (TWS) and Open Wireless System (OWS) modes TWS Mode: Attach the magnetic speakers. OWS Mode: Detach the magnetic speakers. Comfort adjustment Automatically adapts to the user's ear contour for optimal wearing angle, achieving a secure fit and comfortable experience. 1 5	To ensure earphones are being charged when in charging case 1. Rotate the earbud so that it's scale marker is aligned with the triangular marker on the earphone (see illustration.) 2. Place each earphone into its corresponding charging slot. 3. Check that the earphone LED lights up solid red. Note: • If charging issues occur, redo the steps above to ensure proper contact between the earphones and charging case. Clean the charging case's magnetic area weekly with a dry, soft cloth to maintain optimal magnetic and charging performance. 1 6	Take out and pair the earphones If you're using the earphones for the first time, remove both from the charging case. The LED on one earphone will blink white and red alternately, indicating that they are in pairing mode. Note: • If the earphones have not been paired with each other, they will automatically enter pairing mode when turned on. You'll hear two beeps when pairing is successful. • If the earphones have been paired before, they will automatically reconnect to each other when turned on. You'll hear a beep when they connect. 1 7	How to put on the earphones 1 2	Power on and off 3 4	Power on Taking the earphones out of the charging case will automatically turn them on. To manually turn on each earphone, press and hold the touchpad for three seconds. Power off Placing the earphones in the charging case will automatically turn them off. To manually turn off each earphone, press and hold the touchpad for five seconds. Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected. 1 10														
Connect to Bluetooth device On your device, turn on Bluetooth and choose to connect to "HTC NE22". 1 11	Basic operations Power on/off 3s/5s Phone mode x1 x2s Music mode x2 x2 x3 x3 Reset earphones x1 x2s x2s 1 12	Key functions • Play/Pause: Tap either earphone once. • Volume up: Tap the right earphone twice. • Volume down: Tap the left earphone twice. • Play previous track: Tap the left earphone three times. • Play next track: Tap the right earphone three times. • Answer/End call: Tap either earphone once. • Reject call: Press and hold either earphone for two seconds. • Activate voice assistant: Press and hold the left earphone for two seconds. Note: When using a single earphone only, press and hold the active earphone for two seconds. • Switch between Game and Music modes: Music mode is the default mode. Press and hold the right earphone for two seconds to switch between modes. (The louder notification sound indicates Game mode.) Note: Mode switching is disabled when you're using a single earphone only. Indicator LEDs <table> <tr> <th>Earphone LED</th><th>Status</th></tr> <tr> <td>Blinking white and red</td><td>Both earphones: Powered on Single earphone: Unpaired</td></tr> <tr> <td>Solid red</td><td>Charging</td></tr> <tr> <td>Off</td><td>Paired or fully charged</td></tr> <tr> <th>Charging case LED</th><th>Status</th></tr> <tr> <td>Solid white</td><td>Earphones charging</td></tr> <tr> <td>Blinking red</td><td>Case charging</td></tr> <tr> <td>Solid red</td><td>Case fully charged</td></tr> </table> 1 13	Earphone LED	Status	Blinking white and red	Both earphones: Powered on Single earphone: Unpaired	Solid red	Charging	Off	Paired or fully charged	Charging case LED	Status	Solid white	Earphones charging	Blinking red	Case charging	Solid red	Case fully charged	How to reset the earphones If the earphones fail to pair or reconnect to each other, reset them by tapping both earphones five times simultaneously. Note: Resetting the earphones will clear the Bluetooth pairing history. 1 14	Important Safety Instructions Carefully read all the safety instructions in this document before using the product. General safety instructions • Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be bent or squeezed. • Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device. Any unauthorized modification to the product voids the warranty. • Only use the product in environments where Bluetooth transmission is permitted. Personal safety instructions • Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating. • Do not use the product when performing high-risk tasks that require your full attention. • For your hearing protection, do not listen at high volume for long periods. • Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking. 1 15	Battery safety instructions The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal. • Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight, that is free from extreme temperature, pressure, and humidity. Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F). • Do not use or store the product in dust-prone, smoke-prone, high-temperature, high-pressure, or highly humid environments. Keep the product dry and away from liquids or moisture. • Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC. • Do not use the product while charging. • Do not leave the product charging for longer than eight hours. • Dispose of the product responsibly according to your local waste management guidelines. 1 16	FCC ID: 2BHJR-NE22 FCC Caution This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. 1 17	-Consult the dealer or an experienced radio/TV technician for help. *RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. US REP Company name: MIRAMONT SOLUTIONS LLC Company address: 34218 HOURGLASS ST, TEMECULA, CA 92592 United States FRN: 0036313369 Agent name: Wenyi Wang Title: CEO Email: wenyiwang@miramontsolutions.com Phone: 951 401 3633 1 18
Earphone LED	Status																						
Blinking white and red	Both earphones: Powered on Single earphone: Unpaired																						
Solid red	Charging																						
Off	Paired or fully charged																						
Charging case LED	Status																						
Solid white	Earphones charging																						
Blinking red	Case charging																						
Solid red	Case fully charged																						