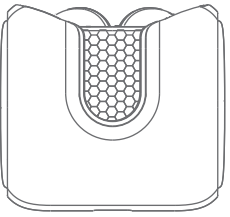 
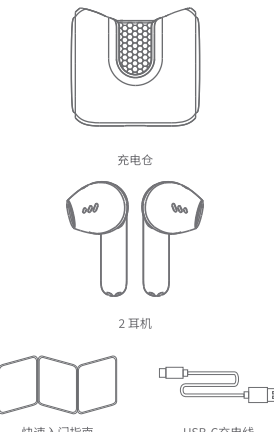 
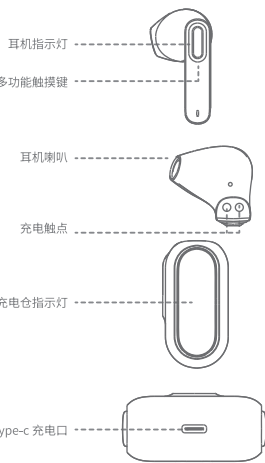 
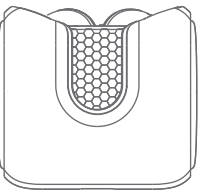 
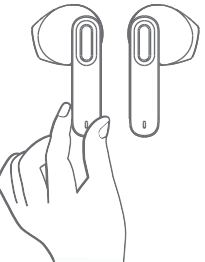 
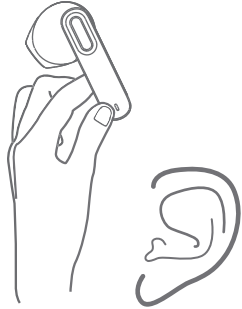 
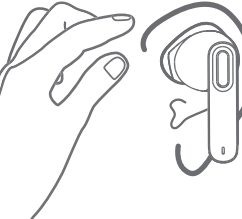 
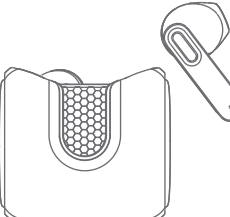 
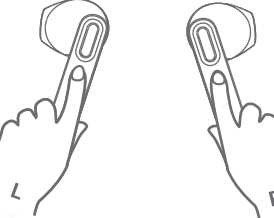 
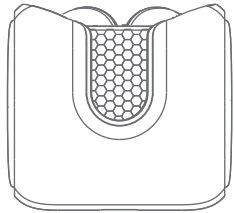 
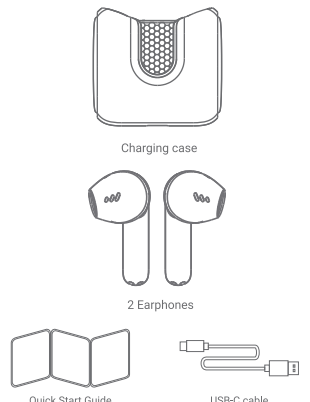 
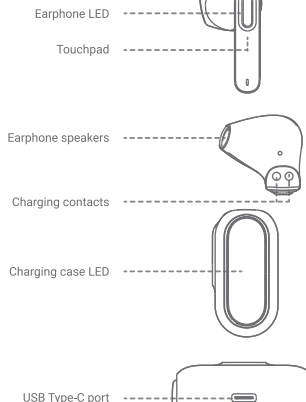 
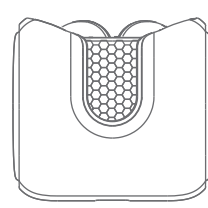 
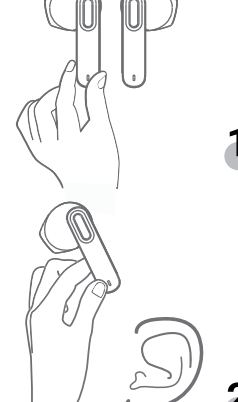 
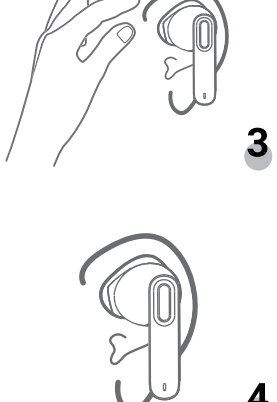 
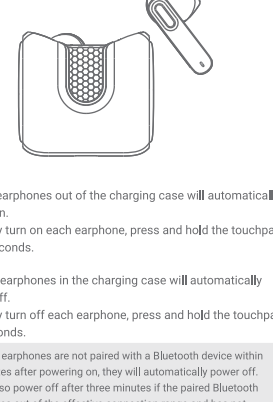 
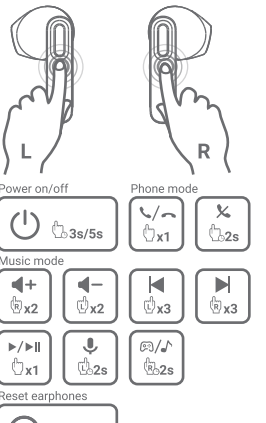 
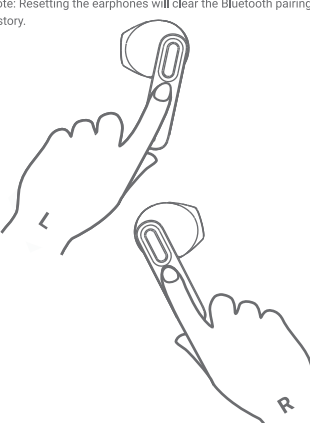 


htc 无线蓝牙耳机49  快速入门指南 使用前请阅读使用说明书 HTC NE49	产品规格 型号:HTC NE49 蓝牙 范围: ≈10m 版本:6.0 喇叭 直径:12mm 阻抗:32Ω 耳机功率 输入:5V=30mA 电池容量:30mAh 使用时间:≈4小时 充电时间:≈1.5小时 充电仓功率 输入:5V=300mA 输出:5V=60mA 电池容量:300mAh 充电时间:≈1.5小时 充电仓充满电时,能给耳机充电约3次	物品清单  快速入门指南 USB-C充电线	部件 	取出耳机并配对  如果您第一次使用耳机,请将两个耳机从充电仓中取出,其中一个耳机的LED灯将会交替闪烁青色,表示它们处于配对模式。 注: •如果耳机未与任何设备配对,打开后会自动进入配对模式。配对成功后,您会听到提示音。 •如果耳机之前已配对,打开后会自动重新连接,连接时您会听到提示音。	如何佩戴耳机  1	 2	 3	 4																																	
开机和关机  开机 自动开机:将耳机从充电仓中取出,耳机开机。 手动开机:长按3秒,耳机开机。 关机 自动关机:耳机放入充电仓中,耳机关机。 手动关机:长按5秒,耳机关机。 注:当耳机开机后,3分钟内与蓝牙设备配对,便会自动关机;当配对的蓝牙设备超出信号有效连接距离,且未重新连接时,3分钟后,耳机自动关机。	连接到蓝牙设备  在您的设备上,打开蓝牙并选择连接至“HTC NE49”。	基本操作  开机/关机 长按3s/5s 音乐模式 音量+/- 语音助手 长按2s 清除蓝牙配对历史记录 长按5s	功能操作 • 暂停/播放:轻触任一耳机一次 • 音量加:轻触右耳机二次 • 音量减:轻触左耳机二次 • 上一曲:轻触左耳机三次 • 下一曲:轻触右耳机三次 • 接听/挂断电话:轻触任一耳机一次 • 通话拒接:按住任一耳机2秒 • 启动语音助手:按住左耳机2秒 注:单耳使用时,按住已开机的耳机2秒,均可激活语音助手 • 游戏模式与音乐模式切换:按住右耳机2秒并切换 注:单耳使用时,无法切换游戏模式和音乐模式 注:出厂设置默认为音乐模式 注:通知声音较大的能游戏模式 指示灯显示 <table border="1"> <thead> <tr> <th>耳机指示灯</th> <th>状态</th> </tr> </thead> <tbody> <tr> <td>青灯闪烁</td> <td>两个耳机:开机 单耳机:未配对</td> </tr> <tr> <td>青灯常亮</td> <td>充电中</td> </tr> <tr> <td>天灯</td> <td>配对成功或充满电</td> </tr> <tr> <td>充电仓指示灯</td> <td>状态</td> </tr> <tr> <td>青灯常亮</td> <td>耳机充电中或充电仓充满电</td> </tr> <tr> <td>青灯闪烁</td> <td>充电仓充电中</td> </tr> </tbody> </table>	耳机指示灯	状态	青灯闪烁	两个耳机:开机 单耳机:未配对	青灯常亮	充电中	天灯	配对成功或充满电	充电仓指示灯	状态	青灯常亮	耳机充电中或充电仓充满电	青灯闪烁	充电仓充电中	如何清除蓝牙配对历史记录  双耳从充电仓取出后会自动开机配对,耳机未与蓝牙设备连接或耳机从蓝牙设备取消连接状态下,分别对左耳机和右耳机连续五击多功能键,提示音“嘟”四声后,耳机自动关机后将双耳机放回充电仓,再将双耳机取出,双耳机会自动配对,完成后即可连接蓝牙设备使用。 适用于以下情况: A:双耳无法配对时,单边音时,双配对名时。 B:使用单耳机分别连接不同蓝牙设备时。 C:清除连接的所有蓝牙设备时。 特别提示: 当单边耳机出现无声,或者无法配对时,请按以上步骤重置操作。	产品中有害物质名称及含量 <table border="1"> <thead> <tr> <th rowspan="2">部件名称</th> <th colspan="4">有害物质</th> </tr> <tr> <th>铅(Pb)</th> <th>汞(Hg)</th> <th>镉(Cd)</th> <th>六价铬(Cr(VI))</th> </tr> </thead> <tbody> <tr> <td>印刷电路组件</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>外壳等小结构件</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> </tbody> </table> 本表格依据SJ/T 11364的规定编制。 ○:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。 ×:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。 表中标记“X”的部件,皆因全球技术发展水平限制而无法实现有害物质的替代。 印刷电路板组件:包括印刷电路板及其零部件,电子元器件等,根据产品型号不同,您所购买的产品可能不会含有以上所有部件。	部件名称	有害物质				铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	印刷电路组件	○	○	○	○	外壳等小结构件	○	○	○	○	重要安全说明 在使用本产品之前,请仔细阅读本说明书中的所有安全说明。 常规安全说明 • 小心使用本产品,并将其存放在没有极端温度、高温高压和潮湿的清洁环境中,确保产品存放在不易弯曲或挤压的地方。 • 维修和更换只能由授权的售后服务人员进行,以防受伤或损坏设备。请勿自行拆卸或更换产品的任何部件,以防受伤或损坏设备。 • 对产品的任何未经授权的修改都将使保修无效。 • 仅在允许蓝牙传输的环境中使用本产品。 个人安全说明 • 如果产品有明显缺陷或出现磨损或温度过高等异常,请勿使用。 • 执行需要全神贯注的高风险任务时,请勿使用本产品。 • 为了保护您的听力,请勿长时间高音量聆听。 • 请将产品及其包装放在儿童和宠物接触不到的地方,以防发生吞咽和窒息等事故。 电池安全说明 该产品内置可充电电池,请阅读以下说明,确保安全使用和处置。 • 请勿将产品长时间静置在热源上,如明火或阳光直射。 • 仅将产品存放在环境温度为 0°C 至 35°C (32°F 至 95°F) 的环境中。 • 请勿在易产生灰尘、烟雾、高压或高湿度的环境中使用或存放本产品。 • 保持产品干燥,远离液体或湿气。 • 只能使用经 FCC 或 CCC 认证、输出电压为DC 5V/1A的充电器。 • 充电时不要使用产品。 • 产品充电时间不要超过8小时。 • 按照当地的废物管理规定负责任地处理产品。	售后服务电话:4009933981	htc
耳机指示灯	状态																																								
青灯闪烁	两个耳机:开机 单耳机:未配对																																								
青灯常亮	充电中																																								
天灯	配对成功或充满电																																								
充电仓指示灯	状态																																								
青灯常亮	耳机充电中或充电仓充满电																																								
青灯闪烁	充电仓充电中																																								
部件名称	有害物质																																								
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))																																					
印刷电路组件	○	○	○	○																																					
外壳等小结构件	○	○	○	○																																					

HTC Wireless Earphones 49  Quick Start Guide HTC NE49	Product Specifications Model: HTC NE49 Bluetooth Range: ≈10 m Version: 6.0 Speaker Diameter: 12 mm Impedance: 32 Ω Earphone power Input: 5 V=30 mA Battery capacity: 30 mAh Battery life: ≈ 4 hrs Charging time: ≈ 1.5 hrs Earphone recharges: 3 charges (when case is fully charged) Charging case power Input: 5 V=300 mA Output: 5 V=60 mA Battery capacity: 300 mAh Charging time: ≈ 1.5 hrs Earphone recharges: 3 charges (when case is fully charged)	What's in the box  3 Components  4 Take out and pair the earphones  5 How to put on the earphones  6	Power on and off  7 Connect to Bluetooth device  8	Power on Taking the earphones out of the charging case will automatically turn them on. To manually turn on each earphone, press and hold the touchpad for three seconds. Power off Placing the earphones in the charging case will automatically turn them off. To manually turn off each earphone, press and hold the touchpad for five seconds. Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected. 9																						
Basic operations  10	Key functions • Play/Pause: Tap either earphone once. • Volume up: Tap the right earphone twice. • Volume down: Tap the left earphone twice. • Play previous track: Tap the left earphone three times. • Play next track: Tap the right earphone three times. • Answer/End call: Tap either earphone once. • Reject call: Press and hold either earphone for two seconds. • Activate voice assistant: Press and hold the left earphone for two seconds. Note: When using a single earphone only, press and hold the active earphone for two seconds. • Switch between Game and Music modes: Music mode is the default mode. Press and hold the right earphone for two seconds to switch between modes. (The louder notification sound indicates Game mode.) Note: Mode switching is disabled when you're using a single earphone only. Indicator LEDs <table border="1"> <thead> <tr> <th>Earphone LED</th><th>Status</th></tr> </thead> <tbody> <tr> <td>Blinking cyan</td><td>Both earphones: Powered on Single earphone: Unpaired</td></tr> <tr> <td>Solid cyan</td><td>Charging</td></tr> <tr> <td>Off</td><td>Paired or fully charged</td></tr> </tbody> </table> <table border="1"> <thead> <tr> <th>Charging case LED</th><th>Status</th></tr> </thead> <tbody> <tr> <td>Solid cyan</td><td>Earphones charging or Case fully charged</td></tr> <tr> <td>Blinking cyan</td><td>Case charging</td></tr> </tbody> </table> 11	Earphone LED	Status	Blinking cyan	Both earphones: Powered on Single earphone: Unpaired	Solid cyan	Charging	Off	Paired or fully charged	Charging case LED	Status	Solid cyan	Earphones charging or Case fully charged	Blinking cyan	Case charging	How to reset the earphones If the earphones fail to pair or reconnect to each other, reset them by tapping both earphones five times simultaneously. Note: Resetting the earphones will clear the Bluetooth pairing history.  12 Important Safety Instructions Carefully read all the safety instructions in this document before using the product. General safety instructions • Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be bent or squeezed. • Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device. Any unauthorized modification to the product voids the warranty. • Only use the product in environments where Bluetooth transmission is permitted. Personal safety instructions • Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating. • Do not use the product when performing high-risk tasks that require your full attention. • For your hearing protection, do not listen at high volume for long periods. • Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking. 13 Battery safety instructions The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal. • Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight. • Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F). • Do not use or store the product in dust-prone, smoke-prone, high-temperature, high-pressure, or highly humid environments. • Keep the product dry and away from liquids or moisture. • Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC. • Do not use the product while charging. • Do not leave the product charging for longer than eight hours. • Dispose of the product responsibly according to your local waste management guidelines. 14	FCC ID: 2BHJR-NE49 FCC Caution This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. 15 US REP <table border="1"> <tbody> <tr> <td>Company name: MIRAMONT SOLUTIONS LLC</td></tr> <tr> <td>Company address: 19 GEORGETOWN, RIVINE, CA 92612</td></tr> <tr> <td>United States</td></tr> <tr> <td>FRN: 0036313369</td></tr> <tr> <td>Agent name: Wenyi Wang</td></tr> <tr> <td>Title: CEO</td></tr> <tr> <td>Email: wenyiwang@miramontsolutions.com</td></tr> <tr> <td>Phone: 951 401 3633</td></tr> </tbody> </table> 16	Company name: MIRAMONT SOLUTIONS LLC	Company address: 19 GEORGETOWN, RIVINE, CA 92612	United States	FRN: 0036313369	Agent name: Wenyi Wang	Title: CEO	Email: wenyiwang@miramontsolutions.com	Phone: 951 401 3633	Customer Service Email: service@yheml.net  Legal notice Trademarks and permissions: HTC and the HTC logo are trademarks of HTC Corporation and used under license by Shenzhen Brands World Technology Co., Ltd. Copyright © 2025 Shenzhen Brands World Technology Co., Ltd. All rights reserved. THIS DOCUMENT IS FOR INFORMATION PURPOSES ONLY AND DOES NOT CONSTITUTE ANY KIND OF WARRANTY. 17
Earphone LED	Status																									
Blinking cyan	Both earphones: Powered on Single earphone: Unpaired																									
Solid cyan	Charging																									
Off	Paired or fully charged																									
Charging case LED	Status																									
Solid cyan	Earphones charging or Case fully charged																									
Blinking cyan	Case charging																									
Company name: MIRAMONT SOLUTIONS LLC																										
Company address: 19 GEORGETOWN, RIVINE, CA 92612																										
United States																										
FRN: 0036313369																										
Agent name: Wenyi Wang																										
Title: CEO																										
Email: wenyiwang@miramontsolutions.com																										
Phone: 951 401 3633																										