

HTC

无线蓝牙耳机H58

产品规格

型号:H5C HES58

蓝牙

范围:≈10m
版本:v6.0

喇叭

直径:14mm
阻抗:16Ω

耳机功率

输入:5V=30mA
电池容量:30mAh
使用时间:≈4小时
充电时间:≈1.5小时

充电仓功率

输入:5V=400mA
输出:5V=60mA
电池容量:400mAh
充电时间:≈1.5小时
充电器充满电时,能给耳机充电约3次

快速入门指南
使用前请阅读使用说明书
HTC N5S8

物品清单

2 耳机
充电仓
快速入门指南
USB-C充电线

部件

多功能触控键
耳机指示灯
充电触点
耳机喇叭
Type-C充电口
多功能按键

取出耳机并配对

如果您是第一次使用耳机,请将两个耳机从充电仓中取出。其中一个耳机的LED灯将会交替闪烁蓝灯和红灯,表示它们处于配对模式。
注:
•如果将耳机与任何设备配对,打开后会自动进入配对模式。配对成功后,您会听到两声滴答音。
•如果耳机之前已配对,打开后会自动重新连接。连接时您会听到嘟嘟响声。

如何佩戴耳机

功能操作

暂停/播放:轻触任一耳机一次
音量加:轻触右耳机二次
音量减:轻触左耳机三次
上一曲:轻触左耳机三次
下一曲:轻触右耳机三次
接听/挂断电话:轻触任一耳机一次
通话结束:继续任一耳机一秒
启动语音助手:长按左耳机秒
注意:单耳使用时,按住已开机的耳机2秒,均可激活语音助手
游戏模式与音乐模式切换:按左右耳机均切换
注意:单耳使用时,无法切换游戏模式和音乐模式
注:出厂设置默认为音乐模式
注:通知音较大的娱乐游戏模式

指示灯显示

耳机指示灯	状态
蓝灯和红灯交替闪烁	两个耳机:开机 蓝灯红:未配对
蓝灯常亮	充电中
灭灯	配对成功或充满电

相机功能

需要连接到蓝牙耳机设备,如手机

点击(点) :打开拍照应用。单击按钮,设备开始照像
此功能仅适用于手机自拍相机使用,可能不兼容所有手机型号。

语言助手

点击(A) :激活手机的语音助手

游戏

点击(B) :进入游戏功能启动

系统菜单

系统主屏
关于
智能家居
我的设备
关机

点击进入关于、重启、关机等应用功能。

亮度调节

通过屏幕上方调出亮度条
休眠时间:靠近无接触睡眠期间,可选择休眠时间

表盘设置

在主屏幕上,按住屏幕三秒钟更改表壳;
您也可以在此“设置”中更改它。

背景壁纸

可以更换您的背景

时间设定

可设置当前的日期和时间;闹钟铃声

语言设置

可以选择不同的地区语言,
修改默认“开机后”的语言选择。

翻译

同步至APP内容

系统设置

点击进入充值显示屏交互功能设置

重要安全说明

在使用本产品之前,请务必仔细阅读本说明书中的所有安全说明。

常规安全说明

小心使用本产品,并将其存放在没有极端温度、高温高压和潮湿的清洁环境中。确保产品在不易着火或易燃的地方。
•请勿在更动或由他人未经授权的情况下进行。
•请勿自行拆卸或更换产品的任何部件,以防受伤或损坏设备。
对产品的任何未经授权的修改都可能使保修无效。
•仅在允许信号传播的环境中使用本产品。

个人安全说明

•避免在产品明显缺陷或缺陷出现时继续使用该产品,请使用本产品。
•执行需要全神贯注的高风险任务,请勿使用本产品。
•为了保护您的听力,请在长时间听音乐或收听。
•请勿将产品及包装放在儿童及宠物能触及到的地方,以防止发生触电等意外事故。

电池安全说明

该产品设计为可充电式,请参阅以下说明,确保安全使用和处置。
•请勿将产品长时间暴露在热源中,如火焰或阳光直射。
•切勿将产品存放在环境温度高于 0°C 至 35°C (32°F 至 95°F) 的环境中。
•请勿将产品置于火灾、液体、高湿、高压或高温度的环境中使用或存放本产品。
•保持产品干燥,远离液体或湿气。
•只能使用经 FCC 或 CCC 认证,输出电压为 DC 5V/1A 的充电器。
•请勿对产品进行不当处理。
•产品充电时间不要超过 2 小时。
•按照当地的废物管理规定负责正确处理本产品。

法律声明

商标和许可:
HTC 和 HTC 标志是 HTC 公司的商标。
授权经销商由三星电子株式会社授权使用。
©2022 年 © 三星电子株式会社有限公司。
三星公司仅供参考,不构成任何形式的保证。本公司保留所有权利。

hTC
Wireless Earphones 58

Quick Start Guide
hTC NE58

Product Specifications
Model: hTC NE58

Bluetooth
Range: <10 m
Version: 6.0

Speaker
Diameter: 14 mm
Impedance: 16 Ω

Earphone power
Input: 5 V=30 mA
Battery capacity: 30 mAh
Battery life: <4 hrs
Charging time: <1.5 hrs

Charging case power
Input: 5 V=400 mA
Output: 5 V=60 mA
Battery capacity: 400mAh
Charging time: <1.5 hrs
Earphone recharges: 3 charges (when case is fully charged)

What's in the box

2 Earphones

Charging case

Quick Start Guide

USB-C cable

Components

Touchpad
Earphone LED
Charging contacts

Earphone speaker

Charging case display

USB Type-C port
Multifunction button

Take out and pair the earphones

If you're using the earphones for the first time, remove both from the charging case. The LED on one earphone will blink blue and red alternately, indicating that they are in pairing mode.

Note:
• If the earphones have not been paired with each other, they will automatically enter pairing mode when turned on. You'll hear two beeps when pairing is successful.
• If the earphones have been paired before, they will automatically reconnect to each other when turned on. You'll hear a beep when they connect.

How to put on the earphones

Power on and off

Power on
Taking the earphones out of the charging case will automatically turn them on.
To manually turn on each earphone, press and hold the touchpad for three seconds.

Power off
Placing the earphones in the charging case will automatically turn them off.
To manually turn off each earphone, press and hold the touchpad for five seconds.

Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected.

Connect to Bluetooth device

On your device, turn on Bluetooth and choose to connect to 'hTC NE58'.

Basic operations

Power on/off

Phone mode

Music mode

Reset earphones

Key functions

• Play/Pause: Tap either earphone once.
• Volume up: Tap the right earphone twice.
• Volume down: Tap the left earphone twice.
• Play previous track: Tap the left earphone three times.
• Play next track: Tap the right earphone three times.
• Answer/End call: Tap either earphone once.
• Reject call: Press and hold either earphone for two seconds.
• Activate voice assistant: Press and hold the left earphone for two seconds.
Note: When using a single earphone only, press and hold the active earphone for two seconds.
• Switch between Game and Music modes: Music mode is the default mode. Press and hold the right earphone for two seconds to switch between modes. (The louder notification sound indicates Game mode.)
Note: Mode switching is disabled when you're using a single earphone only.

Indicator LEDs

Earphone LED	Status
Blinking blue and red	Both earphones: Powered on Single earphone: Unpaired
Solid blue	Charging
Off	Paired or fully charged

How to reset the earphones

If the earphones fail to pair or reconnect to each other, reset them by tapping both earphones five times simultaneously.
Note: Resetting the earphones will clear the Bluetooth pairing history.

Case display: Basic operations

Turn on display
• Tap the display twice.
• Press the multifunction button once.

Turn off display
Press the multifunction button once to turn off the display. The display automatically turns off after 18 seconds of inactivity.

Note: Initial activation required for first-time use.
Do any of the following:
• Charge the charging case via the USB Type-C port.
• Press and hold the multifunction button for five seconds.

Multifunction button operations

Press once: Turn the screen on/off.
Press three times: Link earphones to charging case.
Press and hold for five seconds: Enter the system menu (About, Restore Factory Settl, Restart, Power Off)
Press and hold for three seconds: Power on when the device is off

Status icons guide

Status	Status
Solid red	Earphones in case, not connected to phone
Solid white	Case connected to earphones
Solid blue	Earphones paired to phone
Solid blue with earphone icon	Status
Blinking green	Earphone charging
Solid white with earphone icon	Earphone fully charged
Solid white with battery icon	Status
Green lightning icon	Charging case is being charged
Solid white with battery icon	Charging case is fully charged

Case display: Feature overview

Lock screen

Swipe left or right to unlock the screen.

Menu

Tap an item to access its options, swipe right to exit the interface.

Music

Make sure your earphones are connected to your phone and the TikTok app is open.
For iOS devices, AssistiveTouch must be turned on in Settings > Accessibility > Touch > AssistiveTouch.

TikTok

Go back to the previous video
Like the current video
Go to the next video

This feature only works with the TikTok app and may not be compatible with all phone models.

Equalizer

Tap a preset equalizer to use it.

Find my earphones

Tap the left or right earphone icon depending on which earphone you want to find.
Tap again when you find the earphone to stop the beep.

Camera

Make sure your earphones are connected to your phone.

Tap to open the phone's camera app and then press the multifunction button to take photos.
This feature only works with the pre-installed camera app and may not be supported on all phone models.

Voice assistant

Tap to activate your phone's voice assistant.

Game

Tap to switch and launch the corresponding game

Translation

Displays translated content synchronized with the connected app.

System Settings

Tap an item to access its options.

System Menu

Tap to enter About, Restore Factory Settl, Restart, power Off

Brightness

Brightness: Swipe up or down.
Screen timeout: Swipe left to select a time for the screen to turn off when left idle.

Background Wallpaper

Can be switched to other Background Wallpapers.

Dial setting

On the Lock screen, press and hold the screen for three seconds to change the wallpaper. You can also change it in Settings.

Time Settings

Set the date and time to set it. Choose also the time format you want to use.

Important Safety Instructions

Carefully read all the safety instructions in this document before using the product.

General safety instructions

- Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be bent or squeezed.
- Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device. Any unauthorized modification to the product voids the warranty.
- Only use the product in environments where Bluetooth transmission is permitted.

Personal safety instructions

- Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating.
- Do not use the product when performing high-risk tasks that require your full attention.
- For your hearing protection, do not listen at high volume for long periods.
- Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking.

Battery safety instructions

The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal.

- Keep the product away from prolonged exposure to heat sources such as open fire or direct sunlight.
- Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F).
- Do not use or store the product in dust-proof, smoke-proof, high-temperature, high-pressure, or highly humid environments.
- Keep the product dry and away from liquids or moisture.
- Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC.
- Do not use the product while charging.
- Do not leave the product charging for longer than eight hours.
- Dispose of the product responsibly according to your local waste management guidelines.

FCC ID: 2BZHJ-NE58

FCC Caution:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

US REP

Company name: MIRAMONT SOLUTIONS LLC Company address: 19 GLENGLENDOW, IRVINE, CA 92612 United States FRN: 0036313369 Agent name: Wenli Wang Title: CEO Email: wenliwang@miramontsolutions.com Phone: 951 401 3633
--

Customer Service Email: service@yihemi.net

hTC

Legal notice
Trademarks and permissions:
hTC and the hTC logo are trademarks of hTC Corporation and used under license by Shenzhen Brands World Technology Co., Ltd.
Copyright © 2025 Shenzhen Brands World Technology Co., Ltd.
All rights reserved.
THIS DOCUMENT IS FOR INFORMATION PURPOSES ONLY AND DOES NOT CONSTITUTE ANY KIND OF WARRANTY.