

HTC

无线蓝牙耳机NE68

产品规格

型号: HTC NE68

蓝牙

范围: ≈ 10m
版本: 6.0

喇叭

直径: 13mm
阻抗: 32Ω

耳机功率

输入: 5V≈25mA
电池容量: 25mAh
使用时间: ≈ 3.5小时
充电时间: ≈ 1.5小时

充电仓功率

输入: 5V=400mA
输出: 5V=50mA
额定容量: 400mAh
充电时间: ≈ 1.5小时
充电仓充满电时, 能给耳机充电约3次

快速入门指南
使用前请阅读使用说明书
HTC NE68

物品清单

2 耳机

充电仓

快速入门指南 USB-C充电线 挂绳

部件

耳机指示灯
多功能按键

耳机喇叭

充电触点

充电仓显示屏

Type-C 充电口

多功能按键

取出耳机并配对

如果您是第一次使用耳机, 请将两个耳机从充电仓中取出, 其中一个耳机的LED灯将开始闪烁白灯, 表示它们处于配对模式。
注意:
-如果耳机与任何设备配对, 打开后会自动进入配对模式。
-配对成功后, 您会听到提示音。
-如果耳机之前已配对, 打开后会自动重新连接。连接时会听到提示音。

如何佩戴耳机

1 2

开机和关机

开机
自动开机: 耳机在充电仓中, 打开充电仓屏幕盖子, 耳机开机。
手动开机: 长按3秒, 耳机开机。
关机
自动关机: 耳机放入充电仓中, 关闭充电仓屏幕盖子, 耳机关机。
手动关机: 长按3秒, 耳机关机。
注: 当耳机开机后, 30秒未与蓝牙设备配对, 便会自动关机; 当配对的蓝牙设备超出信号有效传输距离, 且未重新配对时, 30秒后, 耳机自动关机。

连接到蓝牙设备

在您的设备上, 打开蓝牙并选择连接“HTC NE68”。

基本操作

功能操作

- 暂停/播放: 轻触任一耳机一次
- 音量加: 轻触右耳机二次
- 音量减: 轻触左耳机二次
- 上一曲: 轻触左耳机三次
- 下一曲: 轻触右耳机三次
- 接听/挂断电话: 轻触任一耳机一次
- 通话结束: 按压任一耳机2秒
- 自动返回待机: 按压任一耳机3秒
注: 单耳使用时, 按住已开机的耳机3秒, 均可激活语音助手。
- 游戏模式与音乐模式切换: 按压右耳机2秒切换
注: 单耳使用时, 无法切换游戏模式和音乐模式
注: “出厂”设置默认与游戏模式
注: 通知声音较大的游戏模式

指示灯显示

耳机指示灯	状态
白灯闪烁	两个耳机/开机 单耳机/未配对
白灯常亮	充电中
灭灯	配对成功或充满电

如何清除蓝牙配对历史记录

双耳从充电仓取出后会自动开机配对, 耳机将与蓝牙设备连接或耳机从蓝牙设备断开连接状态下, 分别在左右耳机的耳机模块五击多功能键, 提示音“嘀”四声后, 耳机自动关机后将双耳机放回充电仓, 再将双耳机取出, 双耳机会自动配对, 完成后即可继续正常使用。
适用于以下情况:
A: 双耳无法配对时, 单边静音, 双配对暂时。
B: 使用单耳机分道连接不同蓝牙设备时。
C: 清除设备的所有蓝牙设备。
特别提示:
当边蓝牙耳机出现无音, 或者无法配对时, 请按以上步骤重置操作。

充电仓基本操作

打开展示屏
开启展示屏: 打开充电仓盖子, 屏幕会自动点亮。
触控展示屏: 触摸展示屏时, 双盖显示屏区域(即开闭扣锁周围区域)将亮起, 带来更多触控反馈。
关闭展示屏
触控关闭: 点亮展示屏, 3秒无操作后, 展示屏将自动熄灭。
手动关闭: 点击充电仓多功能键两次, 充电仓显示屏熄灭。
注: 展示屏需要解锁才能唤醒。
执行以下任一操作:
- 连续3次Type-C接口插入充电仓底座。
- 放在充电仓多功能键附近的手势。

多功能按键功能

单击一次: 关闭/开屏
三击: 充电仓与耳机进行配对。
长按3秒: 关于、设置菜单、发出出厂设置
长按5秒: 强制重启、关机或完全关机

图标介绍

颜色	状态
红色	耳机未连接到手机和充电仓
白色	充电仓已连接到耳机, 耳机未连接到手机
蓝色	充电仓已连接到耳机, 且耳机已连接到手机
绿色	状态
白色	耳机在盒中
绿色	耳机在盒中(在盒中)
蓝色	状态
橙色闪电	充电仓充电中

主界面

进入语音助手界面 进入科普界面 进入休闲界面 进入音乐界面

向左滑动: 进入功能菜单界面 向右滑动: 进入快速访问菜单 进入音乐界面

功能菜单

点击进入对应功能界面

快速访问菜单

点击进入对应功能界面

音乐播放

上一曲 播放/暂停 下一曲 音量控制

AI翻译

同步显示APP翻译内容

均衡器

切换均衡器预设

自定义功能设置

点击以设置所需的快捷方式

空间音效

音乐模式 游戏模式

寻找耳机

耳机与充电仓连接后, 拖曳寻找的耳机。
点击 ●●●, 寻找双耳机时会发出滴滴警告音

语音助手

请点击 ●
进行语音控制(需连耳机)

计算机

点击以进行计算

游戏

点击小鸟开始游戏

系统设置

向上滚动所选任意一项, 以访问其选项

系统菜单

点击进入主手、推出出厂、童锁、关机
对应功能界面

亮度调节

上下滑动亮度或按亮度调暗按钮
亮度调节期间。

表盘

换表盘, 点击表盘图以应用它

主题

换主题, 点击主题图以应用它

背景壁纸

换壁纸, 点击图片以应用它

时间设定

可设置当前的时间和日期, 时间格式

语言

勾选不同国家/地区的语言

触屏唤醒

点击开关按钮以打开或关闭(可关闭防止意外亮屏)

抖音网页和点赞功能

确保您的耳机已连接到手机且音乐软件已打开。
对于电子设备, 必须为“允许”+“允许辅助功能”-辅助功能。
切换到上一个短视频 当前页面的短视频 下一个短视频
此功能仅适用于抖音软件使用, 可能不兼容所有手机型号。

相机功能

需先连接到蓝牙设备使用, 如手机

产品中有害物质名称及含量

产品中有有害物质名称及含量

部件名称	有害物质	有害物质	有害物质	有害物质	有害物质
	Pb	Hg	Cd	Cr VI	Pb
印刷电路板组件	○	○	○	○	○
外壳等小塑料件	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。
注: 表示该有害物质在该部件所有含该材料中的含量均符合GB/T 26572规定的限量要求如下:
- 超出GB/T 26572规定的限量要求。
- 表示该有害物质至少在该部件的某一均质材料中的含量符合GB/T 26572规定的限量要求。
本表格仅用于识别部件, 因全球技术发展水平限制而无法实现有害物质零排放。
印刷电路板组件: 包括印刷电路板及其零部件。
电子元件等: 根据产品类型不同, 您所购买的产品可能不会含有以上所有部件。

主要安全说明

在使用本产品之前, 请务必仔细阅读本说明书中的所有安全说明。

常规安全说明

- 小心处理本产品, 并确保存放在没有腐蚀性、高压和潮湿的清洁环境中, 确保产品在不能弯曲或挤压的地方。
- 维修和更换只能由授权的售后服务人员进行。
- 请勿自行拆修或更改本产品任何责任部分, 以免受损坏或危险。
- 对产品造成的未来损坏或故障, 制造商概不负责。
- 仅在允许零件替换的环境中使用本产品。

人身安全说明

- 如果产品有明显缺陷或因外观破损造成高温异常, 请勿使用。
- 执行重要任务时的安全风险责任自负, 请勿使用本产品。
- 为了保持您的听力, 请勿长时间连续佩戴。
- 请将产品及其它包装物儿童和宠物接触不到的地方, 以防发生吞食和窒息等事故。

电池安全说明

该产品可使用锂电池, 请阅读以下说明, 确保安全使用和处置。
- 请勿将产品的回路与金属物体直接接触, 如用太阳直射光。
- 应将产品存放在环境温度在0℃至35℃(32°F至95°F)的环境中。
- 请勿在产品发生火灾、烟雾、漏液或高温度的环境中使用或丢弃本产品。
- 保持产品干燥, 远离液体或湿气。
- 只能使用经 FCC 或 CCC 认证、输出电压为DC 5V/1A的充电器。
- 充电站不要使用本产品。
- 产品寿命时间不得超过10小时。
- 按照当地的废物管理规定负责地处理本产品。

法律声明

商标和许可:
HTC和HTC标志均为HTC公司的商标。
授权经销商: 上海外高桥保税区三星微电子有限公司。
2023年版权归三星微电子有限公司。
本文档仅供参考, 不构成任何形式的保证。本公司保留所有权利。

hTC
Wireless Earphones 68

Product Specifications
Model: HTC NE68

Bluetooth
Range > 10 m
Version 5.0

Speaker
Diameter: 13 mm
Impedance: 32 Ω

Earphone power
Input: 5 V=25 mA
Battery capacity: 25 mAh
Battery life > 3.5 hrs
Charging time > 1.5 hrs

Charging case power
Input: 5 V=100 mA
Output: 5 V=50 mA
Battery capacity: 400 mAh
Charging time > 1.5 hrs
Earphone recharges: 3 charges (when case is fully charged)

Quick Start Guide
HTC NE68

What's in the box
2 Earphones
Charging case
Quick Start Guide
USB-C cable
Lanyard

Components
Earphone LED
Touchpad
Earphone speakers
Charging contacts
Charging case display
USB Type-C port
Multifunction button

Take out and pair the earphones
If you're using the earphones for the first time, remove both from the charging case. The LED on one earphone will blink white, indicating that they are in pairing mode.
Note:
• If the earphones have not been paired with each other, they will automatically enter pairing mode when turned on.
You'll hear two beeps when pairing is successful.
If the earphones have been paired before, they will automatically reconnect to each other when turned on. You'll hear a beep when they connect.

How to put on the earphones
1
2
3
4

Power on and off
Power on
Opening the charging case's screen cover will automatically turn on the earphones.
To manually turn on each earphone, press and hold the touchpad for three seconds.
Power off
Placing the earphones in the charging case and closing the screen cover will automatically turn them off.
To manually turn off each earphone, press and hold the touchpad for five seconds.
Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected.

Connect to Bluetooth device
On your device, turn on Bluetooth and choose to connect to "HTC NE68".

Basic operations
Power on/off
Phone mode
Music mode
Reset earphones

Key functions
• Play/Pause: Tap either earphone once.
• Volume up: Tap the right earphone twice.
• Volume down: Tap the left earphone twice.
• Play previous track: Tap the left earphone three times.
• Play next track: Tap the right earphone three times.
• Answer/End call: Tap either earphone once.
• Reject call: Press and hold either earphone for two seconds.
• Activate voice assistant: Press and hold the left earphone for two seconds.
Note: When using a single earphone only, press and hold the active earphone for two seconds.
• Switch between Game and Music mode: Music mode is the default mode. Press and hold the right earphone for two seconds to switch between modes. (The louder notification sound indicates Game mode.)
Note: Mode switching is disabled when you're using a single earphone only.
Indicator LEDs
Earphone LED
Status
Blinking white: Both earphones: Powered on
Single earphone: Unpaired
Solid white: Charging
Off: Paired or fully charged

How to reset the earphones
If the earphones fail to pair or reconnect to each other, reset them by tapping both earphones five times simultaneously.
Note: Resetting the earphones will clear the Bluetooth pairing history.

Case display: Basic operations
Turn on display
• Open the charging case lid.
• Tap the display twice (Touch to wake up must be on).
• Press the multifunction button once.
Turn off display
Press the multifunction button once to turn off the display. The display automatically turns off after 30 seconds of inactivity.
Note: Initial activation required for first-time use.
Do any of the following:
• Change the charging case via the USB Type-C port.
• Press and hold the multifunction button for five seconds.

Multifunction button operations
Press once: Turn the screen on/off.
Press three times: Link earphones to charging case.
Press and hold for five seconds: Power on case (when off).
Press and hold for one second: Open the system menu (About, Factory reset, Reset, and Power off).
Press and hold for ten seconds: Restart case (when on).
Status icon guide

Case display: Feature overview
Lock screen
Enter the Voice Assistant interface
Enter the Camera interface
Enter the Music interface
Swipe right: Access the Menu options.
Swipe down: Open the Quick Access Menu.
Swipe left: Access the Music screen.
Menu
Quick Access
Tap an item to access its options.

Music
Previous track
Play/Pause
Next track
Volume control
AI Translation
Displays translated content synchronized with the connected app.
Menu
Equalizer
Tap a preset equalizer to use it.

Custom function settings
Click to set the desired function mode.
Mode selection
Music mode
Game mode
Find My Earbuds
Tap or depending on which earphone you want to find. Tap again when you find the earphone to stop the beep.

Voice Assistant
Tap to activate your phone's voice assistant.

Settings
Scroll up and tap an item to access its options.
System Menu
Tap to enter About, Restore Factory Settings, Restart, power Off.
Brightness
Swipe up or down to increase or decrease the screen brightness. Swipe left to set the sleep time.

Dial setting
Choose the wallpaper and the type of dock to use for the lock screen.
Theme
Change theme tap the theme to apply it.
Background wallpaper
Choose the image to use for the menu.

Time settings
Tap the date or time to set it. Choose also the time format you want to use.
Language
Tap the language to use for the case display.
Touch to wake up
Turn on or off to allow tapping the display to turn it on. Turn off to prevent the display from accidentally turning on.

TikTok
Make sure your earphones are connected to your phone and the TikTok app is open.
For iOS devices, AssistiveTouch must be turned on in Settings > Accessibility > Touch > AssistiveTouch.
Go back to the previous video
Like the current video
Go to the next video
This feature only works with the TikTok app and may not be compatible with all phone models.
Camera
Make sure your earphones are connected to your phone.
Tap to open the phone's camera app and then press the multifunction button to take photos. This feature only works with the pre-installed camera app and may not be supported on all phone models.

Important Safety Instructions
Carefully read all the safety instructions in this document before using the product.
General safety instructions
• Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be bent or squeezed.
• Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device. Any unauthorized modification to the product voids the warranty.
• Only use the product in environments where Bluetooth transmission is permitted.
Personal safety instructions
• Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating.
• Do not use the product when performing high-risk tasks that require your full attention.
• For your hearing protection, do not listen at high volume for long periods.
• Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking.

Battery safety instructions
The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal.
• Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight.
• Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F).
• Do not use or store the product in dust-prone, smoke-prone, high-temperature, high-pressure, or highly humid environments.
• Keep the product dry and away from liquids or moisture.
• Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC.
• Do not use the product while charging.
• Do not leave the product charging for longer than eight hours.
• Dispose of the product responsibly according to your local waste management guidelines.

FCC ID: 2-BJHR-NE68
FCC Caution
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.
•RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Customer Service Email: service@hyemi.net
US REP
Company name: MIBAKNOT SOLUTIONS LLC
Company address: 19 GEORGETOWN, IRVING, CA 92612 United States
FRN: 026313369
Agent name: Wenyi Wang
Title: CEO
Email: wenyiwang@mibaknotsolutions.com
Phone: 951-401-5693

Legal notice
Trademarks and permissions:
HTC and the HTC logo are trademarks of HTC Corporation and used under license by Shenzhen Brands World Technology Co., Ltd. Copyright © 2025 Shenzhen Brands World Technology Co., Ltd. All rights reserved.
THIS DOCUMENT IS FOR INFORMATION PURPOSES ONLY AND DOES NOT CONSTITUTE ANY KIND OF WARRANTY.

hTC