

HTC

无线蓝牙耳机的使用指南

产品规格

型号: HTC NE72

蓝牙

范围: ≈ 10m
版本: 6.0

喇叭

直径: 12mm
阻抗: 16Ω

耳机功率

输入: 5V=25mA
电池容量: 25mAh
使用时间: ≈ 3.5小时
充电时间: ≈ 1小时

充电器功率

输入: 5V=400mA
输出: 5V=50mA
电池容量: 400mAh
充电时间: ≈ 1.5小时
充电器充满电时, 能给耳机充电约3次

快速入门指南

使用前请阅读使用说明书
HTC NE72

物品清单

充电器
2 耳机
快速入门指南
USB-C 充电线

部件

多功能触摸键
耳机指示灯
耳机喇叭
充电触点
充电器显示屏
Type-C 充电口
多功能按键

取出耳机并配对

如果您是第一次使用耳机, 请将两个耳机从充电器中取出。其中一个耳机的LED灯将会交替闪烁红灯和蓝灯, 表示它们处于配对模式。

注:

- 如果耳机未与任何设备配对, 打开后会自动进入配对模式。
- 配对成功后, 您会听到提示音。
- 如果耳机之前已配对, 打开后会自动重新连接, 连接时您会听到提示音。

如何佩戴耳机

1. 将耳机放入耳朵中。

2. 调整耳塞, 使其紧密贴合耳道。

开机和关机

连接到蓝牙耳机

喇叭外放

基本操作

功能操作

- 暂停/播放: 轻触任一耳机一次
- 音量加: 轻触右耳机二次
- 音量减: 轻触左耳机二次
- 上一曲: 轻触左耳机三次
- 下一曲: 轻触右耳机三次
- 接听/挂断电话: 轻触任一耳机一次
- 通话结束: 轻触任一耳机两秒
- 启动语音助手: 按住左耳机的触控区2秒

注: 单耳使用时, 按住左耳机的触控区2秒, 均可激活语音助手

• 游戏模式: 与音乐模式切换: 按住右耳机的触控区2秒切换

注: 戴耳机同时, 无法切换至游戏模式和音乐模式

注: 出厂设置默认为音乐模式

注: 通知声音较大的是游戏模式

指示灯显示

耳机指示灯	状态
红灯和白灯交替闪烁	两个耳机、开机
常亮	待机; 未配对
白灯常亮	充电中
无灯	配对成功或充满电

如何清除蓝牙配对历史记录

双击从充电器取出后会自动开机配对, 耳机未与蓝牙设备连接或耳机从蓝牙设备取消连接状态下, 分别对左耳机和右耳机连续五次多触碰, 提示音“嘀”四声后, 耳机自动关机后将双耳机放回充电器, 再双击耳机取出, 双耳机自动配对, 完成后即可连接蓝牙设备使用。

C: 清除连接的所有蓝牙设备。

特别提示:

当单侧耳机出现无声, 或者无法配对时, 请按以上恢复重置操作。

充电仓基本操作

多功能按键功能

状态	操作	功能
电源状态	单击	亮屏
锁屏状态	单击	熄屏
亮屏状态	逆时针转	向下滑
	顺时针转	向上滑
音乐界面	逆时针转	音量加
	顺时针转	音量减
抖音界面	逆时针转	下个视频
	顺时针转	上个视频

充电仓显示屏功能介绍

主界面

滑动解锁屏幕解锁后, 向右滑动即可浏览这些功能

功能菜单

点击任意功能菜单图标, 点击进入对应选项

音乐播放

亮度调节

上下滑动亮度降低或调高亮度

系统设置

向上滑动并轻点一点选项, 以访问该选项

查找耳机

耳机和充电器连接后, 长按中间的耳机图标, 发出滴滴声

寻找耳机时会发出滴答滴答声

休眠时间

点击设置休眠时间

系统菜单

点击执行关于, 恢复出厂, 重启, 关机对应功能设置。

表盘

选择用于锁屏的壁纸

菜单样式

选择任意菜单样式

背景壁纸

选择背景图片

时间设定

设置当前的时间和日期, 时间格式

语言

切换不同国家/地区的语言

触摸唤醒

打开时可以触屏点亮屏幕
关闭时无法触屏点亮屏幕
默认打开

相机功能

打开手机相机, 单击 (相机图标), 设备开始拍照
此功能仅适用于手机自带相机使用, 可能不兼容所有机型。

耳机控制

音乐播放和抖音界面功能
Tap-to-open 手势: 触摸感应功能

抖音翻页/点赞功能

确保您的耳机已连接到手机并开启抖音应用。

对于iOS设备, 必须在“设置”>“控制中心”中添加“抖音”模块。

相机功能

需要连接到设备使用, 如手机

产品中有有害物质名称及含量

部件名称	有害物质	有害物质含量
印刷电路板组件	Hg/Pb/Cd/Cr	六价铬/多溴联苯/多溴二苯醚
外壳等小结构件	○	○

重要安全说明

在使用本产品之前, 请仔细阅读本说明书中的所有安全说明。

常规安全说明

- 小心使用本产品, 并将其存放在没有腐蚀性液体、高温高压和潮湿的环境中。
- 请勿将本产品长时间暴露在阳光下或靠近热源的地方。
- 请勿将本产品长时间存放在潮湿环境中。
- 请勿将本产品存放在潮湿环境中。
- 请勿将本产品存放在潮湿环境中。
- 请勿将本产品存放在潮湿环境中。

个人安全说明

- 如果产品在制造过程中存在缺陷, 可能会导致过热, 请勿使用。
- 如果产品在制造过程中存在缺陷, 可能会导致过热, 请勿使用。
- 如果产品在制造过程中存在缺陷, 可能会导致过热, 请勿使用。

电池安全说明

- 请勿将本产品长时间暴露在阳光下或靠近热源的地方。
- 请勿将本产品存放在潮湿环境中。
- 请勿将本产品存放在潮湿环境中。
- 请勿将本产品存放在潮湿环境中。

法律声明和许可:

HTC和HTC标志为HTC公司的商标。
授权经销商: 上海宏创科技有限公司。
2023年版权 © 宏创科技。所有权利保留。
本文仅供参考, 不构成任何形式的保证, 本公司保留所有权利。

Product Specifications Model# HTC NE72 Bluetooth Range: ~ 10 m Version: 5.0 Speaker Diameter: 12 mm Impedance: 16 Ω Earphone power Input: 5V=23 mA Battery capacity: 25 mAh Battery life: ~ 3.5 hrs Charging time: ~ 1 hrs Charging case power Input: 5V=400 mA Output: 5V=50 mA Battery capacity: 400 mAh Charging time: ~ 1.5 hrs Earphone recharges: 3 charges (when case is fully charged) Quick Start Guide HTC NE72	What's in the box Charging case 2 Earphones Quick Start Guide USB-C cable	Components Touchpad Earphone LED Earphone speaker Charging contacts Charging case display USB-C port Multifunction button	Take out and pair the earphones If you're using the earphones for the first time, remove both from the charging case. The LED on one earphone will blink red and white alternately, indicating that they are in pairing mode. Note: • If the earphones have not been paired with each other, they will automatically enter pairing mode when turned on. You'll hear two beeps when pairing is successful. • If the earphones have been paired before, they will automatically reconnect to each other when turned on. You'll hear a beep when they connect.	How to put on the earphones 1 2	Power on and off Power on Taking the earphones out of the charging case will automatically turn them on. To manually turn on each earphone, press and hold the touchpad for three seconds. Power off Placing the earphones in the charging case will automatically turn them off. To manually turn off each earphone, press and hold the touchpad for five seconds. Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected.																												
Connect to Bluetooth device On your device, turn on Bluetooth and choose to connect to "HTC NE72".	Speaker playback No need to take out the earbuds. On your device, turn on Bluetooth and select to connect to "HTC NE72CSP". The charging case will play music out loud. Multifunction button Swipe up and down to adjust the volume.	Basic operations: Touchpads Power on/off Phone mode Music mode Reset earphones Indicator LED <table border="1"> <thead> <tr> <th>Earphone LED</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>Blinking red and white</td> <td>Unpaired</td> </tr> <tr> <td>Solid white</td> <td>Charging</td> </tr> <tr> <td>Off</td> <td>Paired or powered off</td> </tr> </tbody> </table>	Earphone LED	Status	Blinking red and white	Unpaired	Solid white	Charging	Off	Paired or powered off	How to reset the earphones If the earphones fail to pair or reconnect to each other, reset them by simultaneously tapping both touchpads five times. Note: This will clear their Bluetooth pairing history.	Basic operations: Case display Initialization If you're using the display for the first time, make sure that the case is charged then press and hold the multifunction button for three seconds. Turn on the display Do any of the following: • Tap the display twice. (Touch to wake up must be on.) • Press the multifunction button once. Turn off the display The display automatically turns off after 30 seconds of inactivity. To manually turn it off, press the multifunction button twice.	Navigation Swipe left/right: View the Menu options/All translation interface. Status icons <table border="1"> <thead> <tr> <th>Icon</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>Solid red</td> <td>Earphones are disconnected from the case and your phone</td> </tr> <tr> <td>Solid white</td> <td>Earphones are connected to the case and paired with your phone</td> </tr> <tr> <td>Solid blue</td> <td>Earphones are charging in the case</td> </tr> <tr> <td>Solid green</td> <td>Earphones are fully charged</td> </tr> <tr> <td>Solid white</td> <td>Green lightning icon</td> </tr> </tbody> </table>	Icon	Status	Solid red	Earphones are disconnected from the case and your phone	Solid white	Earphones are connected to the case and paired with your phone	Solid blue	Earphones are charging in the case	Solid green	Earphones are fully charged	Solid white	Green lightning icon								
Earphone LED	Status																																
Blinking red and white	Unpaired																																
Solid white	Charging																																
Off	Paired or powered off																																
Icon	Status																																
Solid red	Earphones are disconnected from the case and your phone																																
Solid white	Earphones are connected to the case and paired with your phone																																
Solid blue	Earphones are charging in the case																																
Solid green	Earphones are fully charged																																
Solid white	Green lightning icon																																
Basic operations: Multifunction button <table border="1"> <thead> <tr> <th>Screen status</th> <th>Operation</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>off</td> <td>Single press</td> <td>Turn on screen</td> </tr> <tr> <td>Screen saver</td> <td>Single press</td> <td>Turn off screen</td> </tr> <tr> <td>on</td> <td>Rotate clockwise</td> <td>Next item</td> </tr> <tr> <td></td> <td>Rotate counterclockwise</td> <td>Previous item</td> </tr> <tr> <td>Music</td> <td>Rotate clockwise</td> <td>Volume up</td> </tr> <tr> <td></td> <td>Rotate counterclockwise</td> <td>Volume down</td> </tr> <tr> <td>TikTok</td> <td>Rotate clockwise</td> <td>Next video</td> </tr> <tr> <td></td> <td>Rotate counterclockwise</td> <td>Previous video</td> </tr> </tbody> </table> Multifunction button • Press once: Turn the screen on/off • Press three times: Link the earphones to the charging case • Press and hold for ten seconds: Restart the case display • Press and hold for two seconds: Open the System menu The system menu contains the following options: About, Factory reset, Restart, and Power off.	Screen status	Operation	Function	off	Single press	Turn on screen	Screen saver	Single press	Turn off screen	on	Rotate clockwise	Next item		Rotate counterclockwise	Previous item	Music	Rotate clockwise	Volume up		Rotate counterclockwise	Volume down	TikTok	Rotate clockwise	Next video		Rotate counterclockwise	Previous video	Case display feature overview Home screen Swipe to unlock the screen. Menu Swipe up or down to view the items and tap to access its options. Music Previous Play/Pause Next Volume down Volume up	AI Translation Displays translated content synchronized with the connected app. Equalizer Tap any of the equalizer presets to use it. Find my earphones Tap or to make the earphone beep. Once you've found it, tap the button again to stop the beeping.	Voice assistant Tap to activate your phone's voice assistant. Game Tap to start playing. Sleep timer Set an idle screen sleep timer.	Brightness Adjust the screen brightness by swiping up or down. Headphone Mode Switch between Music Mode and Dozein Mode, and customize each touch control function in the app. System settings Configure your charging case settings.	System menu Check your device details, perform a factory reset, restart, or power off your device. Dial setting Choose the wallpaper to use for the lock screen. Menu style Choose a menu style. Background wallpaper Choose a background image.	Time Set the time, date, and format to use for the display. Language Choose the language to use for the display. Tap to wake Enable this option so you can turn on the display by tapping it.
Screen status	Operation	Function																															
off	Single press	Turn on screen																															
Screen saver	Single press	Turn off screen																															
on	Rotate clockwise	Next item																															
	Rotate counterclockwise	Previous item																															
Music	Rotate clockwise	Volume up																															
	Rotate counterclockwise	Volume down																															
TikTok	Rotate clockwise	Next video																															
	Rotate counterclockwise	Previous video																															
TikTok If you're browsing TikTok while your earphones are connected to your phone, you can use your earphones to scroll through and like videos. Notes: • To use this feature on iOS, users must turn on AssistiveTouch in Settings > Accessibility > Touch > AssistiveTouch. • This feature may not be compatible with all phone models. Camera While your earphones are connected to your phone, you can use your charging case to take photos with your phone's camera. To take photos, open your phone's default camera app, and then tap on the charging case display. Notes: • This feature only works with the pre-installed camera app. • This feature may not be compatible with all phone models.	Important Safety Instructions Carefully read all the safety instructions in this document before using the product. General safety instructions • Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be bent or squeezed. • Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device. Any unauthorized modification to the product voids the warranty. • Only use the product in environments where Bluetooth transmission is permitted. Personal safety instructions • Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating. • Do not use the product when performing high-risk tasks that require your full attention. • For your hearing protection, do not listen at high volume for long periods. • Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking.	Battery safety instructions The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal. - Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight. - Only store the product in environments with ambient temperature of 0°C to 35°C (32°F to 95°F). - Do not use or store the product in dust-proof, smoke-proof, high-temperature, high-pressure, or highly humid environments. - Keep the product dry and away from liquids or moisture. - Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC. - Do not use the product while charging. - Do not leave the product charging for longer than eight hours. - Dispose of the product responsibly according to your local waste management guidelines.	FCC ID: 2BXHR-NE72 FCC Caution: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.	• Consult the dealer or an experienced radio/TV technician for help. RF warning for Portable Device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. US REP <table border="1"> <tbody> <tr> <td>Company Name: AODES CO., LIMITED</td> </tr> <tr> <td>Address: 1624 Market St., Ste 225, #30327 Denver CO, 80202 US</td> </tr> <tr> <td>Contact Information: XIAOYAN LAI</td> </tr> <tr> <td>Title: General Manager</td> </tr> <tr> <td>Telephone No</td></tr></tbody></table>	Company Name: AODES CO., LIMITED	Address: 1624 Market St., Ste 225, #30327 Denver CO, 80202 US	Contact Information: XIAOYAN LAI	Title: General Manager	Telephone No																								
Company Name: AODES CO., LIMITED																																	
Address: 1624 Market St., Ste 225, #30327 Denver CO, 80202 US																																	
Contact Information: XIAOYAN LAI																																	
Title: General Manager																																	
Telephone No																																	