

修改记录

版本号	修改时间	修改内容
V1.0	2025.02.07	创建文档
V1.1	2025.02.17	修改内容
V1.2	2025.10.31	修改内容
V1.3	2025.11.03	修改内容

POLARMETA

多功能手势触控板操作说明书

多機能ジェスチャートラックパッド取扱説明書

Multi-Function Gesture Trackpad Operating Manual

使用前请仔细阅读说明书
ご使用前に説明書をよくお読みください。
Please read instructions carefully before use.

Welcome to Multi-function GestureTrackpad
Multi-function gesture trackpad is equipped with USB2.4G receiver / type-C data cable. Please use USB receiver or data cable to connect your Computer.

System Version Requirement
To use trackpad and its full functionality, please update your Mac to the latest version of mac OS (minimum OSX 10.11 required).
To update to the latest version of mac OS, select Apple menu > App Store to check for updates - follow the instructions to update macOS.
Win system minimum requirement win10.

How to connect the trackpad to MAC.
Connecting the Multi-Function Gesture Touchpad to your Mac
① 2.4 G USB Connection: Turn on the trackpad and connect the 2.4G USB receiver and converter to you mac, the trackpad will automatically connect to your MAC computer.
② Wired Connection: Turn on the trackpad and simply connect it to your Mac by USB-C cable.




Using Multi-Function Gesture Touchpad
Multi-Gesture trackpad has a Force Touch surface for moving mouse pointer and performing gestures. To set up gestures and set other options, select Apple Menu > System Settings, then click "trackpad". Place the Multi-Function Gesture Trackpad on a smooth, horizontal surface. When moving mouse pointer or performing a gesture, you can rest your hand comfortably on the trackpad and gently slide your finger across its surface.

 
MAC gesture setting steps:
① Open "System Settings"
② Click "Trackpad"
③ Click to set "Point & Click"
④ Click to set "Scroll & Zoom"
⑤ Click to set "More Gesture"

Steps to set "Drag & Drop":
① Open > "System Setting" > click "Accessibility".
② Click > "Pointer Control" > click "Trackpad Options" > turn on "Use trackpad for dragging"
③ Choose "Three Finger Drag"> Click "OK".

Windows gesture setup steps
Connecting the Multi-Function Gesture Touchpad to Windows Systems
① USB Connection: Slide the switch to ON, insert the included USB receiver into your computer's host port, and the touchpad's green indicator light will flash. The touchpad will automatically connect to your computer.
② Wired Connection: Slide the switch to ON and plug in the data cable.

After more than 10 minutes of standby, you need to press to wake up the trackpad.

MAC Trackpad Gesture Description
One Finger Operation

 
 

Open file

Two Finger Operation

Flip the page

Switch page

Display notification

Zoom in

Zoom out

Smart Zoom

Rotating pictures

Multi-Finger Operation


Select text

Drag the page

Show specific windows

Open Dispatch Center

 
 
Desktop switching

 
Open the launchpad

Show desktop

 
 
Windows trackpad gestures explained


Tap with one finger

Drag and drop files

Auxiliary tap (right-click)

Scrolling

Zoom

Three-or four-finger gestures can be reset in the system by going to System Settings > Devices > Trackpad

Selected text

Show Desktop

Switching Applications

Switching Applications

Clean Multi-Function Gesture trackpad
Please use a non-pilling cloth to clean the outside of the trackpad. Do not use chemic reagent.

Ergonomics
When using trackpad, find a comfortable sitting position, change your body posture from time to time, and take a break. It is very important.

More information
For more information, open "Mac Help" and search "Trackpad".

[Special Tips]
Bluetooth connection mode is not supported, only USB receiver or data cable connection mode is supported. For Android users, when using the button to switch to the WIN side, the gesture touch function only supports Apple MacOS system, and does not support the android touch function of Android system.



Size of the whole machine
Panel size: 7.5 inch



The size of the whole machine is measured manually, if there is any error in kind shall prevail!

Product List





 

Product Warranty Card
Thank you for purchasing this product, in order to provide you with better service, please read the following content and keep this warranty card. If a non-human fault occurs during the daily use of the product, you can show this warranty card and a valid proof of purchase to the original dealer to apply for warranty service. However, the following are not included:
1. Damage caused by human factors, including failure caused by not operating in accordance with the manual, or due to poor storage of the product caused by impact, falling, bending and other damage (product surface has obvious wear marks, etc.).
2. Failure caused by private disassembly, repair and modification, or maintenance by non-special maintenance sites.
3. The user is unable to provide product warranty card and valid proof of purchase.
4. Artificially altered purchase records or product information.
5. Beyond the product warranty period.

Product Model	User Name	Contact Number	Date of Purchase	Merchant Stamp

User Address _____

(Note: If the user fails to provide proof of the date of purchase, the factory date of the product shall prevail.)

Certificate of Conformity



FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

[illegible]