

110g黑卡纸 灰色部分烫哑银

反

苹果查找定位功能使用说明



A top-down view of the device. A red arrow points to a small circular latch located on the bottom edge of the battery cover, which is marked with a lightning bolt symbol.

-
- A line drawing of the back of the device. A red circle highlights a latch mechanism on the top surface, near the center. A red arrow points from the text 'Battery cover latch' to this latch.

-

-
- A line drawing of the back of the device. A red circle highlights a latch mechanism on the top surface, near the center. A red arrow points from the text 'Battery cover latch' to this latch.

按键功能	操作说明
开机, 启动配对模式	长按按键, 直到听到铃声提示音后松开, 即可开机并启动配对模式。
查看序列号 (APP识别未知物品)	长按按键, 直到听到连续2声提示音后松开, 可在Find My中查看序列号。
关机, 进入disable状态	长按按键, 直到听到连续3声提示音后松开, 此时产品将无法被查找。
恢复出厂设置	长按按键, 直到听到长声的提示音后松开, 即可恢复出厂设置, 可重新与苹果设备进行配对。

-

1. 打开“查找”或“查看物品”APP，点击屏幕底部的“物品”。
2. 如果你可以定位物品，设备会显示在地图上，以便你查看其位置。位置和时间的组合会出现在物品名称下方。物品的位置信息会在其追踪到“查找”功能时更新。
3. 如果无法定位物品：你会看到地图上上次定位的位置和时间。在“通知”下方，再次找到物品通知。
4. 通知：两次找到后，你会收到通知。
5. 轻点物品以获取前往其位置的路线。
6. 轻点“路线”以打开“地图”。
7. 如果物品已在附近，回到“查找”APP，轻点查找，随后箭头移动到附近。
8. 轻点“播放声音”按钮以从iCloud取出声音。在找到后轻点“关闭”按钮以关闭声音。

The screenshot displays the CK20C mobile application interface. At the top, the status bar shows the time 9:58, signal strength, and battery level. The app header includes the title 'CK20C', the subtitle 'With You', and a close button. Below the header, there are two main sections: 'Play Sound' with a 'Go' button and 'Directions' with a 'With You' button. The 'Share This Item' section contains an 'Add Person' button. The 'Notifications' section lists two settings: 'Notify When Paused' and 'Notify When Left Behind', each with a toggle switch. The 'Last Made' section features an 'Engrave' button.

1. 打开“查找”或“查找物品”APP，轻点屏幕底部的“物品”，然后轻点物品名称来为其设定提醒。
2. 在“通知”下方，轻点“遗忘时通知我”。
3. 打开“遗忘时通知我”。
4. 如果想要添加“信任位置”，你可以选取建议的位置，或轻点“新位置”，在地图上选择位置，然后轻点“完成”。
5. 轻点“完成”。

The screenshot displays the CK20C mobile application interface. At the top, the status bar shows the time as 9:58, signal strength, and battery level. The app header includes the 'CK20C' logo, the text 'with You', and a settings icon. The main content area features several interactive elements: a 'Play Sound' button with a blue circular icon, an 'Erections' button with a blue circular icon, a 'Share This Item' section with a green circular icon and an 'Add Person' link, and a 'Notifications' section with a red circular icon. Below the notifications, there are two toggle switches: 'Notify When Paused' and 'Notify When Left Behind'. At the bottom, there is a 'Lost While' section with a red circular icon and an 'Enable' link.

- 1.轻点屏幕底部的“物品”，然后轻点丢失物品的名称。
- 2.在“丢失模式”下方，轻点“启用”。
- 3.按照屏幕指示来输入可联系到你的电话号码。若要改点“使用电子邮件地址”。
- 4.轻点“启用”。

- 1.轻点屏幕底部的“物品”，然后轻点要移除的物品。
- 2.将物品靠近 iPhone。
- 3.轻点“移除物品”，然后按照屏幕指示操作。
- 4.长按按键，直到听到高音的提示音后松开，即可恢复出厂设置，可重新与苹果设备进行配对。

EN	Scan the QR code to view the complete user guide.
FR	Scannez le code QR pour consulter le guide d'utilisation complet.
DE	Scannen Sie den QR-Code, um das vollständige Benutzerhandbuch anzuzeigen.
ES	Escanee el código QR para ver la guía completa del usuario.
IT	Digitare il codice QR per visualizzare la guida completa del usuario.
PT	Escaneie o código QR para visualizar a guia completa do usuário.
RU	Отсканируйте QR-код, чтобы просмотреть полное руководство пользователя.
JP	QRコードをスキャンして完全なユーザーガイドを表示します。
TC	QR 碼 可 通 過 掃 碼 查 看 完 整 的 使 用 指 南。
AR	اسكن الرمز QR لمشاهدة دليل المستخدم الكامل.



操作说明
Instructions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in porlable exposure condition without restriction.