

True wireless clip-on earbuds



User Manual

Please read the user manual before use

A1

Overview

The wireless earbuds support Bluetooth devices such as mobile phones, tablets, laptops, etc.



How to pair

- When using it for the first time, open the charging case, take out the earbuds and open the Bluetooth pairing search on the phone, click the Bluetooth pairing name searched on the phone:A18, select and complete the pairing.
- If there is a pairing record before, open the charging compartment and the earbuds will automatically turn on and connect (mobile phone Bluetooth is on).

Note: If the indicator light of the charging case is not on, please charge the charging box with the Type-C cable. The white light will flash breathing.

A2

Function



Touch area

Trumpet

Function

Turn on the machine

When the cover is opened and the takeout the earbuds, they will automatically turn on.

Shut down

When the device is turned on and placed in the charging case, the headphones will automatically shut down when the lid is closed, or they will automatically shut down after three minutes when there is no connection

Manual shut down: Press and hold the touch button manually for 5 seconds to shut down.

Reconnect

When turned on, they will automatically reconnect to the last connected device.

factory data reset

Take out the earbuds and tap the touch area of each of the left and right ears five times in a row, Keep the white and blue lights on the earbuds for 2 seconds. Clear the pairing data of the earbuds and repair them, The white and blue lights on both earbuds flash alternately. After After paired successful, the white and blue lights on one earbud flash alternately, entering the search and pairing state.

A3

- Reject the calling: Press and hold the left or right earbud for two seconds, or use your phone to reject the calling.



Long press

- Answer/Hang up: Double - click the left/right ear to hang up the phone, and single - click the left/right ear to answer the phone.

Double-click: Hang up

Single-click: Answer



- Pause/Play: Double-click any of the earbud's touch area while connected.

Double-click



A4

- Switch between the Previous and Next song:

Previous: Press the touch area on the left earbud three times

Next song: Press the touch area on the right earbud three times



Three-click

- Voice Assistant: Press and hold the left or right earbud for three seconds to activate Voice Assistant



Press and hold for 3 seconds

A5

Charge the earbuds

- When the earbuds are placed in the charging case and close the lid. The orange light will illuminate for five seconds, then turn off, indicating the earbuds are charging
- Note: When the earbuds are fully charged, they will enter sleep mode in the case. To re-enter charging and sleep mode, remove both earbuds and place them back in the case. Removing and placing a single earbud back in the case will not take the earbuds to enter sleep mode

Charge the charging case

- Please manage the usage time and volume properly. Using earbuds for a long time may damage your hearing

Product parameters

- Model: A18
- Bluetooth version: V6.0
- Transmission range: 20 meters (Obstacle-free)
- earbud charging: Approximately 1-2 hour
- Charging in the charging case: Approximately 1-2 hour
- Music playback duration: Approximately 6-8 hours
- Headphone capacity: 3.7V/40 mAh
- Charging box capacity: 3.7V/300 mAh

Please arrange the usage time and volume properly. Using headphones for a long time may damage your hearing.

A6

Tip

- Before using the earbuds, please read the user manual carefully and keep it properly for future reference.
- Before using the earbuds for the first time, they must be fully charged
- If the earbuds are not used for more than 30 days, charge them regularly
- Please Use a charger from a qualified manufacturer
- If your phone can not search for the Bluetooth earbuds, please check whether the headphones are in the paired state. If they are not connected for a long time, they will exit pairing mode

Note

- Do not disassemble or modify your earbuds for any reason to avoid any damage or danger
- Do not store the earbuds in extreme temperatures (normal storage temperature: between -5 °C and 45 °C)
- Keep the indicator light away from the eyes of children or animals
- Avoid using earbuds during thunderstorms to prevent confusion of their functions and increase the risk of electric shock
- Do not use irritating chemicals or strong cleaners to clean the earbuds
- Keep the earbuds and charging case dry

A7

Product warranty card

Warranty Terms

- When purchasing this product, please carefully complete this card and read the following warranty terms and conditions to ensure the product is covered by the warranty.
- Please carefully keep this card upon purchase and have it stamped by the seller for confirmation.
- This warranty card must be provided at the time of warranty claim.
- The information filled in on this card must be true; otherwise, the warranty will be invalid.
- The product warranty period is one year. During the warranty period, if the product malfunctions due to defective components or manufacturing defects, our company will provide free repairs or replacement parts.
- The following damages and inability to function properly are not covered by the warranty:
- Damage caused by use and installation not in accordance with the instructions.
- Any damage caused by human error or accident.
- Repairs or modifications not authorized by our company, or damage to the product seal.
- Aging, scratches and dents on the surface shell of the product.
- After the warranty period expires, our company may still provide repair services, but you will be required to pay the corresponding fees.

Product name		User name	
Purchase date		Telephone	
User address		Fault Details	





FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.