

User Guide

AX3000 Dual Band Wi-Fi6 Router

H6-X30

1. Connect the Router

1.1 The first step to start configuring your router is to plug it in and then connect a network cable(RJ45) to your WAN port, the other side of network cable (RJ45) must also be connected to your home Modem (xDSL/PON).

1.2 After plugging in the router and connecting it to the Modem, proceed to the next topic, which is the configuration step by step.

1.3 If your internet connection is through an Ethernet cable from the wall instead of through a home Modem (xDSL/PON) , connect the Ethernet cable directly to the router's Internet port.

Schematic Diagram of Router Connection

Wireless connection

Connect the Device

The client-side connects to router Wi-Fi

The defaulted username and password are on the bottom label

Wired connection

Connect the PC and router via LAN1, LAN2 or LAN3 with cable

Use DSL or PON for Internet connection

Connect the modem's LAN port with the Ethernet cable

Power off or unplug your modem

Connect the router's WAN port with the Ethernet cable

Long press for RESET function

Short press for WPS function

Plug the router and modem's power adapter

switch on

Community broadband Internet access

Power off or unplug your modem

Connect the modem's LAN port with the Ethernet cable

Connect the router's WAN port with the Ethernet cable

2. Indicator

LED Status	Description	
Off	The router is power off	
Red	On	The router is power on but Internet is not working
Green	On	The router is already connected to the internet
Green	Flashing	WPS or Mesh pairing

3. Connect Device to the Router

3.1 Wireless

Activate the Wi-Fi on your smartphone or notebook, connect to the router's 2.4GHz or 5GHz network with the SSID provided at the bottom of the router and enter the IP address 192.168.10.1 in any browser;

-Find the SSID and SSID password printed on the label at the bottom of the router.

-Click the network icon of your computer or go to WiFi settings of your smart device, and then select the SSID and input password to join the network.

3.2 Wired

Connect a network cable(RJ45) to the LAN port of the router and the other side of network cable(RJ45) connect to a notebook or desktop and enter the IP address 192.168.10.1 in the browser. Remember to turn off the device's Wi-Fi before performing this step.

Hazardous Substances Table

Part Name	Hazardous Substances or element									
	Pb	Hg	Cd	Cr(VI)	Br	PBBs	PBDEs	DBP	BBP	DEHP
PCBA	●	○	○	○	○	○	○	○	○	○
Cable assembly	○	○	○	○	○	○	○	○	○	○
Metal part	○	○	○	○	○	○	○	○	○	○

○ : It indicates that content of toxic and hazardous substance in all homogeneous material are less than specified limit by Directive2011/65/EU (RoHS)

● : It indicates that at least one content of toxic and hazardous substance in all homogeneous material is beyond specified limit by Directive2011/65/EU (RoHS)

This table shows the toxic and hazardous substance when manufacture this device, hazardous substance information is based on information from supplier as well as internal inspection. In some part, hazardous substance cannot be replaced with current technologies, but we are always doing its best to improve the quality of the product.

4. Configure your router via Web

-Open the mobile phone or computer browser, visit the 192.168.10.1 website, enter the default **Username** and **Password** on the label at the bottom of the router, then you can enter the router management page.

-When the router is configured for the first time, it will automatically enter the **Install** page (setup wizard).

-Select **WAN Access Type** , normally **"DHCP"**

-Create a **password** for each Wi-Fi band (2.4GHz and 5GHz) and if you want, change the **SSID** (2.4GHz and 5GHz) to your preference name.

-Save the configuration , enjoy the Internet.

Login with Username And Password

Username

Password

Login

Notice: For the WAN Access Type depend on ISP ,you can consult the ISP for confirmation.

5. WAN Access Type

5.1 **DHCP:** For Cable/DSL/Broadband connection which makes your computer immediately online without any setting or signing-in.

5.2 **Static IP:** You are provided with specified IP parameters by your ISP.

5.3 **PPPoE:** Usually for ADSL Modem and you are provided with a PPPoE username and password by your ISP.

DHCP

Static IP

PPPoE

6. Mesh pairing

If you have purchased two or more AX3000 units, follow the steps below to perform the MESH pairing between the routers and enjoy a connection with a wide signal range.

6.1 Mesh pairing One button

6.1.1. Before turning on the second (Agent) router, make sure that the first (Controller) router connected has internet access and is fully configured;

6.1.2. Plug in the second (Agent) router;

6.1.3. Click and hold the first (controller) router's WPS button for about 8 seconds, then the LED will start flashing;

6.1.4. Then, repeat the process on the second (Agent) router, click and hold the WPS button for about 8 seconds and release, then the LED will start flashing too;

6.1.5. Wait for approximately 3 minutes while the routers are paired, once the process is completed, the LED of both routers should be green;

6.1.6. Once connected, move the second (Agent) router to the place where the signal needs to be expanded (just unplug it and plug it in again in the place you prefer), wait approximately 3 minutes until the connection is re-established and check if the LED lights up, keeps with the green light on and the signal stable.

Note: To connect more AX3000 units to the network, just repeat the step by step above.

6.2 Mesh Unpairing

-You can unpair the meshed router by restore the router to its factory default settings.

-For resetting router, press and hold the RESET button more than 8 seconds then release , the LED will start to blink and change into red.

6.3 Notice

-After completing EasyMesh networking, the Controller router will synchronize its 2.4GHz and 5GHz SSID, password, and channel with the Agent router. That is, these configurations of the Agent router will be the same as the Controller router.

-After modifying the SSID, password, and channel on the Controller router, the Controller router will synchronize these configurations to all Agent router. Modifying the SSID and password on the Agent router will not be synchronized.

7. FAQ

Q1: What should I do if I can't access the router's management page?

-Reboot your router and try again.

-Check your Wi-Fi connection.

-Use another Web browser such as Google Chrome.

-Restart your device.

Q2: What should I do if I can't access Internet?

-Reboot your modem and router, then try again.

-Check the Internet is working. With an Ethernet cable connecting the modem to computer directly.

Q3: What can I do if I forget my wireless network password?

-If you have not changed the default wireless password, it can be found on the label at the back of the router.

-Connect your computer to the router via an Ethernet cable. Log in to the web management at IP Address: 192.168.10.1 and go to Install > Wireless to retrieve or reset your wireless password.

Q4: What should I do if I forget my Web management page password?

-Check the Web password on the label at the bottom of the router.

-When the router is power on, use a pin to press and hold the RESET button on the back until the LED blinks. Then the password will restore to the default that marked on the label.

FCC

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

The device is for indoor usage only.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment should be installed and operated with a minimum distance 20cm between the device and your body.

Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Operating frequency: 2412MHz to 2462MHz,5180MHz to 5240MHz, 5260MHz to 5320MHz,5500MHz to 5700MHz, 5745MHz to 5825MHz .

NOTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable.

Security Warning:

-Before using and operating the equipment, please read and follow the following precautions to ensure stable equipment performance and avoid dangerous or illegal situations.

-Please use and store this equipment and its accessories within the temperature range of 0 °C to 40 °C. When the temperature is too high or too low, it may cause equipment failure.

-During the use of the device, be sure to maintain a distance of at least 20 centimeters between the human body and the device antenna.

-Only accessories approved by the equipment manufacturer and compatible with this model of equipment can be used. If other types of accessories are used, it may violate the warranty terms of this device and relevant regulations of the country where the device is located, and may result in safety incidents. If you need to obtain approved accessories, please contact the authorized service center.

-The power socket should be installed near the equipment and easily accessible.

- When not using this device, please disconnect the power supply from the device and unplug the power plug from the power outlet.

-Please treat this device and its accessories as regular household waste.

-Please comply with local regulations regarding the handling of this device and its accessories, and support recycling actions.