

Venty Cozypod Direct Plug- In Space Heater

Model: Cozypod 2.0

USER MANUAL

READ ALL INSTRUCTIONS BEFORE USING THIS HEATER!

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, injury to persons, and hyperthermia, including the following:

- 1) Read all instructions before using this heater.
- 2) This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- 3) Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- 4) Always unplug heater when not in use.
- 5) Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
- 6) Do not use outdoors.
- 7) This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- 8) Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

- 9) To disconnect heater, turn controls to off, then remove plug from outlet.
- 10) Connect to properly grounded outlets only.
- 11) Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- 12) To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- 13) A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- 14) Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 15) Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- 16) Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
- 17) To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.
- 18) **WARNING** - To reduce the risk of fire or electric shock do not use with an extension cord.
- 19) **CAUTION** - To reduce the risk of fire or electric shock connect directly to a grounding receptacle 3-prong.
- 20) **WARNING:** Read all safety warnings and instructions. Failure to follow the warnings and Instructions may result in electric shock, fire and/or serious injury.
- 21) **CAUTION** – High temperature, keep electrical cords, drapery, and other furnishings at least 3 feet (0.9 m) from the front of the heater and away from the side and rear. **WARNING** – Risk of Hyperthermia.
- 22) **WARNING** – This heater uses only with In Poor Taste LLC (model: cozy pod 2.0-C) Controller within 5m in the same room.

23) **WARNING:** Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

24) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.

25) Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.

26) Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

27) Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

28) When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

29) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

30) Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

31) Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion. The temperature of 130°C can be replaced by the temperature of 265°F.

32) Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.

33) Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.

34) Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.

35) **WARNING** – To reduce the risk of injury, user must read instruction manual.

36) The control is for use only with In Poor Taste LLC (model: COZYPOD2.0) charger or Listed Class 2 adapter.

37) The ambient temperature range required for charging the remote controller is between 2-40°C (32.6-104°F)

38) **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

SAVE THESE INSTRUCTIONS

HOT SURFACE WARNING

The front surface becomes very hot during use. Do not touch the front heating area if the heater and wait for it to cool down before removing from the outlet.

OVERHEAT PROTECTION

If the internal temperature exceeds 85°C or if NTC sensor abnormality occurs, the heater will shut down automatically and display error code E1.

2. KNOWING YOUR HEATER

Package Contents:

- Heater Unit
- Remote Control (remove battery insulation tab before first use)
- User Manual

Control Panel Buttons:

- Power / Standby
- Mode
- Plus (+)
- Minus (–)
- Reset (Pinhole Reset)

Display Icons:

- Heating Mode (P1 / P2 / P3)
- ECO Mode
- Decorative Light
- Timer
- Child Lock
- Temperature Unit (°F / °C)

3. USING YOUR HEATER

Power On / Standby  :

- Plug in the heater. Indicator light turns amber,
- Press the power button on heater, the heater turns on, the Default mode is P1 Low Heat. At this moment, the controller is activated and can control the heater.
- Press power button on heater again or press power button on controller, the heater enters standby, meanwhile the controller cannot control the heater, fan

continues running for 10 seconds for cooling.

Mode Selection:

Press the Mode button to cycle through:

Heating → ECO → Decorative Light → Timer → Heating

If no operation occurs for 10 seconds, the display turns off automatically.

Heating Mode (P1 / P2 / P3):

Use + / – to adjust heat level.

P1 Low Heat: 800W

P2 Medium Heat: 1000W

P3 High Heat: 1500W

Heating runs continuously without temperature sensing in this mode.

ECO Mode (Energy Saving):

- Adjustable temperature range: 60°F–90°F (16°C–32°C).
- Default temperature: 72°F.(22°C)
- Use + / – to adjust temperature.
- Long-press + and – together for 2 seconds to switch °F / °C.

Decorative Light Mode:

- Press Mode until light icon flashes.
- Press + / – to select L1 → L2 → OFF → Cycle.
- If no selection is made, unit returns to previous heating/ECO mode.

Timer Mode:

- Adjustable from 1–12 hours.
- Press + / – to adjust.
- When timer ends, heater enters standby automatically.
- For safety, the heater automatically shuts off after 24 hours of continuous operation.

Child Lock:

- Long-press Mode + Plus for 2 seconds.
- Display shows CL.
- Repeat to unlock.

Reset Function:

- Insert a pin into the reset hole and press for 2 seconds.
- Restores factory default settings.

Fan Delay Protection:

- ECO Mode: fan runs 25 seconds after heating stops.
- Power Off: fan runs 10 seconds.

4. CLEANING AND MAINTENANCE

- Always unplug before cleaning.
- Wipe exterior with a soft dry cloth.
- Clean air inlet using brush or vacuum.
- Do not use water or chemical cleaners.
- Do not disassemble the unit.

5. TROUBLESHOOTING

Heater not starting:

- Check power connection.
- Ensure outlet is working.

Display shows E1:

- Overheat or sensor fault.
- Unplug and allow to cool.
- Contact service if persists.

Remote not working:

- Replace battery.
- Remove insulation tab.

6. TECHNICAL SPECIFICATIONS

Input Voltage: 120V ~ 60Hz

Heating Power: 1500W

Remote Charging: 5V/300MA

Type-C Charging Input: 5VDC 300MA MAX

Type-C Charging Input: 5VDC 2A MAX

Protection: Overheat

WARNING: Magnetic charging port is for charging In Poor Taste LLC (model: COZYPOD2.0-C) remote controller only. Do not connect other devices.