 


INSTRUCTIONS

Bluetooth/AUX/USB/TYPE-C/Wireless charging
multi-function touch-tone sofa speakers

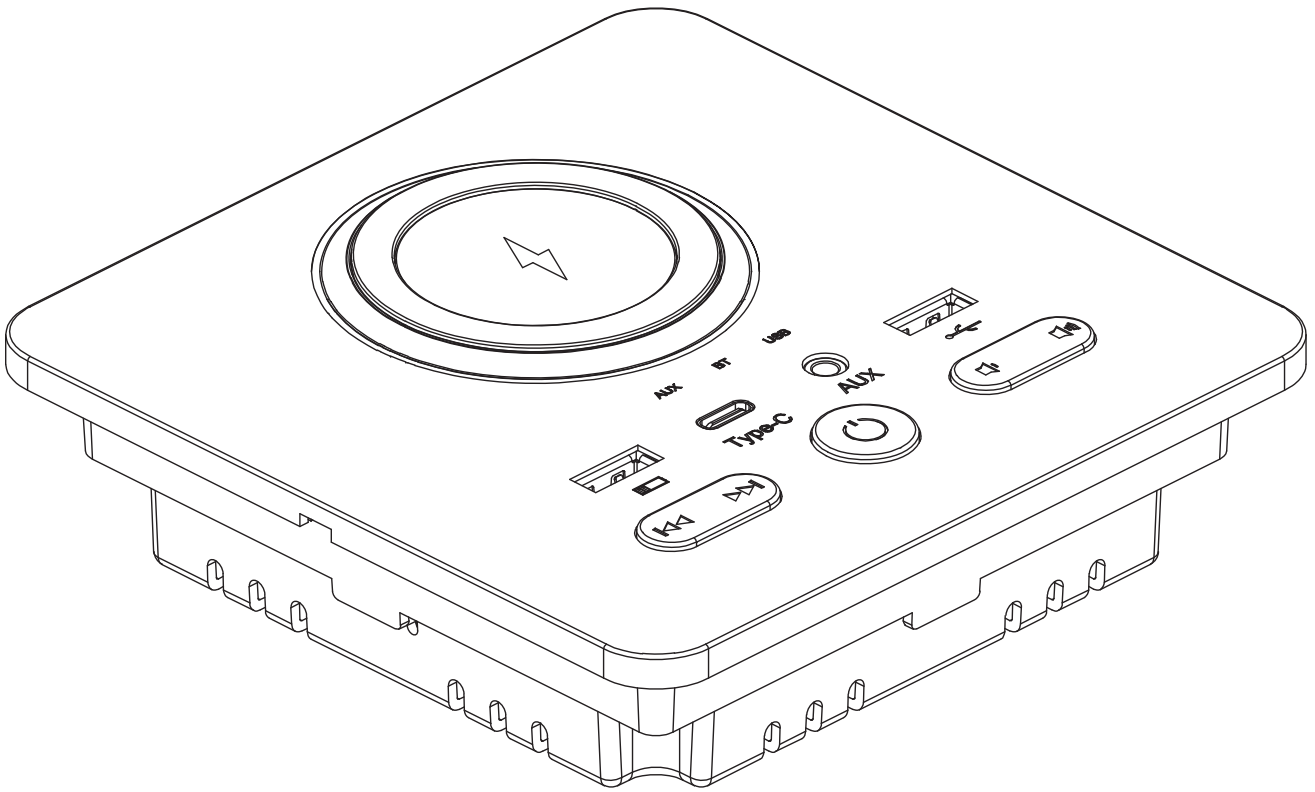

MODEL: Sofa soundbar

Please read carefully this user manual before
operating the sofa music system

Features

Thank you, our distinguished customer, for choosing the latest generation of multi-functional sofa music system. The system enable automatic switching from one mode to another (Bluetooth /USB), with the perfect touch buttons plus a strong 2.1 bass AMP, with good sound quality and beautiful appearance. We sincerely hope that it could give you an extraordinary experience of enjoying the music at this digital age.

The main functions

USB:USB interface supports playing music on flash disk.

 
Wireless charging:Supports wireless charging for mobile phones with wireless charging function.

AUX:supports playing music on mobile phone,computer, television and other audio input via AUX cable.

Precautions

Before use, please read the instructions to ensure proper use of this product. For better service, the product performance specifications are subject to change, and the content of this manual may be updated without further notice. To maintain good performance of the product, do not use it in too hot, dusty, or humid environments.

Control Panel

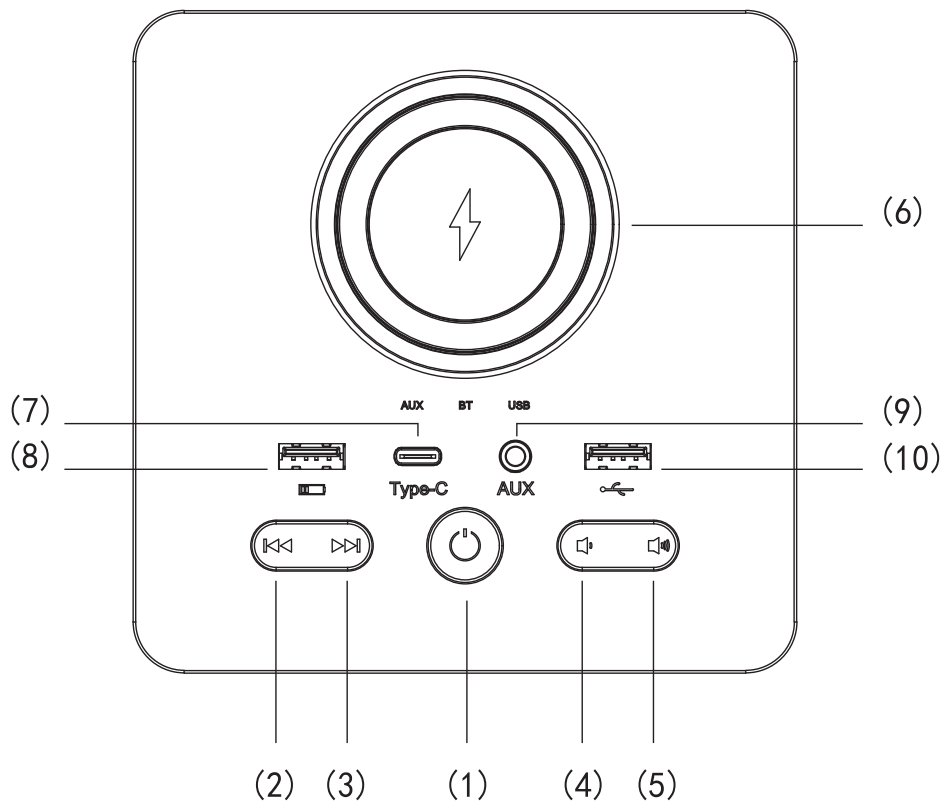

(1).Power on and off: Press and hold this button for 3 seconds to turn on the device, and press and hold for 3 seconds to turn off the device, and click to pause playback.

(2).Previous: Click to play the previous song(except AUX)in the playing state.

(3).Next:Click to play the next song(except AUX)in the playing state.

(4).Volume - : Click to reduce the volume when playing.

(5).Volume + : Click to increase the volume when playing.

Maximum volume,click to make a beeping sound.

(6).Cordless charging: Wireless charging area.

 
(7).T-c socket: Type-c charging interface maximum 18W.

(8).USB charging: USB charging interface 5V1A.

(9).AUX socket: audio input port.

(10).USB port: USB disk play music port.

Installation Guide

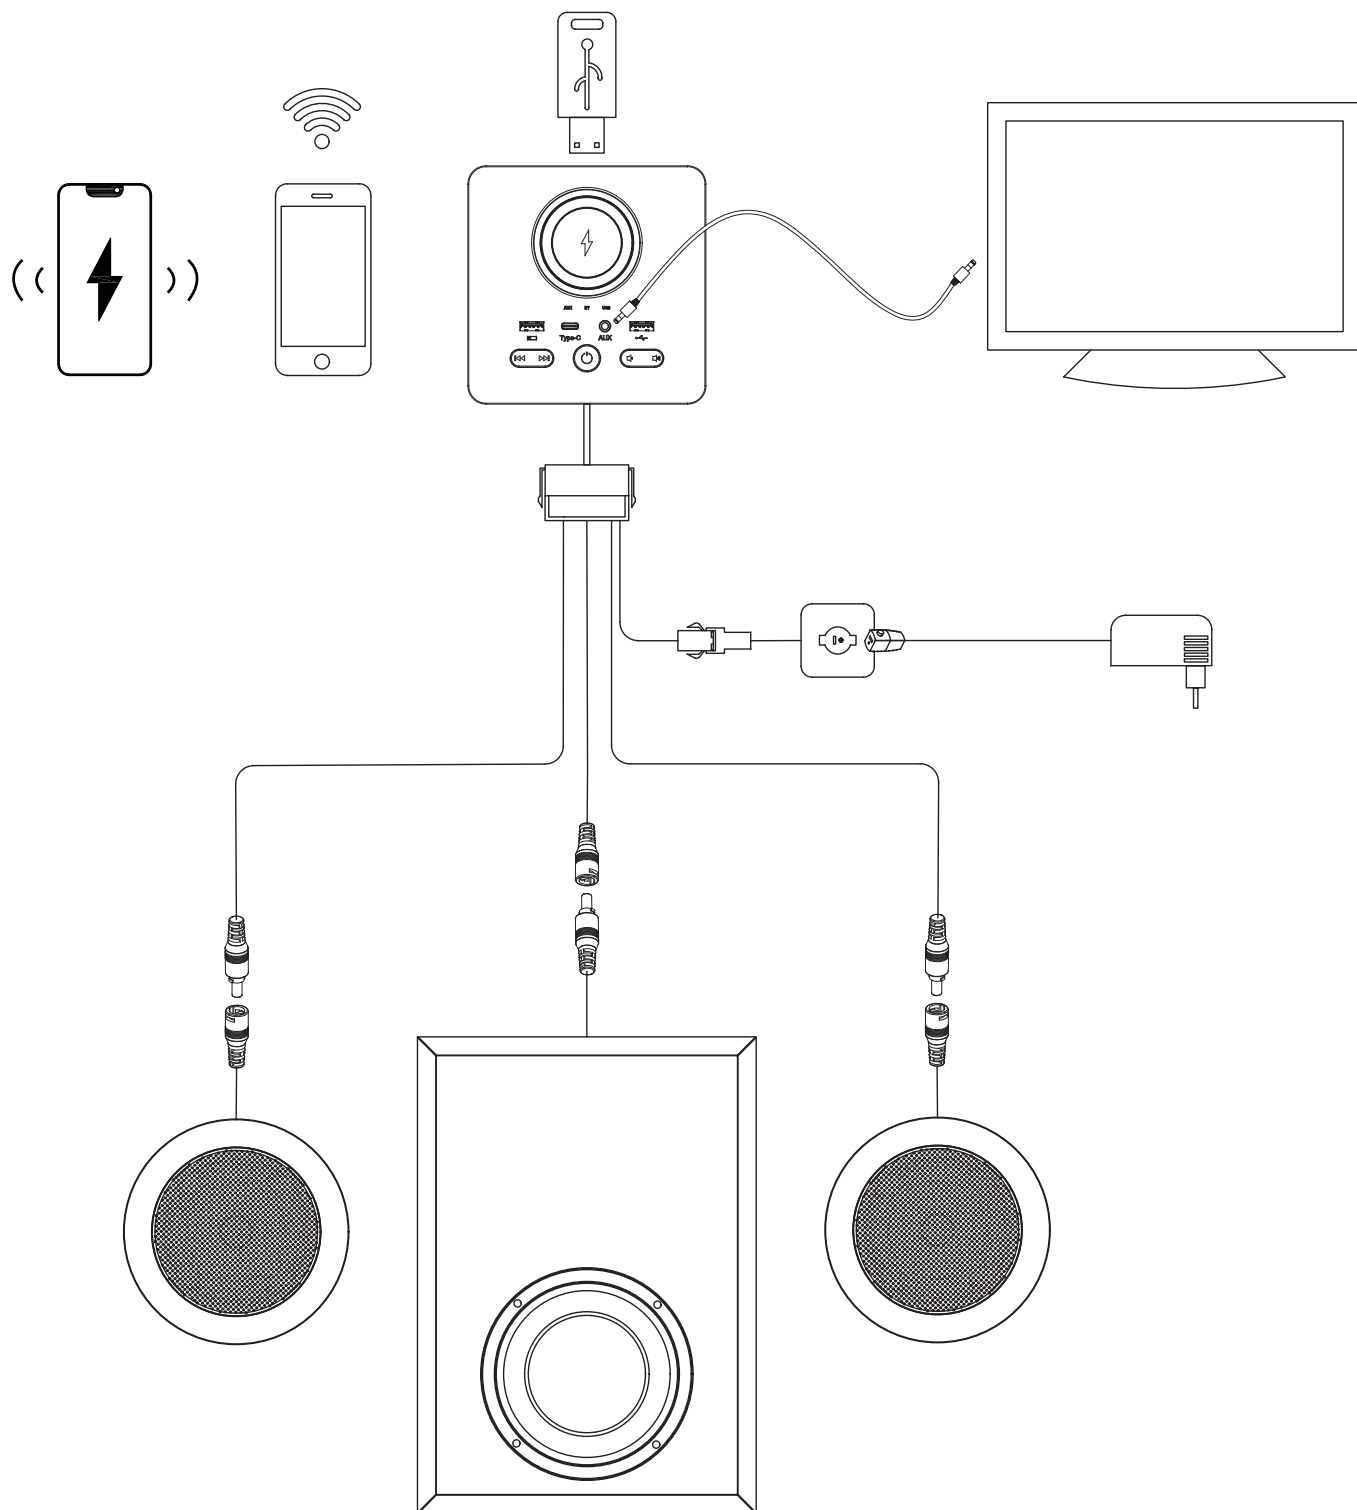

Specifications

Power input:

DC29V/2A

Frequency response:

50HZ-20kHz

SNR:

≥80dB

Maximum distortion:

≤10%

Maximum output power:

30W+2x13W

Speaker impedance:

4Ω

Adjustment forms:

Touch button for power switch/automatic mode switch/Volume adjustment/Previous and next song switch

Bluetooth distance:

≤10m in open areas

Bluetooth transmitting frequency:

2.4G

USB function:

Support playing music on flash disk and charging mobile phone via USB cable

How To Use

Bluetooth Mode

Bluetooth mode is set as default mode for playing music when the sofa music system is turned on (press and hold the power button until the voice announcement "power on" is made) , and Bluetooth indicator light "BT" is shining. First search the Bluetooth device list in mobile phone, and click to connect "Sofa sounbar", the name of the sofa music system, and the indicator light "BT" always light. Then it is ready to play music from the mobile phone. (While music is playing ,the "BT" flashes.)

USB Mode

When insert a USB device flash disk,"USB"indicator light is on,and the play mode will automatically switch to USB mode,scanning USB devices and automatically play music files.

AUX Mode

When insert the 3.5mm audio cable to the AUX connector, it will automatically switch to the AUX mode,and"AUX"indicator light is on. And it's ready to play music from phone,TV,and computer.In this mode, only can control the volume adjustment and mute of audio devices, but cannot use the previous and next song switching function.

Wireless charging

Place the mobile phone with wireless charging function in the wireless charging area and start wireless charging.If the mobile phone does not have wireless charging function,it should be equipped with wireless receiver use.

Maintenance and Troubleshooting Guides

Before you think to repair the sofa music system for problems, please check first the following FAQ and troubleshooting guides to find the possible causes of the problem you are experiencing. Some simple checks or minimum adjustment you make is likely to solve the problem and restore normal operation of the device. If you have some points in doubt, or, can not resolve the problem pls turn to professional maintenance personnel for solution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FAQ	Troubleshooting Guides
In the mode of USB, not able to play music on iphone/ipod	The version of iphone/ipod is old,not the latest thus can not play music automatically for the first time connection.You could try to play music manually,and from the second time,it could play music automatically once connected via USB cable.
In the mode of USB, not able to play music on Android system mobilephone	Please make sure your Android phone supports OTG function,or it could be the Android version being old not the latest.Pls confirm it's Android 4.3 or above.
No sound	Please check whether it's the speakers volume being too low or they are not correctly connected.If the problem still exist after checking the music system is all connected in correct form,the speakers need to be replaced.
Not able to turn on the device	The power supply is not plugged in correctly.If confirm there is something wrong with the power supply,it needs to be replaced. Or if the power supply is in good condition,then it's likely that there is a problem with the device,it would have to be replaced.
No response the device	Please unplug and plug the power supply and try again. iphone/ipod/Android phone/USB is not plugged in correctly.
Touch button does not work	Please do not press too hard on the touch button and check whether if there is any obstacle or water on top of the button, and try to unplug and plug the power supply and try again.
In mode of Bluetooth not able to connect the device to the music system	Please turn off the bluetooth connection of the device like iphone/ ipad/Android phone etc(within the connecting distance)that has been already connected to the music system,and then turn on the bluetooth of the other device that you want to connect to the music system,and search"QH001",the name of the music system and click to connect it,Please make sure the connecting distance is within 10 meters,and avoid the wall and the corner.