


猫耳无线耳机 说明书
材质：80g书纸，四色双面印刷
展开尺寸：304.8mmX120mm
需要折叠好送货（风琴折）

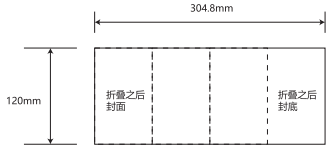

折叠方式
虚线为折痕

VANTAGE™
POINT

CAT EAR WIRELESS HEADSET
(VP310)

INSTRUCTION MANUAL

IMPORTANT SAFETY INSTRUCTIONS

Read these instructions carefully.

WARNING: When using this product, basic precautions should always be followed, including the following:

All cautions and warnings should be followed.

Hearing Safety:

- Prolonged exposure to loud sounds can damage your hearing.
- Use the 60/60 rule: listen at 60% of the maximum volume for a maximum of 60 minutes, followed by a break.
- Avoid using your headset in situations where you need to be aware of your surroundings, such as driving or cycling.
- If you need to block out noise, consider using earplugs instead of increasing the volume on your headset.
- If you experience any hearing loss or ringing in your ears, stop using your headset and consult a doctor.

General Safety:

- Do not use your headset while operating heavy machinery or driving.
- Do not use your headset while swimming or showering.
- Do not expose your headset to extreme temperatures or direct sunlight.
- Do not use harsh chemicals or cleaning agents to clean your headset.
- Do not modify or attempt to repair your headset yourself.
- Discontinue use if your headset is damaged.
- Store your headphones in a cool, dry place.
- Do not put the product close to fire because that could cause deformation or malfunction.

Cautions for Rechargeable Battery:

- The headset is equipped with a rechargeable battery (lithium-ion battery).
- The internal rechargeable battery of this product cannot be replaced by the user. The battery may have reached the end of its service life if the

usage time becomes significantly shorter even after the battery has been fully charged.

- If battery fluid gets into eyes, do not rub them. Rinse thoroughly with clean water such as tap water and consult a doctor immediately.
- If battery fluid leaks, do not touch fluid with bare hands.
- If fluid gets in your mouth, gargle thoroughly with clean water such as tap water and consult a doctor immediately.
- If your skin or clothing comes in contact with fluid, immediately wash the affected skin or clothing with water. If you experience skin irritation, consult a doctor.

To avoid leakage, generation of heat or explosion:

- Never heat, disassemble or modify the battery, nor dispose of it in a fire.
- Do not attempt to pierce with a nail, hit with a hammer or step on the battery.
- Do not drop the product or subject it to strong impact.

This device complies with Part 15 of the FCC Rules Operation is subject to the following two conditions:

1) this device may not cause harmful interference, and

2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

NEED HELP?

Have any questions or comments about your product? Need help with troubleshooting, service, or repair?

CONTACT US:

Geeknet, Inc. 625 Westport Pkwy, Grapevine, TX 76051
https://www.gamestop.com/contact
Phone: 1 (800) 883-8895

Model: Cat Ear Wireless Headset-VP310
SKU: 420375
Made in China
Manufactured for Geeknet, Inc.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Geeknet, Inc. is under license. Other trademarks and trade names are those of their respective owners.

正面

WHAT'S INCLUDED

- Gaming Headset
- Decorative Stickers
- Type-C Cable

- User Instruction
- 2x Removable Cat Ears

HOW TO REPLACE CAT EAR ATTACHMENTS

To disassemble, grip firmly and lift upwards.

Align the cat's ears with the headband and then drop them into place.

GET STARTED

- Before first use, fully charge the headset for 2 hours using the provided USB cable. Turn on the headset and enter pairing mode on the device.
- Search for the headset name: VP310

SPECIFICATIONS

- Model: VP310
- Bluetooth Version: v5.3
- Frequency Band: 20 Hz - 20 kHz
- Supported Codec: SBC, AAC
- Multipoint Connectivity: Yes (2 devices)
- Charging Current/Voltage: DC5V ⇄ 1A
- Battery Capacity: 500mAh (Lithium)
- Charge Time: Approximately 2 hours (full). Safety Note: The headset powers off during charging, disabling Bluetooth, AUX-In audio remains functional.
- Continuous Music Playtime: up to 40 Hours
- Battery Life Standby: Approx. 125 Hours

HEADSET BUTTON GUIDE

Function	Procedure
Power On	Hold power button for 2 seconds
Power Off	Hold the power button for 3 seconds
Play/Pause	Quick press the power button
Previous Song	Long press the volume (+) button
Next Track	Long press the volume (-) button
Volume Increase	Quick press the volume (+) button
Volume Decrease	Quick press the volume (-) button
Answer Incoming Call	Quick press the power button during an incoming call
Hang up Phone Call	Quick press on the power button while on a call
Refuse Incoming Call	Long press the power button
Voice Assistant	Double-click the power button
Bluetooth Reconnection	When turned on, the earphones will automatically reconnect to the last paired Bluetooth device.
Reset Pairing	To reset pairing, power on the device, then simultaneously press & hold the Volume (+) and Volume (-) buttons together for 5 seconds. A 'beep' sound will confirm the reset.

BLUETOOTH® CONNECTION AND STATUS GUIDE

Pairing Mode

- Bluetooth will automatically initialize upon power-on with the LED indicator flashing red and blue alternately followed by audible "Pairing" voice prompt.

Successful Pairing

- Upon successful connection, a flashing blue LED will illuminate followed by an audible "Connected" voice prompt.

Phone-Initiated Bluetooth Disconnection

- When the phone actively disconnects, the headset will enter pairing mode, indicated by flashing red and blue LED followed by a "Disconnect" audio prompt.

Out of Range Disconnect/Reconnect

- When out of range, the headset will enter pairing mode, indicated by flashing red and blue LED followed by a "Disconnect" audio prompt.
- The headset attempts automatic reconnection for 5 minutes. If successful, it will connect.
- The headset will automatically power down after 5 minutes of unsuccessful connection attempts.

Power-on Reconnection

- The headset will automatically establish a connection with the last paired device.

Power Saving Mode

- After 5 minutes of disconnection, the headset will power down.

Bluetooth Multipoint Connectivity

- Bluetooth multipoint allows the headphone to connect and switch between two devices without disconnecting and having to reconnect.

Here's how to set it up:

- Step 1: Pair your headphones with the first device.
- Step 2: After pairing with the first device, turn off Bluetooth on the first device, which will put your headphones back into pairing mode.
- Step 3: Enable Bluetooth on your second device and connect to your headphones.
- Step 4: Turn Bluetooth back on in the first device's settings and reconnect to your headphones.
- Step 5: Verify that devices are connected to the headset.

反面