

PAXA Earclip C7

True Wireless Earphones

Usage Instruction

- Do not attempt to disassemble or replace any part of the product except as specifically indicated in the instructions.
- Do not put the product in water or any other liquid, this product is not waterproof design.
- If any liquid accidentally enters the product, disconnect and remove the product immediately.
- To avoid electric shock, please ensure that your hands are free of water when installing or unloading the product.
- Do not place this product near a heat source or directly expose it to a fire source.
- Do not place the product in an environment with strong electromagnetic force, otherwise it will lead to product failure.

Packing list

Headphone × 2	Charging case × 1
User manual × 1	Type-C × 1

Product schematic description

Product specification

Bluetooth version: V5.4
Transmission distance: 100m
Battery capacity: 28mAh
Usage time: approximately 5 hours (headphones)
Charging time: approximately 1.5-2 hours (headphones)
Radio type: BLE/BT LE

Charging case specification

Battery capacity: 200mAh
Charging time: approximately 1.5-2 hours
Radio type: BLE/BT LE
All technical information is subject to actual performance!

Charge the Charging case

Connect the Type-C Cable to the 5V power adapter, and another end to the charging port of the Charging case.
(Note: When the voltage is lower than 4.2v and the full battery prompt is raised, please charge the Charging case at a higher voltage.)

LED indicator light status and prompt tone

- When the LED indicator light shows red flash, and the prompt tone is "Power off".
- When the LED indicator light shows blue flash, and the prompt tone is "Full Charge".
- When the LED indicator light shows green flash, and the prompt tone is "Low Battery".
- When the LED indicator light shows yellow flash, and the prompt tone is "Low Battery".
- When the LED indicator light shows red flash, and the prompt tone is "Low Battery".
- When the LED indicator light shows blue flash, and the prompt tone is "Low Battery".
- When the LED indicator light shows green flash, and the prompt tone is "Low Battery".
- When the LED indicator light shows yellow flash, and the prompt tone is "Low Battery".
- When the LED indicator light shows red flash, and the prompt tone is "Low Battery".

Headset Indicator Light

The headset has two types of indicator lights: the light of the headset connection and the light of the headset battery level.

- When the headset connection is successful, the light of the headset connection is green.
- When the headset connection fails, the light of the headset connection is red.
- When the headset battery level is low, the light of the headset battery level is yellow.
- When the headset battery level is full, the light of the headset battery level is green.

Product operating instructions

- Power on**
Method 1: Take it out from the charging compartment, and the headset automatically starts.
Method 2: Press and hold it manually for 3 seconds to turn it on.
Radio type: BLE/BT LE
- Power off**
Method 1: Put the headset back into the charging bin, and turn off the headset.
Charging time: approximately 1.5-2 hours to turn it on.
Method 2: Press and hold it manually for 5 seconds to turn it on.
Radio type: BLE/BT LE
- Pairing to the BT device**
 - Open the top cover of the charging bin and take out the earphones.
 - Press and hold the function button of the earphone for 3 seconds to enter pairing mode.
 - Press and hold the function button of the earphone for 3 seconds to enter pairing mode.
 - Press and hold the function button of the earphone for 3 seconds to enter pairing mode.

Music playback

Left/right headphone operation

- Previous track: Triple-click any function button of the earphone
- Next track: Double-click any function button of the earphone
- Play/Pause: Single-click any function button of the earphone

Phone Hands Free

Left/right headphone operation (in incoming call state)

- Answer a call: Single-click any function button of the earphone
- Reject a call: Long press any function button of the earphone
- End call: Single-click any function button of the earphone

Voice assistant

Left/Right Earphone Operation

- Long press any function button of the earphone for 3 seconds to wake up the voice assistant

Name and content of hazardous substances in products

Part Name	PB	Hg	Cd	CNi	PBB	PDE
Front panel	○	○	○	○	○	○
Back panel	○	○	○	○	○	○
Control module	○	○	○	○	○	○
Moving module	○	○	○	○	○	○

This form is completed in accordance with GB/T 11944.

All components of the product are made of homogeneous materials. The material composition of all homogeneous materials of the parts is listed in the following table:

"Y": Indicates that the content of the hazardous substance is at least one of the homogeneous materials of the parts exceeds the limit requirements specified in GB/T 11944.

The parts marked with "N" in this form are not harmful due to the limited global technological development substitution of substances.

Prohibited disposal recommendations*: including printed circuit boards and their parts, electronic components, etc., depending on the local laws, regulations, standards, and policies, the product you purchased may not contain all the above elements.

Environmental protection symbol

Electronic and electrical products sold at the People's Republic of China must mark this logo. The trademark in the logo represents the manufacturer's commitment to environmental protection and green production.

Manufacturer: Shanghai Hengshang Culture Communication Co., Ltd.
Address: No. 151 Xunhuo Road, Jiangling Township, Chongming District, Shanghai (Shanghai Hengshang Economic Development Zone)

Warranty Service

Use note: This warranty card is the proof of your future warranty application, please妥善保管好此卡以便日后保修使用。

Dear user	
User name	Email
Contact number	Postal code
Vendor information	
Product information	
Product name	Product number
Product barcode/serial number/Brand number	
Vendor information	
Name	
Address	
Contact number	Postal code
Sales date	Invoice number
Remarks	

FCC Statement

According to Part 15 of the FCC Rules, this device has been tested to meet the provisions for Class B digital devices. These restrictions do not allow this device to provide reasonable protection against harmful disturbances in residential facilities. The device generates and uses radiofrequency energy. If this instruction is not installed and used in accordance with the regulations, it may cause harmful interference to radio communications. There may also be some interference between the device and other equipment in a particular installation. If this device has built-in radio or television reception, this interference may prevent the device from receiving desired broadcasting and/or when the device is encouraged to try to pass through a narrow or more severe measure before being corrected.

- Redirected or received the receiving antenna.
- Increase the distance between device and receiver.
- Disconnects connected to devices on circuits different from the receiver are placed.

We cannot contact a dealer or experienced radio/TV technician for assistance.

This device complies with Part 15 of the FCC Rules. The operation is restricted to the following two conditions:
(1) The device shall not cause harmful interference.
(2) The device must accept any received interference, including interference that may cause unexpected operation.
Changes or modifications that are not explicitly approved by the compliance responsible party may invalidate the user's permission to operate the device.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

[illegible][illegible][illegible][illegible]

文件名称	PAXA Earclip C7说明书			材料	70g书写纸		单位	mm	厂商物料编号	变更履历	修改		日期	
文件尺寸	54x80mm（单P尺寸）			工艺	1C印刷 风琴折 	公差	±0.5mm				审核		日期	
设计日期	2025/03/31	文件版本	V02			比例	1:1				批准		日期	