 
 


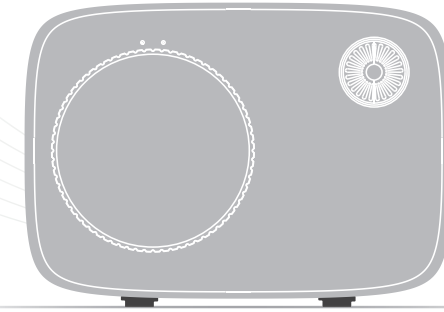


User Manual

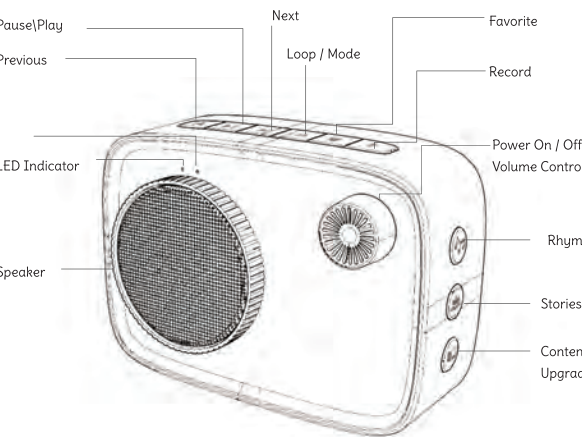

Know the Product



 Know the Product

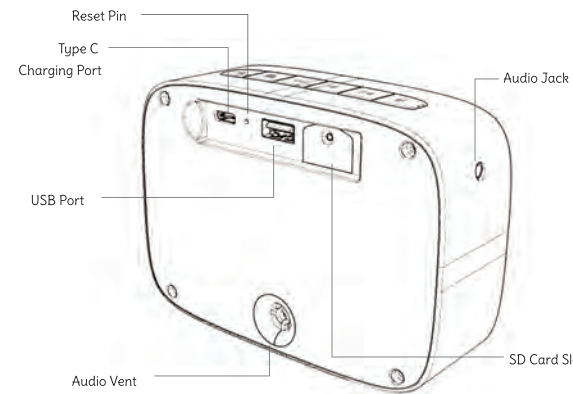

Key Functions



Rhymes

Enter Rhymes Playlist: Press the button briefly.
Next Playlist: Press the button briefly.
Previous Playlist: Press the button twice.



Stories

Enter Stories Playlist: Press the button briefly.
Next Playlist: Press the button briefly.
Previous Playlist: Press the button twice.



Content Upgrade

Enter Personal Playlist: Press the button briefly.
Next Playlist: Press the button briefly.
Previous Playlist: Press the button twice.

Note: Users can add their preferred content to their Personal Playlist.

Functions



Power ON/OFF & Volume Control
Power ON / Volume Increase: Rotate the knob clockwise.
Power OFF / Volume Decrease: Rotate the knob counter-clockwise.



Playback Controls

Previous Track: Press the button briefly.
Skip 5 Previous Tracks: Press and hold the button.



Pause: Press the button briefly.



Play: Press the button briefly again.



Next Track: Press the button briefly.



Skip Next 5 Tracks: Press and hold the button.



Loop and Mode Settings

Loop ON/OFF: Press the button briefly.
Mode Change (Bluetooth & USB Modes): Press and hold the button.

Functions



Favorite Function
Add Track to Favorite Playlist: Press and hold the button.
Play Tracks from Favorite Playlist: Press the button briefly.
Delete Track from Favorite Playlist: Press the button twice during playback.



Recording Function

Start Recording: Press and hold the button.
Stop Recording: Press the button briefly.
Play a Recorded File: Press the button briefly.
Delete a Recorded File: Press the button twice during playback.

NOTE:

If USB is inserted in the device while recording, the recorded tracks will get saved on the USB in a separate folder titled 'RECORDING'.

LED LIGHT INDICATOR



- Blue flash for 2 seconds
- LED off
- Fast blinking blue
- Red and blue flashing
- Solid blue
- Solid red

- Power ON
- Playback
- Recording
- Bluetooth Connecting
- Bluetooth Connected
- Charging



Device Pairing

- Long press the Mode key to enter Bluetooth mode.
- The LED will blink red and blue.
- Turn on Bluetooth on your smartphone/laptop.
- Select "WonderBuddy W11" from the list.
- Enter password 0000 if prompted.