



www.wonderbuddyworld.com

Vikaa Innovations Private Limited

1601, 16th Floor, Luthra Supertech, Sakinaka Road, Sakinaka,
Andheri East, Mumbai-400072, Maharashtra, India

Consumer Complaints & Feedback:

Contact our Support Buddy at the Marketer's address or
email at - help@wonderbuddyworld.com

Designed by Vikaa Innovations Private Limited

Model Number: WB1
FCC ID: 289AAR-WB1

Content Playlist

500+ Stories & Rhymes curated across 10 magical playlists.

Stories Playlist:

- Fantastic Fairy Tales
- Fabulous Fables
- Tales from Around the World
- Heroic Tales
- Spooktacular Stories
- Sci-Fi Tintlers

Music Playlist:

- All Time Favorites
- Sing Along Rhymes
- Learn Along Rhymes



How to update content?

- 1.Connect your device to the computer using a Type-C USB data transfer cable.
- 2.Press do not change any of the folder names.
- 3.Open the WonderBuddy memory drive under "My Computer".
- 3.You will see multiple folder categories as below.

- | | |
|--------------|-------------|
| ■ MUSIC_1 | ■ STORIES_1 |
| ■ MUSIC_2 | ■ STORIES_2 |
| ■ MUSIC_3 | ■ STORIES_3 |
| ■ PERSONAL_1 | ■ STORIES_4 |
| ■ PERSONAL_2 | ■ STORIES_5 |
| ■ PERSONAL_3 | ■ STORIES_6 |
| ■ RECORDING | ■ STORIES_7 |

4.The folders names Personal_1, Personal_2, Personal_3 are designate to update new content.

5.By default, these personal folders are empty for you to update with your own content.

How to update content?

- 1.Connect your device to the computer using a Type-C USB data transfer cable.
- 2.Press do not change any of the folder names.
- 3.Open the WonderBuddy memory drive under "My Computer".
- 3.You will see multiple folder categories as below.
- 5.Close the WonderBuddy Drive on your computer and disconnect the data cable to start playing content on your WonderBuddy device normally.

Note

Use a Type-C USB cable with data transfer capability.
The device should be in Power On mode during data transfer.
A voice message "Data Transfer Mode" will confirm a successful connection.

Caution

- Always supervise children aged 3 and under while using the product.
- The battery charger should be handled by adults or under adult supervision.
- Regularly check the charger for damage.
- Do not use a damaged charger.
- Do not rename folders on the SD Card: Music, Stories, Recording, and Personal.
- Avoid charging for more than 4 hours continuously.
- The device will auto-shutdown when the battery is nearly depleted. Ensure the power switch is off before charging.
- Clean the product with a soft cloth. Avoid water exposure as the product is not waterproof.
- Keep the product away from direct sunlight and extreme temperatures.

Limited Warranty

The manufacturer warrants that the Audio Storybox will be free from defects in workmanship and materials for 6 months from the date of retail purchase. During this period, repairs will be provided free of charge for both parts and labor. Visit www.wonderbuddyworld.com for more details.

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and the receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.



If you love what we do,
follow us on social media for more fun and updates!

Let's turn every day into a
magical storytelling adventure together!