


Using Magic Remote Control

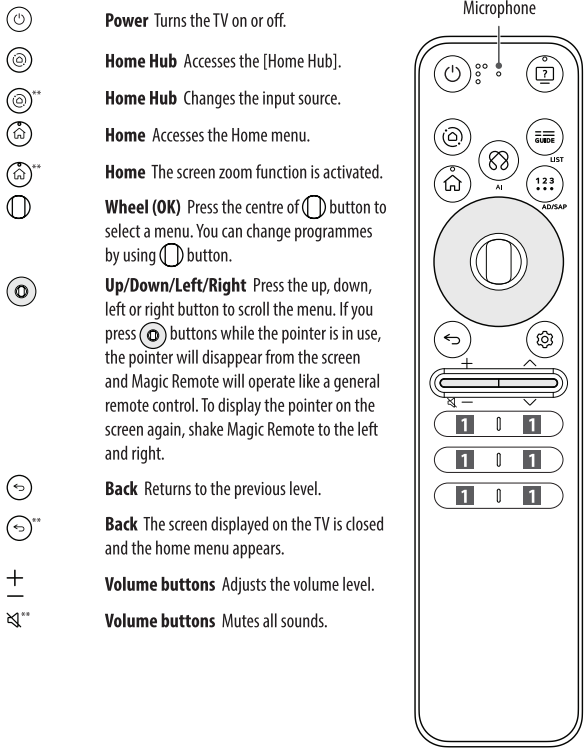

The descriptions in this manual are based on the buttons on the remote control. Please read this manual carefully and use the TV correctly.
(Some buttons and services may not be provided depending on models or regions.)

How to register the Magic Remote Control

To use the Magic Remote, first pair it with your TV.

1. Put batteries into the Magic Remote and turn the TV on.
2. Point the Magic Remote at your TV and press the **Wheel (OK)** on the remote control.

* If the TV fails to register the Magic Remote, try again after turning the TV off and back on.

How to deregister the Magic Remote Control

Press the **(Back)** and **(Home)** buttons at the same time, for five seconds, to unpair the Magic Remote with your TV.

* Press and hold the **(Home)** and **(Q. Settings)** buttons for more than 5 seconds to disconnect and re-register the Magic Remote at the same time.



It is recommended that an Access Point (AP) be located more than 0.2 m away from the TV. If the AP is installed closer than 0.2 m, the Magic remote control may not perform as expected due to frequency interference.

Using Always Ready

(Depending on model)

You can operate the TV and connect to Bluetooth with direct voice recognition while the power is off.

* **[General]** **[Always Ready]**, setting **[Enable the function]** to on.

* Pressing the **(Power)** button while watching TV switches the screen to **[Always Ready]** that is turned on, and pressing the **(Power)** button once more turns the screen to **[Always Ready]** that is turned off.

* Press the **(Home)** button or the **(Back)** button to watch TV when the screen is in **[Always Ready]** that is turned on.

* Press the **Wheel (OK)** button to display the wallpaper when the screen is in **[Always Ready]** that is turned off, and press the **(Power)** button to watch TV.

✓ Note

Using Always Ready may increase energy consumption.

For more information about the feature, refer to the **[Support]** **[User Guide]** **[Troubleshooting]** **[Learn More About Always Ready]**.

Accessibility Accesses the [Accessibility] app.

Accessibility Accesses the [Accessibility Shortcuts].

Accesses the [Guide].

Accesses the saved programmes list.

AI Network connection is required to use the voice recognition function.

Check for recommended content. (Some recommended services may not be available in some countries.)

AI Speak while pressing and holding the button to use the voice recognition feature.

More actions Displays more remote control functions.

Audio descriptions function will be enabled.

Q. Settings Accesses the Quick Settings.

Q. Settings Displays the All Settings menu.

Programme buttons Scrolls through the saved programmes.

Various services button Connects to various services such as streaming and voice search.

Warning

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC Statement

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in the portable exposure condition without restriction.