


SPEED 10

A C T I O N C A M E R A

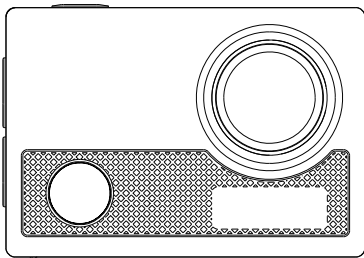


USER MANUAL

English

V20241111D

YOUR CAMERA

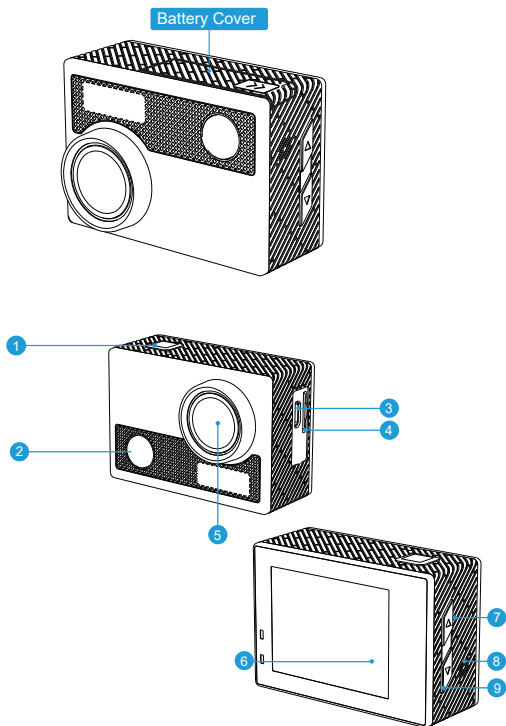

- | | |
|---------------------|------------------|
| 1 OK/Shutter | 6 Display Screen |
| 2 Power/Mode Button | 7 Up |
| 3 Type-C Port | 8 Speaker |
| 4 SD Card Slot | 9 Down |
| 5 Lens | |

Note: The camera will not record sound when it is in the waterproof case.

Camera specifications

Model	Speed 10
Lens	170°HD wide-angle fish-eye lens
APP	Hiicam
Screen	2" Screen
Picture Format	JPG
Video Format	MP4
Memory Card	Support 64-256GB U3 Micro SD Card
Video Code	H.264
Recommend Resolution	Video: 4K30FPS/Picture: 12MP
Speaker	Built-in
Microphone	Internal & External
Connections	Type-C
WiFi	Built-in 2.4G
Working Temperature	-50°F (-10°C)~+122°F (50°C)
Storage Temperature	-50°F (-10°C)~+158°F (70°C)
Operating System	Windows XP/7/8, SP3/Vista and Mac 10.5 or above

1. Power on the camera

Press and hold the Power button for 3 seconds to turn on the Speed 10. Ensure all the camera covers are securely closed before powering it on.

2. Operation Instructions

2.1 Powering on or off

While the camera is off, press and hold the Power button for 3 seconds to turn it on.

While the camera is on, press and hold the Power button for 3 seconds to turn it off.

2.2 Switching shooting modes

On the preview screen, you can short-press the Power/Mode button to switch modes.

Tip: To exit the mode menu, please press the Power/Mode button once.

There are 9 modes of this action camera: Normal Video, Slow Video, Loop Video, Timelapse Video, Normal Photo, Auto Timer Photo, Burst Photo, Timelapse Photo and WiFi.


2.3 Zooming in or out

On the preview screen, long press and hold Up or Down to zoom in or out, support Up to 5X.

2.4 Using the shutter button

In Photo or Video mode, press the Shutter button to capture photos or start Video recording.

To stop recording in Video mode, press the Shutter button again.

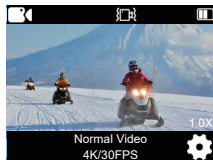

2.5 Entering the settings screen

On the preview screen, press and hold the OK button to enter the settings screen. Then, press Mode button to configure the photo or video and system settings as you wish.

2.6 Entering the playback screen

On the preview screen, press the Down button to enter the playback screen. You will be able to access the video or the photo set to playback or delete files.

To exit the playback screen, simply press the Mode button.

2.7 Turning WiFi On or Off



Turning on WiFi

Quick Entry: When the camera is turned on, press Up button to turn on WiFi.

WiFi Mode Entry: To enter the mode page, press the Mode button. Next, use the Down button to navigate and select the desired mode. Once you

locate the WiFi option, press the OK button to activate WiFi connectivity. The camera will enter WiFi mode and display the WiFi information in 3 seconds.

Turning off WiFi

In WiFi mode, press Up button or Mode button again to turn off WiFi.

In Video/Photo Preview Interface

Video Menu


The camera is in Normal Video mode by default when it's turned on. Video modes of this camera include Normal Video, Slow Video, Loop Video and Timelapse Video.

1.Video Modes

(1) Normal Video Mode

In Video mode, press the Shutter button to record video in the set resolution. On the preview screen, long press and hold Up or Down to zoom in or out, support Up to 5X.

Tip: You can also enter the video mode menu to enable Video mode.

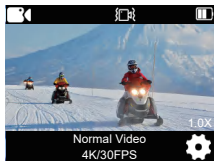

(2) Slow Video Mode

To enter Slow Video mode, short-press the Power/Mode button to enter the modes selection interface to choose Slow Video. Lastly, go back to the preview screen.

In this mode, press the Shutter button to record a slow-motion video at the set resolution and speed. On the preview screen, long press and hold Up or Down to zoom in or out, support Up to 5X.

Before recording slow videos, you can enter the video settings screen to configure the resolution and speed.

(3) Loop Video Mode

To enter Loop Video mode, short-press the Power/Mode button to enter the modes selection interface to choose Loop Video. Lastly, go back to the preview screen.

In this mode, press the Shutter button to record a loop video of the set length.


On the preview screen, long press and hold Up or Down to zoom in or out, support Up to 5X.

Before recording loop videos, you can enter the video settings screen to configure the resolution and Video Length.

(4) Timelapse Video Mode

To enter Timelapse Video mode, short-press the Power/Mode button to enter the modes selection interface to choose Timelapse Video.

In this mode, press the "Shutter" button to capture a series of videos at the set interval. On the preview screen, long press and hold Up or Down to zoom in or out, support Up to 5X.

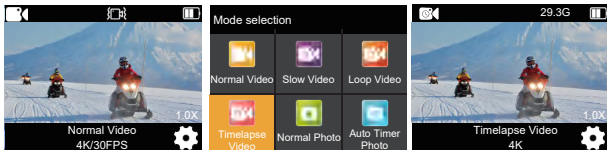

2.Video Settings

(1) Video Resolution:

5K 30FPS/4K 60FPS/4K 30FPS/2.7K 60FPS/2.7K 30FPS/1080P 60FPS/1080P 30FPS/720P 120FPS/720P 60FPS/720P 30FPS (Default setting: 4K 30FPS)

This camera is capable of recording video Up to 5K30FPS, with higher resolution offering greater clarity and detail due to the increased number of pixels. However, higher resolution video also results in larger file sizes. Capturing high-resolution or high-fps videos in warmer conditions may consume more power.

(2) Video Mode:

You can choose the video mode you want from the available options.

- **Normal Video:** In this mode, press the Shutter button to record normal videos. To stop recording, simply press the Shutter button again.

- **Slow Video:** 2.7K 2X /1080P 4X /1080P 2X / 720P 8X / 720P 4X

Slow Video mode allows the camera record videos at the set resolution and slow motion speed. However, the video footage will be saved at a playback speed of 30 frames per second (FPS). As a result, when the video is played back, it will appear to be slowed Down, creating a visually captivating effect.

- **Loop Video:** 1Min / 2Min / 3Min / 5Min (Default setting: 2Min)

In Loop Video mode, if you set Video length to 3Min, the camera will record a video and save the content every 3 minutes. When the memory is full, new video files will overwrite the old ones to ensure continuous recording.

- **Timelapse Video:** 1S / 2S / 5S / 10S / 30S / 60S (Default setting: 1S)

This option enables you to specify the frequency at which the video frames are captured and compiled. The camera will capture a series of videos at

the set interval, making it ideal for taking photos in dynamic or changing scenes, such as clouds, stars, sunsets, and more.

Note:

- ① Timelapse Videos are captured without audio.
- ② Timelapse Interval is available only in Timelapse Video mode.

(3) EIS

Off / On (Default setting: On)

4K 30FPS/2.7K 60FPS/2.7K 30FPS/1080P 60FPS/1080P 30FPS/720P 60FPS/720P 30FPS

Note:

- ① 5K 30 /4K 60/720P 120FPS are not available in EIS mode. Electronic Image Stabilization (EIS) 2.0 effectively corrects the lens distortion, allowing for smooth videos. This feature is suitable for use in riding, skiing, and handheld scenes.
- ② Electronic Image Stabilization is not available in Slow Motion and Timelapse Video modes.

(4) Motion Detection

Off / On (Default setting: Off)

The Motion Detection feature allows the camera to sense movement and automatically start recording video. This process involves the camera detecting the motion of an object in its field of view, or the motion of the surroundings relative to the object.

When Motion Detection is enabled, the camera will automatically start recording video when it detects any movement within its field of view.

(5) Date Stamp

Off / On (Default setting: On)

With Date Stamp enabled, a time and date watermark will be added to the video. You can also set it to Off.

Photo Menu

1.Photo Modes

Photo modes of this camera include Normal Photo, Auto Timer Photo, Burst Photo and Timelapse photo.

2. Photo Settings

(1) Normal Photo

30MP/24MP/ 20MP/12MP / 8MP (Default setting: 12MP)

This camera is capable of capturing 30MP photos, with higher resolution offering greater clarity and detail due to the increased number of pixels. However, higher resolution photo also results in larger file sizes.

(2) Auto Timer Photo

3S / 5S / 10S / 15S / 20S (Default setting: 3S)

The camera captures a series of photos at the set interval, making it ideal for taking photos in dynamic or changing scenes, such as clouds, stars, sunsets, and more.


Note: Timelapse Interval is available only in Auto Timer Photo mode.

(3) Burst Photo

3P/S, 5P/S (Default setting: 3P/S)

Set the number of photos to be taken per second in Burst Photo mode. The camera will continuously take multiple photos at the specific shot.

Note: Burst Photo is available only in Burst Photo mode.

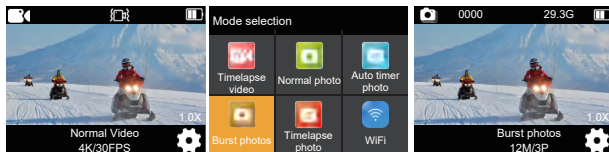

(4) Timelapse Photo

3S / 5S / 10S / 15S / 20S / 30S (Default setting: 3S)

Set the CountDown before the camera takes a photo in Timer Photo mode. For instance, if you set the CountDown to 3S, the camera will Count Down from 3 to 1 before capturing the shot.

Note: CountDown is available only in Timelapse Photo mode.

(5) Time Stamp

Off / On (Default setting: On)

With Date Stamp enabled, a time and date watermark will be added to the photo. You can also set it to Off.

(6) Car mode

Off / On (Default setting: Off)

When Car Mode is enabled, the camera can compensate for the absence of red light in underwater scenes. This mode is ideal for use in tropical and blue waters.

Frequency of the alternating current (AC) that is used in most electrical power systems around the world. If you live in the northeastern area, please set the power frequency to 60Hz, meaning the current changes direction 60 times per second. If you live outside this area, set it to 50Hz.

(7) language

English/Deutsch/Français/Español/Italiano/日本語/한국어/繁体中文/简体中文 (Default setting: English)

You can set the camera's system language.

(8) Date & Time setting

YYYY / MM / DD

You can manually set the date and time for your camera. The camera's date and time will sync with that of your phone once it's connected to the app. This ensures that your camera's time stamps are accurate and

aligned with your local time zone.

Note: The camera's date and time will reset automatically after the battery is removed.

(9) Screen saver

Close / 30S/ 1Min / 2Min (Default setting: 2Min)

The display will be turned off automatically after a period of inactivity to save battery life. To turn on the display again, press any button on the camera.

(10) Automatic shut-Down

Close / 3Min / 5Min / 10Min (Default setting: Close)

The camera will power off after a period of inactivity to save battery life.

(11) Format

Yes / No (Default setting: No)

Format your memory card in the camera before using it for the first time.

To keep your memory card in good condition, please reformat it on a regular basis.

Reformatting erases all of your content, so be sure to offload your photos and videos first.

(12) Factory Reset

Yes / No (Default setting: No)

This option will reset all settings to the default values.

Connecting to the **Hiicam** App

To connect your camera to the **Hiicam** app, please Download this app from the App Store or Google Play to your smartphone first. When your camera is connected to the **Hiicam** app, you can control it to capture, or change its settings using your phone. You can also live preview, playback, Download, edit, and share videos via this app. Please follow the instructions below to connect your camera to the **Hiicam** app.

Scan Me




1. **Quick Entry:** When the camera is turned on, press Up button to turn on WiFi.

WiFi Mode Entry: To enter the mode page, press the Mode button. Next, use the Down button to navigate and select the desired mode. Once you locate the WIFI option, press the OK button to activate WiFi connectivity. The camera will enter WiFi mode and display the WiFi information in 3 seconds.

2. Enter **Hiicam** APP, press Add Device to start connection with device. There will be a connection prompt, click "Next" will jump to wifi connection interface. There are 2 ways to connect:

- 1) Manual Connection: Click the button, you need to manually select the camera built-in wifi and enter the password
- 2) Scan QR Code Connection: Click the button, point your phone at the connection QR code on the right side of the camera wifi interface, and automatically connect

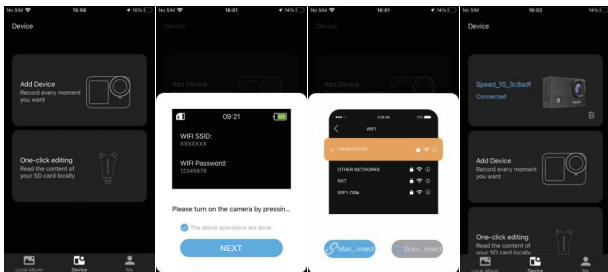

Playing Back Your Content

You can play back your contents on the camera, your computer, TV, or smartphone.

To play back your videos and photos on a computer, you need to transfer these files first. Transferring files also frees Up space on your memory for new contents.

With this method, the playback resolution depends on the resolution of the device and its ability to play back that resolution.

1. Playing Back Files on Your Speed 10

- (1) Turn on your Speed 10.
- (2) Press the Down button to enter the play screen.
- (3) Press the Up or Down button to select the photos or videos mode and then press the OK button to enter the selected mode.
- (4) Press the Up or Down button to select a photo or video to play photo or video to play.
- (5) Press the OK button photo or video to play it back in full screen.

Note: If your memory card contains a lot of content, it might take a

minute to load.

2.Deleting files on Your Speed 10

- (1) Press the Down button to enter the play screen.
- (2) Press the Up or Down button to access photos or videos.
- (3) Press the Up or Down button to select a photo or video to play photo or video to play.
- (4) Press the OK button photo or video to select the photo or video you want to delete.
- (5) Long press OK button, press the Up or Down button to select Delete the current file, Delete all files and cancel.
- (6) Press OK button the chosen file will be deleted.

Reformatting Your Memory Card

To keep your memory card in a good condition, reformat it on a regular basis. Reformatting erases all of your content, so be sure to offload your photos and videos first.

- (1) Press and hold the Power/Mode button to turn on your Speed 10.
- (2) Long press OK button bottom to enter the system settings screen.
- (3) Press the Mode button to switch to the system settings page and press the Down button to find the Format option, then select it.
- (4) The screen shows Format the card? Cancel/OK.
- (5) Select OK, the Press OK button, the screen shows SD card formatting..., and Formatting SD Card completed! Then you format your memory card successfully.

Remote

When the camera is turned on, it will be automatically connected to the remote within a certain distance. You can control the camera to take photos or record videos using the remote.

Splashproof only,
not waterproof



Photo Button

Video Button

Video

To record video, first make sure the camera is in Video mode.

To start recording, simply press the Gray Video button. The camera will emit one beep with the working indicator light flashing.

To stop recording, simply press the Gray Video button again. The camera will emit one beep with the working indicator light turned off.

Photo

To capture a photo, first make sure the camera is in Photo mode, then press the Red Photo button. The camera will emit a shutter sound indicating the completion of the shot.

Burst Photo

To capture burst photos, first verify the camera is in Burst Photo mode, then press the Red Photo button.

Time Lapse

To capture time lapse photos or videos, first verify the camera is in Time Lapse mode, then press the Red Photo or Gray Video button.

Mounting Your Camera



FCC COMPLIANCE STATEMENT/Information to User

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Please Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: To comply with the limits for an FCC Class B computing device, always use the signal cord and power cord supplied with this unit.

The Federal communications Commission warns that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- The device has been evaluated to meet general RF exposure requirement.
- The device can be used in portable exposure condition without restriction.
- This radio should NOT be installed and operating simultaneously with other radio