

Essential UM

- APP name and QR code to be added and disclaimer- The Noise APP lets you set up and control the earbuds from any mobile device, such as a smartphone or tablet.
- APP set-up to be added by referring watch UM section- AKSHAY/AKHIL
- Charging case and earbud markings like- Button/Touch places/LED- DESIGN
- Touch controls marking on earbuds in control section like Bose- DESIGN
- Choose your ear tip size content-

Earbuds are fitted with medium-sized tips. Wear the earbuds for an extended period of time. If the earbuds don't feel comfortable or secure, or noise cancellation or sound quality isn't as expected, try another size eartip or stability band. You may need to try all three eartip or use a different size eartip for each ear.

Follow the images and chart to learn how to wear earbuds in the right manner.

TABLE OF CONTENTS

- Package Contents
- Specifications
- Power and Pairing
- Reset and Sizing
- Charging
- Controls
- Warranty User Manual for Master Buds 2
- Important Safety Instructions
- Hearing Safety
- FCC Statement
- Safety

Noise Master Buds 2 User Manual

PACKAGE CONTAINS

Noise Master Buds 2 x 1

Charging case x 1

Eartips & Earwings x 2 Pairs Each

USB Type-C charging cable x 1

Leaflet x 1

SPECIFICATIONS

Model Name: Master Buds 2

Model No.: Buds 001

Earbud weight: 5.2g each

Speaker driver size: 10mm

Supported profiles: A2DP/AVRCP/HFP/SPP/AVDTP

Bluetooth version:

Earbud charging time: 1 hour

Working voltage: 5V

Input Voltage:

Standby time:

Playtime without ANC:

Playtime with ANC:

Bluetooth range: 10m

Waterproof rating: IPX5

Working temperature: 0-45°C

CHARGING CASE SPECIFICATIONS

Charging case weight: 52g

Charging port: Type-C

The number of earbud charges from the case:

Case charging time:

Total playtime with charging case (without ANC):

Total playtime with charging case (with ANC):

POWER ON

A. The earbuds will automatically turn on, on opening the charging case.

POWER OFF

The earbuds will automatically turn off once placed inside the charging case with the lid closed.

PAIRING

Open the charging case--.

Open the charging case, Long press the charging case button for 3 seconds. Breathing White LED indicates that the buds are in pairing mode.

Select 'Add Device' and select Noise Master Buds 2 from the list of devices.

Your Noise Master Buds 2 are now paired with your device and ready to use.

Note: Your Noise Master Buds 2 will automatically connect to the last paired device as soon as you take them out of the charging case.

RESET // CLEAR THE EARBUDS DEVICE LIST

Make sure your earbuds are fully charged.

On your paired devices, delete/remove Noise Master Buds 2 from the list of paired devices in the Bluetooth menu

Insert both earbuds into the charging case and long press the charging case button for 10 seconds

The Orange LED on the charging case will start blinking, to indicate earbuds have been reset.

CHOOSING YOUR EAR TIP SIZE

Earbuds are fitted with medium-sized tips. However, if you find that they don't fit perfectly, please remove them and try the small and large ear tips.

Follow the images and chart to learn how to wear earbuds in the right manner.

CHARGING

Earbuds

Place both earbuds inside the case to charge them.

Indication (on case)

White LED Blink and then OFF = Charging

CHECK THE EARBUD BATTERY LIFE

While using the earbuds

- When you remove the earbuds from the charging case and insert them into your ears, a voice prompt announces the earbud battery level **when battery is low**.
- Use the **Noise Audio APP**. The earbud battery level is displayed on the main screen.

Charging (Case)

Charge the case via the supplied Type-C charging cable, preferably from any PC or laptop as compared to a USB charger.

Indication (on case)

Orange LED Stay = Charging

Solid White LED = Fully charged

CONTROLS

(Icon) Play/Pause

Tap either earbud twice

(Icon) Previous Song

Tap the left earbud thrice

(Icon) Next Song

Tap the right earbud thrice

(Icon) Volume Up

Tap the right earbud once

(Icon) Volume Down

Tap the left earbud once

(Icon) Answer Call

Tap either earbud twice

(Icon) End Call

Tap either earbud twice

(Icon) Reject Call

Touch and hold right earbud for 2 seconds

(Icon) To switch modes- Normal/Transparency/ANC

Touch and hold right earbud for 2 seconds

NOTE: By default, the earbuds power on in ANC Mode.

(Icon) Noise AI Initiation

Long press left earbud for 2 seconds

AUTO PLAY/PAUSE

When you remove an earbud, audio pauses on both earbuds. To resume audio, reinsert the earbud. NOTE: If you want to use a single earbud, you can tap the earbud in your ear to resume audio.

CLEAN THE EARBUDS AND CHARGING CASE

Component	Cleaning instructions
Eartips	Remove the eartips from the earbuds and wash them with mild detergent and water. Note: Make sure you thoroughly rinse and dry the eartips before re-attaching them to the earbuds.
Earbud nozzles	Wipe only with a dry, soft cotton swab or equivalent. Caution: Never insert any cleaning tool into the nozzle.
Charging contacts (on earbuds)	To prevent corrosion, wipe with a dry, soft cotton swab or equivalent.
Charging case	Wipe only with a dry, soft cotton swab or equivalent.

WARRANTY

The warranty covers your Noise product, including accessories, against manufacturing defects (if any) for 12 months from the date of purchase.

Things that are not covered in the warranty are listed below:

- Unauthorized tampering, modifications or repairs of the product.
- Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not by the product manual or documentation or any other instruction provided along with the Noise product.

For further information on product replacement/refund-related queries, please refer to the terms and conditions mentioned in our online return policy section on www.gonoise.com.

WARRANTY REGISTRATION

www.gonoise.com/pages/warranty-registration

CLEAN THE EARBUDS AND CHARGING CASE

COMPONENT	PROCEDURE
Eartips and stability bands	Remove the eartips and bands from the earbuds and wash them with a mild detergent and water. NOTE: Make sure you thoroughly rinse and dry the eartips and bands before re-attaching them to the earbuds.
Earbud nozzles	Wipe only with a dry, soft cotton swab or equivalent. CAUTION: Never insert any cleaning tool into the nozzle.
Charging contacts (on earbuds)	To prevent corrosion, wipe with a dry, soft cotton swab or equivalent.
Charging case	Wipe only with a dry, soft cotton swab or equivalent.

CUSTOMER QUERY

For any assistance, please reach out to us at support.gonoise.in

IMPORTANT SAFETY INSTRUCTIONS

- Do not disassemble.
- Keep out of the reach of children. The product contains small parts which may be a choking hazard.
- The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

- Do not use the product in environments with too high or too low temperatures, and never expose the product to strong sunshine or very wet environments.
- Ensure there is no liquid, sweat or water on the charging port when charging.
- Refer to your user manual for your earphones' waterproof level and follow the corresponding instructions.
 - For IPX4: Do not expose earphones to dripping or splashing water.
 - For IPX4, IPX5, and IPX6: Do not submerge earphones in water.

Hearing Safety



- To avoid hearing damage, do not listen for extended periods at high volume.
- Do not turn the volume so high that you're unable to hear your surroundings.
- Do not use earphones while driving.
- You should use caution or temporarily discontinue use in potentially hazardous situations.



This product complies with the radio interference requirements of the Indian Community.



The product generates stronger permanent magnetic fields that could cause interference with cardiac pacemakers, implanted defibrillators (ICDs) and other implants. Always maintain a distance of at least 3.94"/10 cm between the product component containing the magnet (earbuds and charging case) and the cardiac pacemaker, implanted defibrillator, or other implant.



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. Correct disposal of old products and rechargeable batteries helps prevent negative consequences for the environment and human health.



This symbol indicates "separate collection" for all batteries and accumulators. Danger of explosion if battery is incorrectly replaced. To reduce risk of fire, explosion or leakage of flammable liquid/gas, don't disassemble, crush, puncture, short external

contacts, expose to temperature above 60°C (140°F), sunshine or like, expose to extremely low air pressure or dispose of in fire or water. Replace only with specified batteries.

High or low extreme temperatures that a battery can be subjected to during use, storage or transportation:

- During use: maximum 40°C (104°F)
- Storage: -20 - 45°C (-4 - 113°F)
- Transportation: 5 - 35°C (41 - 95°F)

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.

- ✧ Reorient or relocate the receiving antenna.
- ✧ Increase the separation between the equipment and receiver.
- ✧ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ✧ Consult the dealer or an experienced radio/TV technician for help.

If This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.

FCC ID:2BKRS-BUDS2

SAFETY FOR YOU AND YOUR NOISE MASTER BUDS 2

Follow these tips to get the best out of your new Noise Buds:

- Do not expose the earbuds to liquids, moisture, or humidity as they have electronics and batteries inside.
- Do not use abrasive cleaning solvents to clean your new earbuds. Wipe them down with a slightly damp cloth if and when necessary.
- Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible.
- Do not expose the earbuds to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.
- Do not throw the earbuds in a fire to dispose of them. The internal battery may explode.
- Do not try to disassemble your earbuds. There are no user-serviceable parts inside it.
- Try not to drop the earbuds and keep them away from sharp objects such as keys in your pockets.
- Only charge your earbuds from 5V USB ports such as phone chargers and laptop or PC chargers.
- Never listen to music at high volume or you may permanently damage your hearing.
- Pay attention to your surroundings and never wear any earphones while riding, driving, or walking in traffic.