

TABLE OF CONTENTS • Package Contents and Features • Specifications • Power and Pairing • Reset and Sizing • Charging • Controls • Warranty • Safety 01 02 03 04 05 06 08 09 User Manual for Noise Buds N1 Pro	PACKAGE CONTENTS Noise Buds N1 Pro x 1 Charging case x 1 User manual x 1 USB Type-C charging cable x 1 S X 1 L X 1 Ear-tips Thank you card x 1 User Manual for Noise Buds N1 Pro1	SPECIFICATIONS • Earbud weight: 3.9g (each) • Speaker driver size: 11mm • Supported profiles: A2DP/AVRCP/HFP/SPP/AVDTP • Bluetooth version: 5.3 • Earbud charging time: Up to 120 minutes • Working voltage: 5V • Standby time: Up to 500 hours • Playtime: Up to 7.5 hours at 60% volume • Bluetooth range: 10m • Working temperature: 0-45 °C CHARGING CASE SPECIFICATIONS • Charging case weight: 39.2g • Charging port: Type-C • The number of earbud charges from the case: 7 times • Case charging time: Up to 90 minutes • Total playtime with charging case: Up to 60 hours User Manual for Noise Buds N1 Pro2	POWER ON The earbuds will automatically turn on, on opening the charging case. POWER OFF The earbuds will automatically turn off once placed inside the charging case with the lid closed. PAIRING • Open the charging case. • Turn on the Bluetooth of your device. • Select 'Add Device' and select Noise Buds N1 Pro from the list of devices. • Your Noise Buds N1 Pro are now paired with your device and ready to use. Note: Your Noise Buds N1 Pro will automatically connect to the last paired device as soon as you take them out of the charging case. User Manual for Noise Buds N1 Pro3	RESET • Make sure your earbuds are fully charged. • On your paired devices, delete/remove Noise Buds N1 Pro from the list of paired devices in the Bluetooth menu • Take out the earbuds from the charging case • Touch and hold either earbud for 10 seconds. • The LED will blink white 3 times in both earbuds, indicating earbuds have been reset. • Place the buds inside the charging case and repeat the pairing process. CHOOSING YOUR EART-TIP SIZE Earbuds are fitted with medium-sized tips. However, if you find that they don't fit perfectly, please remove them and try the small and large ear tips. Follow the images and chart to learn how to wear earbuds in the right manner. User Manual for Noise Buds N1 Pro4	
--	--	---	--	--	------------------------

CHARGING Earbuds Place both earbuds inside the charging case to charge them. Indication (on case) • Solid White LED = Charging Charging Case Charge the case via the supplied Type-C charging cable, preferably from any PC or laptop as compared to a USB charger. Indication (on case) • Blinking white LED = Charging Charging • No LED = Fully Charged Fully Charged User Manual for Noise Buds N1 Pro5	CONTROLS Play/Pause Tap either earbud twice Previous Song Tap the left earbud thrice Next Song Tap the right earbud thrice Volume Up Tap the right earbud once Volume Down Tap the left earbud once Tap twice Tap thrice Tap once User Manual for Noise Buds N1 Pro6	Answer Call Tap either earbud twice End Call Tap either earbud twice Reject Call Touch and hold either earbud for 2 seconds Voice Assistant Tap either earbud four times Gaming Mode Touch and hold left earbud for 2 seconds Mode Switching (ANC/Transparency/Normal) Touch and hold right earbud for 2 seconds Tap twice Tap twice Touch and hold Tap 4 times Tap 4 times Touch and hold User Manual for Noise Buds N1 Pro7	WARRANTY The warranty covers your Noise product, including accessories, against manufacturing defects (if any) for 1 year from the date of purchase. Things that are not covered in the warranty are listed below: • Unauthorised tampering, modifications or repairs of the product. • Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not by the product manual or documentation or any other instruction provided along with the Noise product. For further information on product replacement/refund-related queries, please refer to the terms and conditions mentioned in our online return policy section on www.gonoise.com. REGISTER YOUR WARRANTY www.gonoise.com/pages/warranty-registration SUPPORT AND SERVICE 1 YEAR LIMITED WARRANTY SCAN ME CUSTOMER QUERY For any assistance, please reach out to us at support.gonoise.in User Manual for Noise Buds N1 Pro8	SAFETY FOR YOU AND YOUR NOISE BUDS Follow these tips to get the best out of your new Noise Buds: Do not expose the earbuds to liquids, moisture, or humidity as they have electronics and batteries inside. Do not try to disassemble your earbuds. There are no user-serviceable parts inside it. Do not use abrasive cleaning solvents to clean your new earbuds. Wipe them down with a slightly damp cloth if and when necessary. Try not to drop the earbuds and keep them away from sharp objects such as keys in your pockets. Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible. Only charge your earbuds from 5V USB ports such as phone chargers and laptops or PC chargers. Do not expose the earbuds to extremely high or low temperatures as this may damage the battery or even deform the plastic parts. Never listen to music at a high volume or you may permanently damage your hearing. Do not throw the earbuds in a fire to dispose them. The internal battery may explode. Pay attention to your surroundings and never wear any earphones while riding, driving, or walking in traffic. User Manual for Noise Buds N1 Pro9	FCC Warning This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. FCC ID: 2BKRS-BUDSN1PRO Please refer to this manual before using the product
---	---	---	---	--	--