

TABLE OF CONTENTS

- Package Contents
- Specifications
- Power and Pairing
- Charging
- Sizing and Control
- Warranty User Manual for Nbx0201
- FCC Statement
- Safety

User Manual for Nbx0201

PACKAGE CONTENTS

Noise Nbx0201 x 1

USB Type-C Charging Cable x 1

Charging Case x 1

Ear-tips

User Manual x 1

Thank you Card x 1

User Manual for Nbx0201

SPECIFICATIONS

- Earbud weight: 4g (each)
- Speaker driver size: 10mm
- Supported profiles: A2DP/AVRCP/HFP/SPP/AVDTP
- Bluetooth version: V6.0
- Earbud charging time:
- Working voltage:
- Playtime:
- Bluetooth range: 10m
- Waterproof rating: IPX5
- Working temperature: 0-45°

CHARGING CASE SPECIFICATIONS

- Charging case weight: 40g
- Charging port: Type-C
- The number of earbud charges from the case:
- Case charging time:
- Total playtime: 70+ hours

POWER ON

The earbuds will automatically turn on when you take out the buds from the charging case.

POWER OFF

The earbuds will automatically turn off once placed inside the charging case with the lid closed.

PAIRING

- Take out the earbuds from the charging case. They will automatically turn on with the LED blinking RED and White, indicating that the buds are in pairing mode.
- Select 'Add Device' and click on Noise Buds N2 Pro from the list of devices.
- Your Noise Buds N2 Pro are now paired with your device and ready to use.

Note: Your Noise Buds N2 Pro will automatically connect to the last paired device as soon as you take them out of the charging case.

CHOOSING YOUR EAR-TIP SIZE

Earbuds are fitted with medium-sized tips. However, if you find that they don't fit perfectly, please remove them and try the small and large ear tips. Follow the images and chart to learn how to wear earbuds in the right manner.

CHARGING

Earbuds

Place both earbuds inside the case to charge them.

Charging Case

Charge the case via the supplied Type-C charging cable, preferably from any PC or laptop as compared to a USB charger.

Indication (on Case)

- White LED Flashes on the charging case = Charging
- Solid LED = Fully Charged

CONTROLS

Play/Pause

Tap either earbud twice

Previous Song

Tap the left earbud thrice

Next Song

Tap the right earbud thrice

Volume Up

Tap the right earbud once

Volume Down

Tap the left earbud once

Answer Call/End Call

Tap either earbud twice

Reject Call

Touch and hold either side for 2 seconds

Voice Assistant

Tap the right earbud four times.

Gaming Mode

Tap and hold left earbud for 2 seconds

Mode Switching

Tap and hold the right earbud for 2 seconds

Factory Reset Successfully

Tap and hold either side for 10 seconds

WARRANTY

The warranty covers your Noise product, including accessories, against manufacturing defects (if any) for 1 year from the date of purchase.

Things that are not covered in the warranty are listed below:

- Unauthorized tampering, modifications or repairs of the product.
- Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not by the product manual or documentation, or any other instruction provided along with the Noise product.

For further information on product replacement/refund-related queries, please refer to the terms and conditions mentioned in our online return policy section on www.gonoise.com.

WARRANTY

The warranty covers your Noise product, including accessories, against manufacturing defects (if any) for 1 year from the date of purchase.

Things that are not covered in the warranty are listed below:

- Unauthorized tampering, modifications or repairs of the product.
- Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not by the product manual or documentation, or any other instruction provided along with the Noise product.

For further information on product replacement/refund-related queries, please refer to the terms and conditions mentioned in our online return policy section on www.gonoise.com.

REGISTER YOUR WARRANTY

www.gonoise.com/pages/warranty-registration



SUPPORT AND SERVICE



1 YEAR LIMITED WARRANTY



SCAN ME

CUSTOMER QUERY

For any assistance, please reach out to us at support.gonoise.in

FCC ID:2BKRS-NBX0201

FCC Statement:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

SAFETY FOR YOU AND YOUR NOISE BUDS N2 Pro

Follow these tips to get the best out of your new Noise Buds N2 Pro:



Do not expose the earbuds to liquids, moisture, or humidity as they have electronics and batteries inside.



Do not try to disassemble your earbuds. There are no user-serviceable parts inside it.



Do not use abrasive cleaning solvents to clean your new earbuds. Wipe them down with a slightly damp cloth if and when necessary.



Try not to drop the earbuds and keep them away from sharp objects such as keys in your pockets.



Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible.



Only charge your earbuds from 5V USB ports such as phone chargers and laptop or PC chargers.



Do not expose the earbuds to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.



Never listen to music at high volume or you may permanently damage your hearing.



Do not throw the earbuds in a fire to dispose of them. The internal battery may explode.



Pay attention to your surroundings and never wear any earphones while riding, driving or walking in traffic.