

TABLE OF CONTENTS • Package Contents • Specifications • Power and Pairing • Reset and Sizing • Charging • Controls • Warranty • Safety 01 02 03 04 05 06 08 09 <td> PACKAGE CONTAINS  Noise Pop Buds  Charging Case  USB Type-C charging Cable x 1  Extra Ear-tips (S x 1/L x 1) User Manual for Noise Pop buds 01 </td> <td> EARBUD SPECIFICATIONS Earbud weight: 4g (each) Speaker driver size: 10mm Supported profiles: A2DP/AVRCP/HFP/SPP/AVDTP Bluetooth version: 5.3 Earbud charging time: Up to 60 minutes Working voltage: 5V Standby time: Up to 120 hours Playtime: Up to 8 hours at 70% volume Bluetooth range: 10m Waterproof rating: IPX5 Working temperature: 0-45°C CHARGING CASE SPECIFICATIONS Charging case weight: 35g Charging port: Type-C The number of earbud charges from the case: 5.2 times Case charging time: Up to 90 minutes Total playtime with charging case: Up to 50 hours User Manual for Noise Pop buds 02 </td> <td> POWER ON The earbuds will automatically turn on, when you open the charging case and take earbuds out. POWER OFF The earbuds will automatically turn off once placed inside the charging case. PAIRING • Open the charging case and take the earbuds out. • Select 'Add Device' and select Noise Pop Buds from the list of devices. • Your Noise Pop Buds are now paired with your device and ready to use. Note: Your Noise Pop Buds will automatically connect to the last paired device as soon as you take them out of the charging case.  Power On  Power Off User Manual for Noise Pop buds 03 </td> <td> RESET • Make sure your earbuds are fully charged. • Regardless of whether the earphones are connected to a device or not, press and hold the left and right earphones at the same time for 10 seconds to restore the factory settings; the red and white lights will stay on for 5 seconds and go out. • Place the buds inside the charging case and repeat the pairing process. CHOOSING YOUR EAR TIP SIZE Earbuds are fitted with medium-sized tips. However, if you find that they don't fit perfectly, please remove them and try the small and large ear tips. Follow the images and chart to learn how to wear earbuds in the right manner.  ✓  ✗  ✗ User Manual for Noise Pop buds 04 </td> <td> noise </td>	PACKAGE CONTAINS  Noise Pop Buds  Charging Case  USB Type-C charging Cable x 1  Extra Ear-tips (S x 1/L x 1) User Manual for Noise Pop buds 01	EARBUD SPECIFICATIONS Earbud weight: 4g (each) Speaker driver size: 10mm Supported profiles: A2DP/AVRCP/HFP/SPP/AVDTP Bluetooth version: 5.3 Earbud charging time: Up to 60 minutes Working voltage: 5V Standby time: Up to 120 hours Playtime: Up to 8 hours at 70% volume Bluetooth range: 10m Waterproof rating: IPX5 Working temperature: 0-45°C CHARGING CASE SPECIFICATIONS Charging case weight: 35g Charging port: Type-C The number of earbud charges from the case: 5.2 times Case charging time: Up to 90 minutes Total playtime with charging case: Up to 50 hours User Manual for Noise Pop buds 02	POWER ON The earbuds will automatically turn on, when you open the charging case and take earbuds out. POWER OFF The earbuds will automatically turn off once placed inside the charging case. PAIRING • Open the charging case and take the earbuds out. • Select 'Add Device' and select Noise Pop Buds from the list of devices. • Your Noise Pop Buds are now paired with your device and ready to use. Note: Your Noise Pop Buds will automatically connect to the last paired device as soon as you take them out of the charging case.  Power On  Power Off User Manual for Noise Pop buds 03	RESET • Make sure your earbuds are fully charged. • Regardless of whether the earphones are connected to a device or not, press and hold the left and right earphones at the same time for 10 seconds to restore the factory settings; the red and white lights will stay on for 5 seconds and go out. • Place the buds inside the charging case and repeat the pairing process. CHOOSING YOUR EAR TIP SIZE Earbuds are fitted with medium-sized tips. However, if you find that they don't fit perfectly, please remove them and try the small and large ear tips. Follow the images and chart to learn how to wear earbuds in the right manner.  ✓  ✗  ✗ User Manual for Noise Pop buds 04	noise
---	---	--	---	--	-----------------------------

CHARGING Earbuds Place both earbuds inside the case to charge them. Indication (on case) ○ Solid White LED  Charging Charging Case Charge the case via the supplied Type-C charging cable, preferably from any PC or laptop as compared to a USB charger. Indication (on case) ○○○○ Flashing White LED  Charging ○ Solid White LED  Fully Charged User Manual for Noise Pop buds 05	CONTROLS  Play/Pause Tap either earbud twice  Previous Song Tap the left earbud thrice  Next Song Tap the right earbud thrice  Volume Up Tap the right earbud once  Volume Down Tap the left earbud once  Tap twice  Tap twice  Tap thrice  Tap thrice  Tap once  Tap once User Manual for Noise Pop buds 06	CONTROLS  Answer Call / End Call Tap either earbud twice  Reject Call Touch and hold either earbud for 2 seconds  Voice Assistant Tap either earbud four times  Gaming Mode Touch and hold either earbud for 2 seconds  Tap twice  Tap twice  Touch and hold  Touch and hold  Tap four times  Tap four times  Touch and hold  Touch and hold User Manual for Noise Pop buds 07	WARRANTY The warranty covers your Noise product, including accessories against manufacturing defects (if any) for 1 year from the date of purchase. Things that are not covered in the warranty • Unauthorized tampering, modifications or repairs of the product. • Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not in accordance with the product manual or documentation, or any other instruction provided along with the Noise product. For further information on product replacement/refund related queries, please refer to the terms and conditions mentioned in our online return policy section on www.gonoise.com. User Manual forNoise Pop buds 08	REGISTER YOUR WARRANTY www.gonoise.com/pages/warranty-registration  SUPPORT AND SERVICE  1 YEAR LIMITED WARRANTY  SCAN ME CUSTOMER QUERY For any assistance, please reach out to us at support.gonoise.com User Manual forNoise Pop buds 08	SAFETY FOR YOU AND YOUR NOISE POP BUDS Follow these tips and you & your Noise Pop Buds will be happy together for a very longtime.  Do not expose the earbuds toliquids, moisture or humidity as they have electronics and battery inside.  Don't try to disassemble your earbuds. There are no user serviceable parts inside it.  Don't use abrasive cleaning solvents to clean your new earbuds. Wipe them down with a slightly damp cloth if and when necessary.  Try not to drop the earbuds and keep them away from sharp objects such as keys in your pockets.  Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible.  Only charge your earbuds from 5V USB ports such as phone chargers and laptops or PCs  Do not expose the earbuds to extremely high or low temperature as this may damage the battery or even deform the plastic parts.  Never listen to music at high volume or you may permanently damage your hearing.  Don't throw the earbuds in a fire to dispose it. The internal battery may explode. .  Pay attention to your surroundings and never wear any earphones while riding, driving or walking in traffic. . User Manual forNoise Pop buds 09	Noise Pop buds Please refer to this manual before using the product
---	---	--	--	---	---	---

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.