



RP-T01 Vinyl Record Player User Manual
Ver1.0

Safety Instructions


Before using this product, please read and understand this manual carefully. Keep these instructions for future reference.

1. Do not use this product near water.
2. This product should only be operated with the power supply type specified on the label or in this user manual.
3. Do not damage the safety function of the polarized plug. The polarized plug has two blades. If it cannot be fully inserted into the socket, please contact an electrician.
4. Avoid trampling or pinching the power cord, especially the parts where the plug, power socket, and power cord extend from the product.
5. Do not overload wall sockets, extension cords, or built-in convenience sockets, as this may cause fire or electric shock hazards.
6. Never insert any objects into the product through the openings, as they may come into contact with dangerous voltage points or short-circuit components, causing fire or electric shock. Never spill any liquid on this product.
7. Do not repair this product by yourself. Opening or removing the cover may expose you to dangerous voltage or other hazards. Please leave all repair work to qualified maintenance personnel.
8. Any changes or modifications to this device not explicitly approved by the responsible compliance department may cause the user to lose the right to operate the equipment.
9. Do not use accessories not recommended by the product manufacturer, as they may cause hazards.
10. Be careful when moving the product combined with a cart. Sudden stops, excessive force, and uneven surfaces may cause the product and cart combination to tip over.
11. The slots and openings on the cabinet are for ventilation to ensure the reliable operation of the product and protect it from overheating. Do not block or cover these openings.
12. Unplug the product during thunderstorms or when not in use for a long time.

Product Specifications

Product Name	Vinyl Record Player
Product Model	RP-T01
Power Supply Voltage	DC 5V/1.5A
Bluetooth Version	5.1
Bluetooth Protocol Support	ADP/AVRCP
Bluetooth Receiving Distance	10 M
Output Power	2 ×5 W THD <0.1%
Speed Support	33、45、78
Audio Output	RCA Red-White Lotus Output
Product Size	318*304.6*124.5 MM (including knobs and feet)
Product Weight	2.15 KG
Product Accessories	manual×1, adapter×1

Product Description

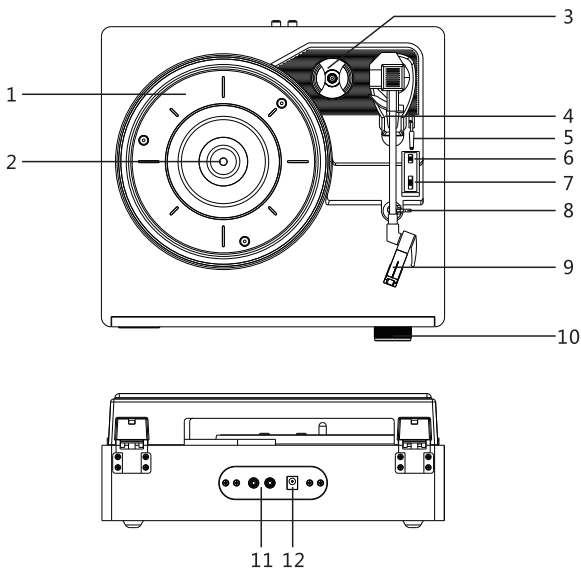

1. Turntable

2. Turntable Shaft

3. 45RPM Adapter

4. Tonearm

5. Tonearm Lever

6. Auto Stop Switch

7. Speed Switch

8. Tonearm Holder

9. Cartridge

10. On/Off Volume Knob

11. RCA Output Interface

12. Power Adapter Interface

Initial Setup

Basic Setup

1. Place the device on a flat and horizontal surface. The selected position should be stable and free of vibration.
2. Remove the strap fixing the tonearm.
3. Connect the AC power adapter to the power jack of the device.

Note: Do not plug the AC power adapter into the power socket until all components are installed. Before turning on the power, please confirm again that all connections are set correctly. When connecting or disconnecting, please be sure to turn off the power first.

Stereo System Connection

RCA Red-White Lotus Socket

- The RCA jack outputs an analog line-level signal, which can be directly connected to the corresponding input of a pair of active speakers or a stereo system.
- The red plug is connected to the right channel, and the white plug is connected to the left channel.

Note: The RCA jack is not designed to be directly connected to passive speakers. If connected to passive speakers, the volume will be very low.

Turntable Operation

1. Rotate the on/off volume knob to turn on the power.
2. Set the speed switch accordingly.
3. Place the record on the turntable. If necessary, use a 45RPM adapter.
4. Remove the stylus protective cover from the stylus assembly.

Note: To avoid damage to the stylus, ensure that the stylus protective cover is in place when the turntable is moving or being cleaned.

5. Release the tonearm holder.

Note: When the turntable is not in use, remember to lock and hold the clip.

6. Use the tonearm lever to lift the tonearm.
7. Gently move the tonearm to the record to be played. Adjust the tonearm lever back to the down position, and the tonearm will slowly lower onto the record and start playing.
8. When the record finishes playing, use the tonearm lever to lift the tonearm again, then return it to the tonearm rest. Release the lever and let the tonearm return to the rest. To pause playback, repeat the above steps.
9. Lock the tonearm clip to fix the tonearm.


Turntable Auto Stop

If the auto stop switch is set to the ON position, the turntable will automatically stop rotating when the record finishes playing. In rare cases, if the turntable stops before the record finishes playing, set the switch to the OFF position, which should avoid this problem.

Stylus Replacement

Removing the Stylus

1. Gently pull down the front edge of the stylus.
2. Pull the stylus forward.
3. Pull out and remove it.

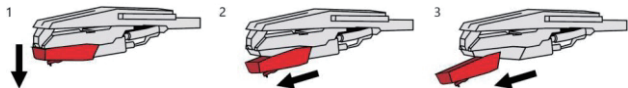

Installing the Stylus

1. Place the stylus with the tip facing down.
2. Align the back of the stylus with the cartridge.
3. Insert the front end of the stylus at a downward angle, then gently lift the front end of the stylus until it clicks into place.



Bluetooth Operation

1. Turn the function switch to the Bluetooth mode.

Note: The function indicator light will flash blue.

2. Turn on the Bluetooth function of the audio device, search for "RP-T01" and pair it.
3. When your device is successfully paired with the device, you will hear a short confirmation sound from the device, and the function indicator light will be blue.
4. Play music from your device to the turntable.

Note: Bluetooth version - 5.1

Turntable Maintenance

1. Do not touch the stylus tip with your fingers. Avoid touching the turntable mat or the edges of the record.
2. Clean the stylus tip regularly with a soft brush, only in the front-back direction.
3. Clean the record with a record cleaning brush and cleaning solution to remove dust or grease.
4. Clean the turntable cover and turntable cabinet with a microfiber cloth (slightly damp).

Note: Do not use cleaners containing alcohol, benzene, or any other harmful chemicals, as these cleaners may damage the paint and surface treatment of the turntable.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.



Manufacturer:Thinkya Co.,LTD

service@thinkyaplus.com