

工艺：左右六等分风琴折

环保认证要求		
纸质类	☒	需符合RoHS环保要求
非纸质类	☐	需符合RoHS和REACH环保要求

[illegible]

1 **Charging**

Close the charging compartment to charge the earphones

2 **Wireless pairing**

For the first use, open the top cover of the charging case, remove the earphones, complete pairing, the blue and white lights on the main ear alternate flashing, and the auxiliary ear goes out.

3 **Clear wireless pairing**

L / R

1. 04" After simultaneously pressing the multifunction keys for 4 seconds on both ears, Clear link records and shut down.

2. Restart the earphones and enter wireless pairing mode

3. → Tap three times to change to the previous track (L) or next track (R)

4 **Music playback/pause**

L / R

= x2 Tap twice to change between music playback/pause

5 **Music track changing**

L / R

= x3 Tap three times to change to the previous track (L)

= x3 Tap three times to change to the next track (R)

6 **Volume increase**

R

= x1 Tap once, then long tap Turn up the volume of the headphones

= x1 Turn up the volume of the headphones

7 **Volume down**

L

= x1 Tap once, then long tap Turn down the volume of the headphones

= x1 Turn down the volume of the headphones

8 **Call control**

L / R

= x1 Tap once to answer the phone

= x1 Tap twice to hang up the phone

= x1 Long touch for two seconds to reject the call