 




RAVE

WIRELESS SPEAKER

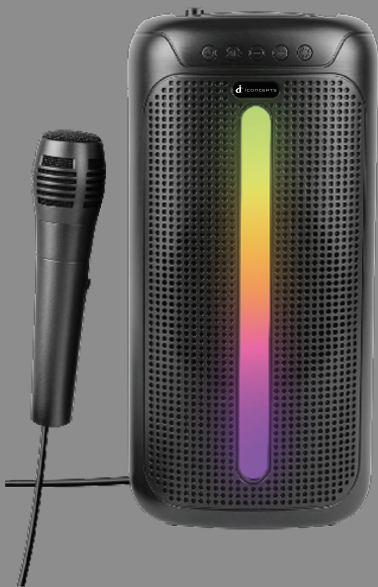

MULTI-COLOR
LIGHTS



WIRED MIC



HIGH QUALITY
SOUND



HOURS TOTAL
PLAYTIME*



User's Manual

Item: SPKRWMIC-BLK

Important Safety Precautions

When using your iConcepts Rave Wireless Speaker, basic safety precautions should always be followed, including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER AND MICROPHONE.
2. Do not submerge the device in water. Do not place the device on wet surfaces.
3. Only clean using a clean, soft cloth.
4. Do not allow children or the infirm to use this product without adult supervision.
5. Products may contain small pieces that can be a choking hazard. Parental supervision is advised.
6. Do not expose the device to excessive heat or fire.
7. Do not expose the device to extreme cold or hot temperatures to avoid battery damage.
8. Do not attempt to repair the product yourself. Contact a qualified service center if the product is in need of service.
9. Do not drop, crush, or expose the device to excessive physical force.
10. Unplug charging cable when not in use or during thunderstorms.
11. Do not play music while the sdevice is charging.
12. Do not point the microphone toward the speaker while turned ON.
13. Please recycle or dispose of your device properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your device for further information.



CAUTION

BATTERY WARNING:

- The device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

Introduction

Thank you for purchasing the iConcepts Rave Wireless Speaker, item SPKRWMIC. In order to have the best experience, please read this manual carefully before using the wireless speaker.

Package Contents

- Wireless Party Speaker
- Wired Microphone
- USB Charging Cable
- User's Manual With Warranty Information

 
 
Features

- Up to 6 Hours of Total Playtime*
- Multi-colored LED Lighting
- High Quality Sound
- Wired Microphone Included



*Based on 60% volume.

A Closer Look

Front of Speaker

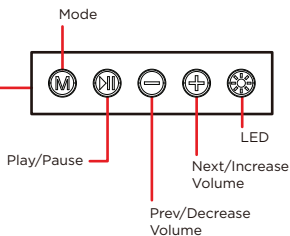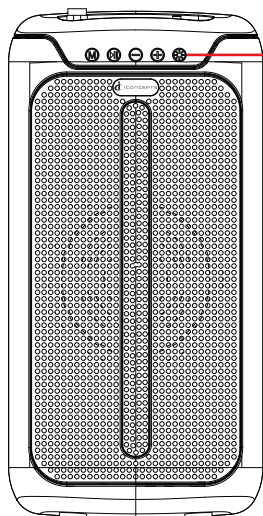


Control Panel

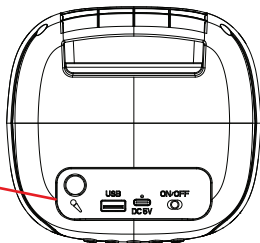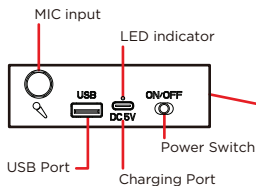  


Top of Speaker

Charging

 Insert one end of the included USB charging cable into the Charging Port.

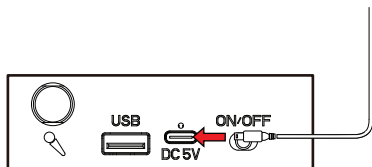


Insert the other end of the USB cable into a suitable USB charging adapter (not included).

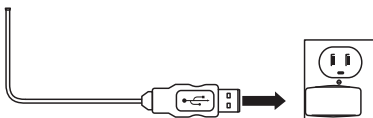

While charging, the speaker's LED light will shine red. When the LED light is off, the speaker is fully charged.


Powering ON/OFF

Move the speaker's power switch to the ON position to turn it ON or to the OFF position to turn it OFF.

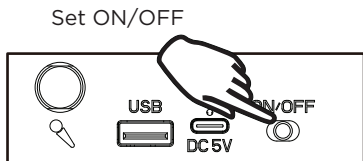


Mode Selection

Power ON your speaker. Press the mode button repeatedly to toggle through your speaker's various modes: Bluetooth, USB, and FM Radio.

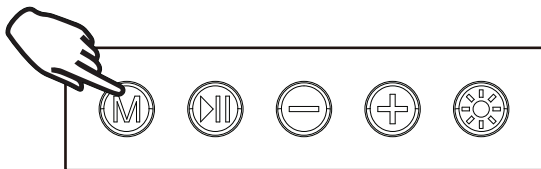

Bluetooth Pairing

Once powered ON, press the mode button repeatedly until your speaker is set to Bluetooth mode.

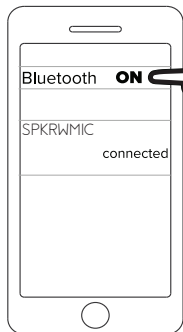


Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as “SPKRWMIC”.

NOTE: Disconnect through your connected device or by changing modes.

After successfully pairing, the speaker's LED Indicator light will slowly flash blue.

Using The Microphone

Connect your microphone's cable to the speaker's MIC Input.

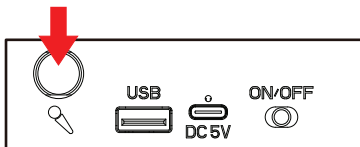

Speaker's Controls

Power Switch:

- Push to the ON position to turn the speaker ON. Push to the OFF position to turn the speaker OFF.

Prev/Decrease Volume Button:

- Press to return to the last track in a playlist while playing a track.
- Press to access the previous station while using FM Radio mode.
- Press and hold to reduce volume.

Next/Increase Volume Button:

- Press to go to the next track in a playlist while playing a track.
- Press to access the next station while using FM Radio mode.
- Press and hold to increase volume.

Play/Pause Button:

- Press to play/pause the current track.
- Press to search for available stations in FM Radio mode automatically.

Mode Button:

- Press repeatedly to cycle through the speaker's various modes.

LED Button:

- Press repeatedly to cycle through the speaker's various LED Color modes and turn ON/OFF the LED lights.
- Press and hold to turn ON/OFF the LED lights.

Additional Features

USB Input Port:

Plug a USB thumb drive into the USB Interface on your speaker. To play music from the USB, set the speaker to the corresponding mode. Your speaker can play .mp3 music files from your thumb drive.

Note: Connecting to a computer will not work. Files will not be visible.

FM Radio:

To listen to music from local radio stations in FM radio mode, set the speaker to the corresponding mode. Press the play/pause button to scan for available FM stations. Press the Prev/Decrease Volume and Next/Increase Volume buttons to change stations.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limit set forth for uncontrolled environment. The device shall be operated and installed without restriction.

ONE YEAR WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered By Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:
Call (800) 592-9541 for 24/7 support.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaid.



2026 CSI
Edison, NJ 08817
Tech Support
800 592 9541

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license. Other trademarks and trade names are those of their respective owners.