 


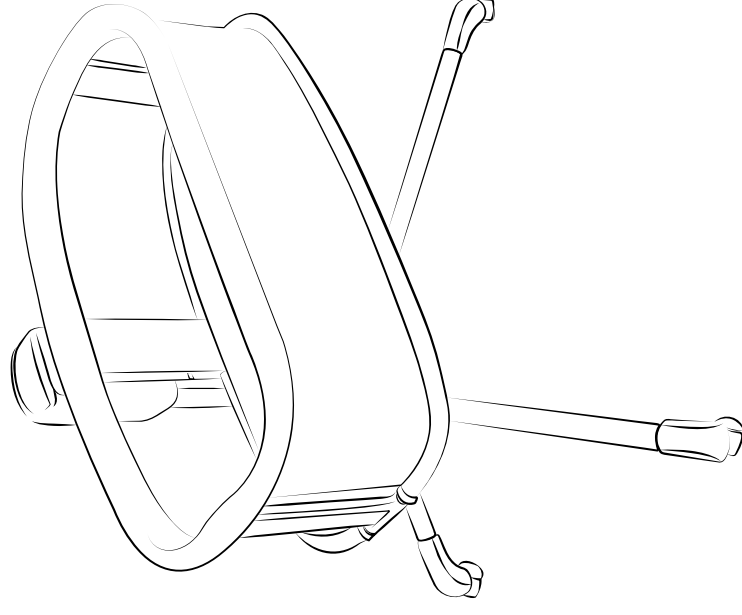

AUTOMATIC INFANT BASSINET



visit us at

www.mastelababy.com

广州麦姆顿日用品有限公司

Guangzhou Mastela Commodity Co., Ltd.

中国广州黄埔大道中166号1603房

Room 1603, No. 166, Huangpu Avenue, Guangzhou, China

Tel (8620) 82011526/82010996 Fax (8620) 82011339

ZIP code: 510655

MADE IN CHINA / 中国制造

IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

重要提示! 请仔细阅读说明书并保存将来使用

Care&Instructions

⚠ WARNING

Failure to follow these warnings and the instructions could result in serious injury or death.

Failure to follow these warnings and the instructions could result in death or serious injury.

SUFFOCATION HAZARD

Babies have suffocated:

Infants have suffocated:

- On pillows, comforters, and extra padding
- In gaps between a wrong-size mattress, or extra padding and product sides
- **NEVER** add soft bedding or padding.
- Use **ONLY** mattress provided by manufacturer.
- Always place baby on back to sleep to reduce the risk of SIDS and suffocation.
- In gaps between extra padding and side of the bassinet, and
- On soft bedding
- Use only the pad provided by manufacturer. **NEVER** add a pillow, comforter, or another mattress for padding.
- To reduce the risk of SIDS, pediatricians recommend healthy infants be placed on their backs to sleep, unless otherwise advised by your physician.
- If a sheet is used with the mattress, use only the one provided by the product manufacturer or one specifically designed to fit the dimension of the product mattress.
- Product can roll over on soft surfaces and suffocate child.
- **NEVER** place product on beds, sofas or other soft surfaces.
- **FALL HAZARD:** To help prevent falls,
- Do not use this product when the infant begins to push up on hands and knees or has reached 20lbs, whichever comes first.
- Always use product on the floor. Never use on an unintended elevated surface.
- Do not carry baby in the bassinet.

⚠ WARNING

- Strings can cause strangulation! Do not place items with a string around a child's neck, such as hood strings or pacifier cords. Do not suspend strings over a product or attach strings to toys.
- Do not use if any part of the bassinet is broken, torn, or missing.
- Always check that the bassinet is securely locked on the base stand by pulling upwards on the bassinet bed.

⚠ 使用警告

不遵守这些警告和说明可能会导致严重伤害或死亡。
不遵守这些警告和说明可能会导致严重伤害。

 
窒息危险

婴儿窒息:


婴儿窒息:

- 在枕头、棉被和额外的衬垫上
- 在尺寸不合适的床垫或额外的衬垫与产品侧面之间的缝隙中
- **切勿**添加柔软的寝具或衬垫。
- 仅使用制造商提供的床垫。
- 务必让婴儿仰卧睡觉,以降低 SIDS 和窒息风险。
- 在额外的衬垫与摇篮侧面之间的缝隙中,以及
- 在柔软的寝具上
- 仅使用制造商提供的垫子。切勿添加枕头、棉被或其他床垫作为衬垫。
- 为降低 SIDS 风险,儿科医生建议让健康的婴儿仰卧睡觉。除非您的医生另有建议。
- 如果床垫上使用床单,请使用产品制造商提供的床单或专门设计用于适应产品床垫尺寸的床单。
- 产品可能会在柔软的表面翻滚并导致儿童窒息。切勿将产品放在床、沙发或其他柔软表面上。
- **跌倒危险:** 为防止跌倒,
- 当婴儿开始用手和膝盖支撑身体或体重达到 20 磅(以先到者为准)时,请勿使用本产品。
- 务必在地板上使用产品。切勿在非预期的高架表面上使用。
- 不要提起产品当婴儿在摇篮中。
- 绳子可能将带绳子的物品(如帽子绳或奶嘴绳)绕在孩子的脖子上。
- 不要将绳子悬挂在产品上或将绳子系在玩具上。如果摇篮的任何部件断裂、撕裂或丢失,请勿使用。
- 始终检查基础设施是否已通过对基础设施进行升级而安全锁定。


Parts List Make sure all parts are available before assembly. If any part is missing, please contact MASTELA.
零件清单确保在组装前零件是否齐全, 若有零件缺失, 请联系 Mastela。

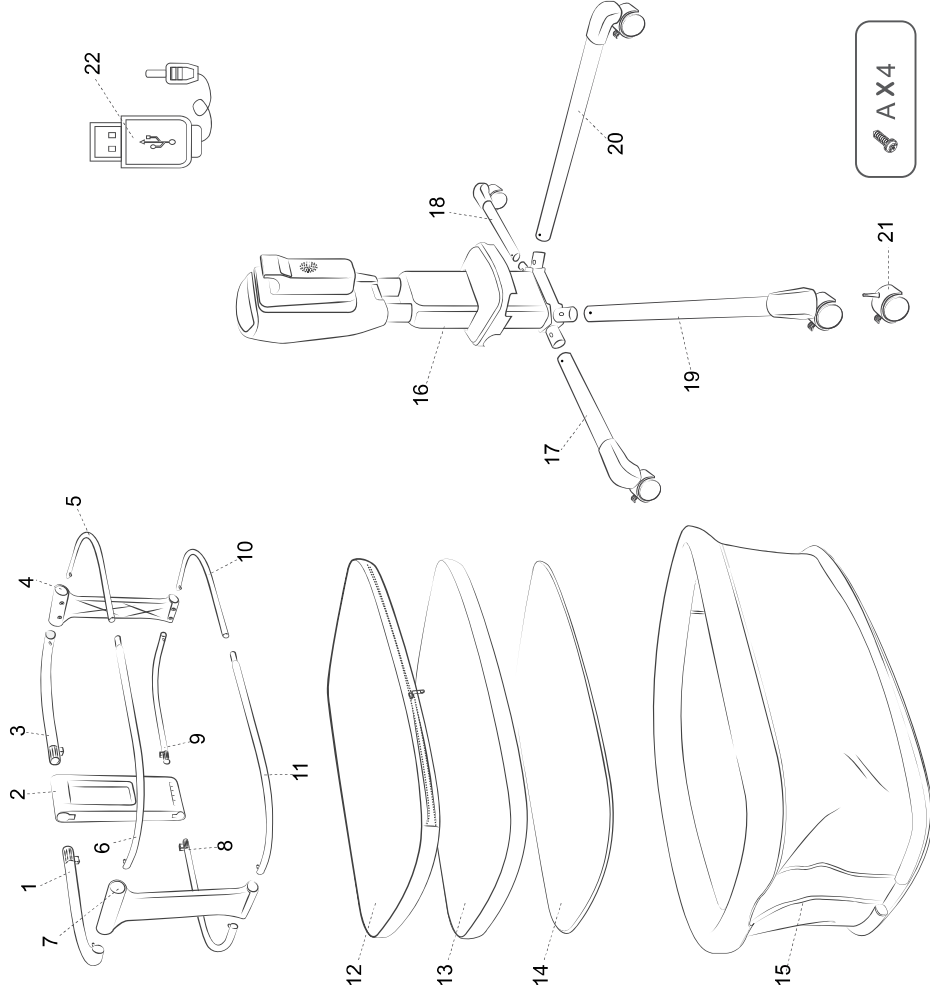


1

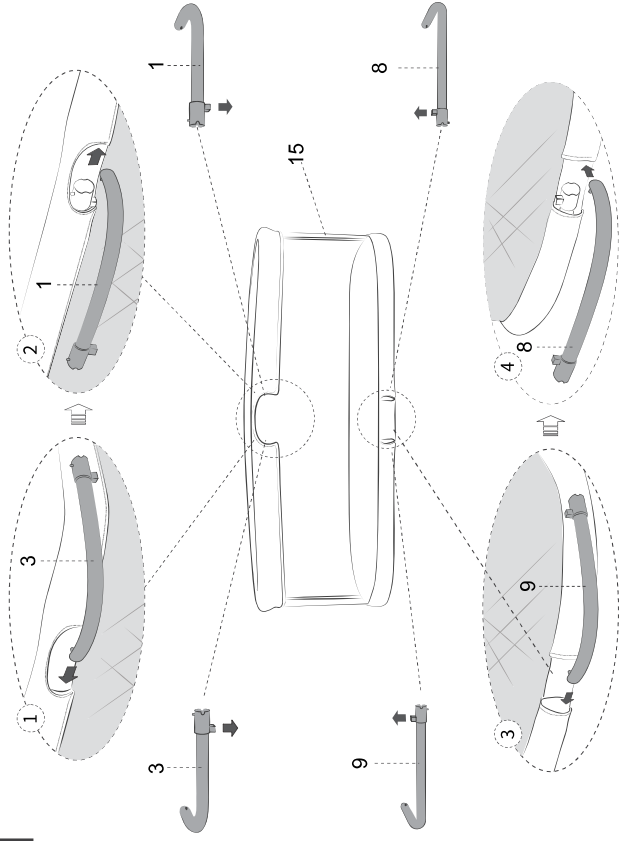 


2

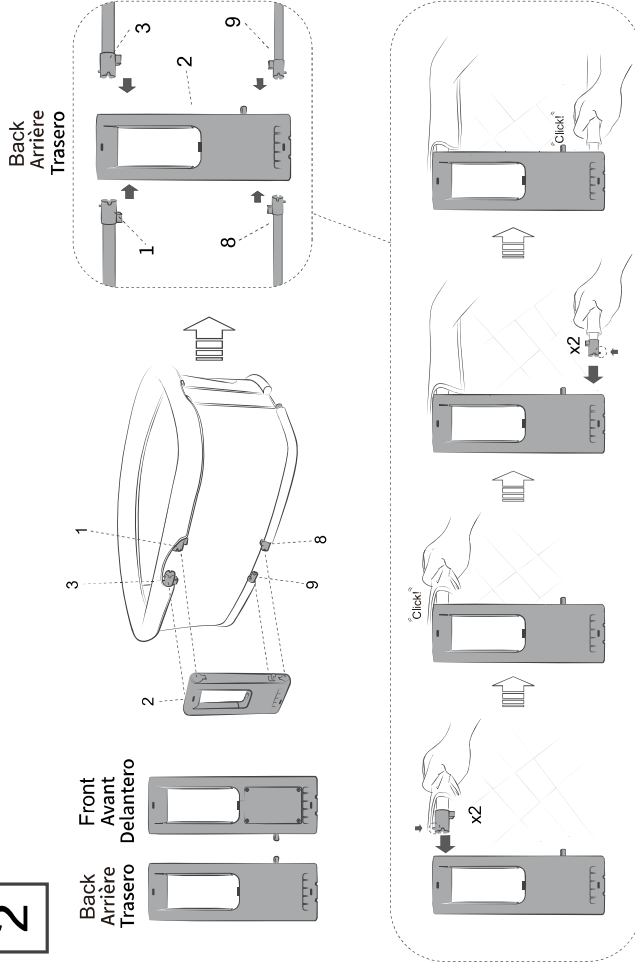 


3

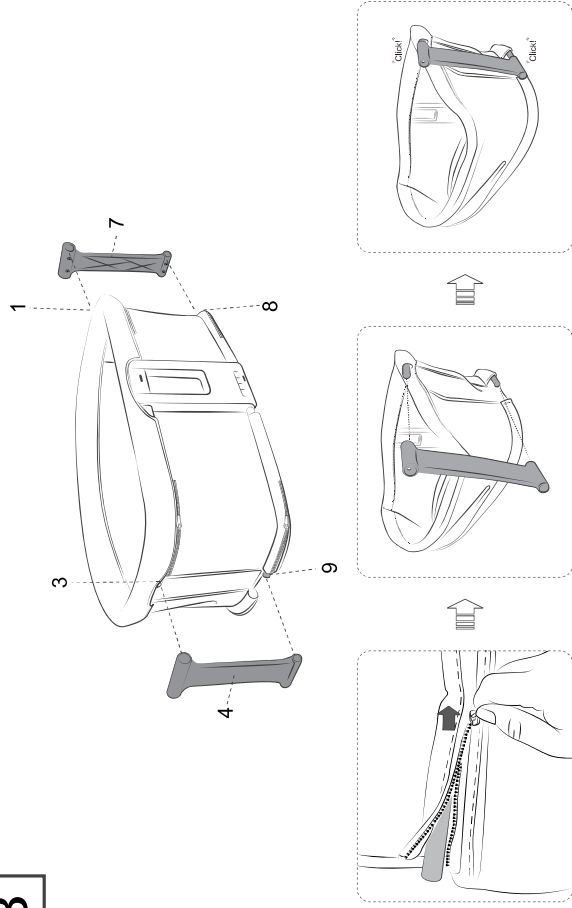 

4

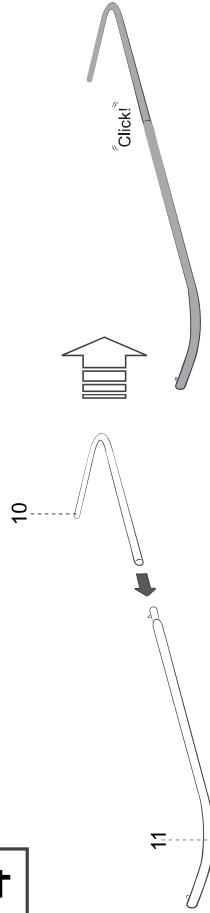 


5

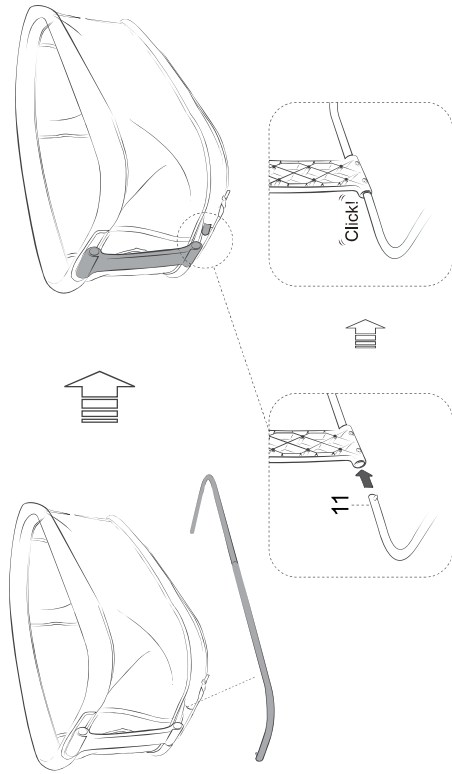 


5

 
6

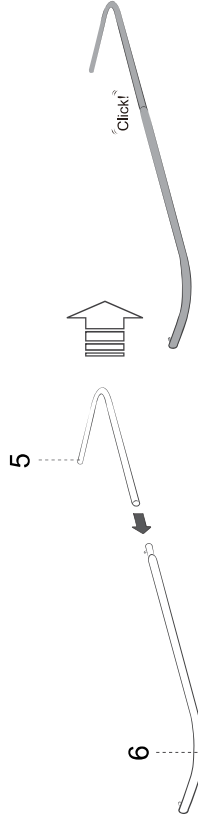


7

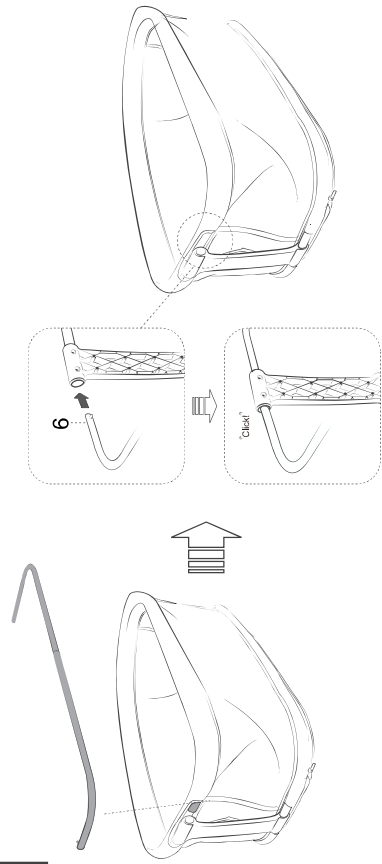 

8

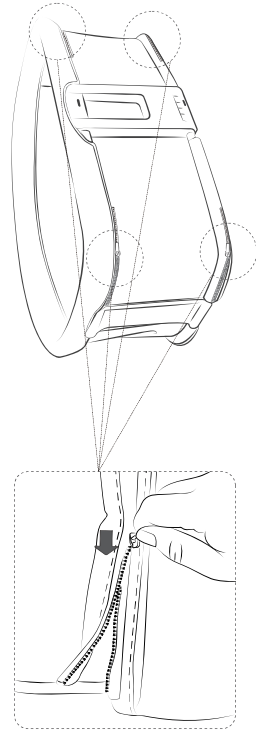 


9

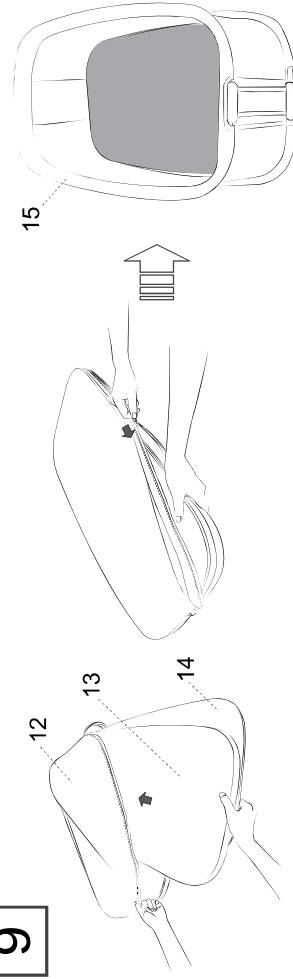 


6

 
10

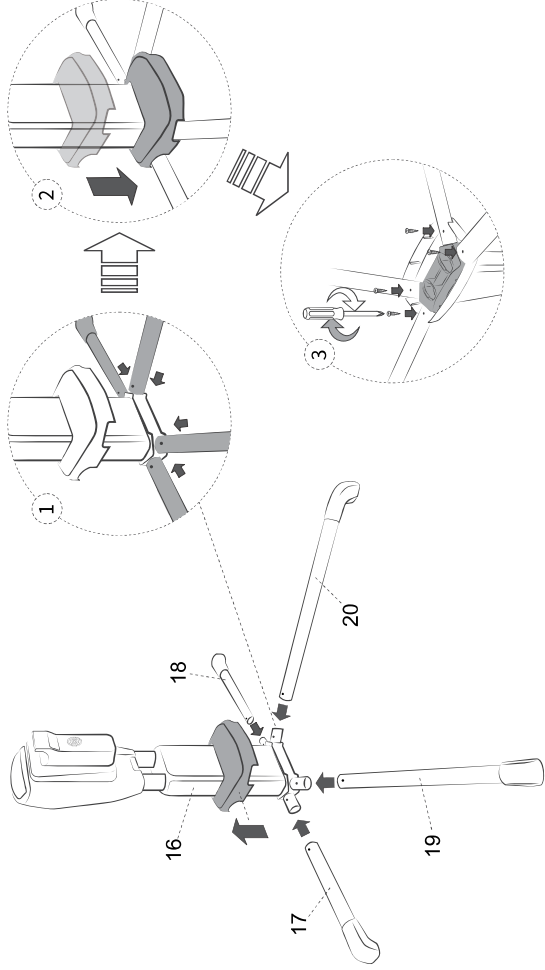


11

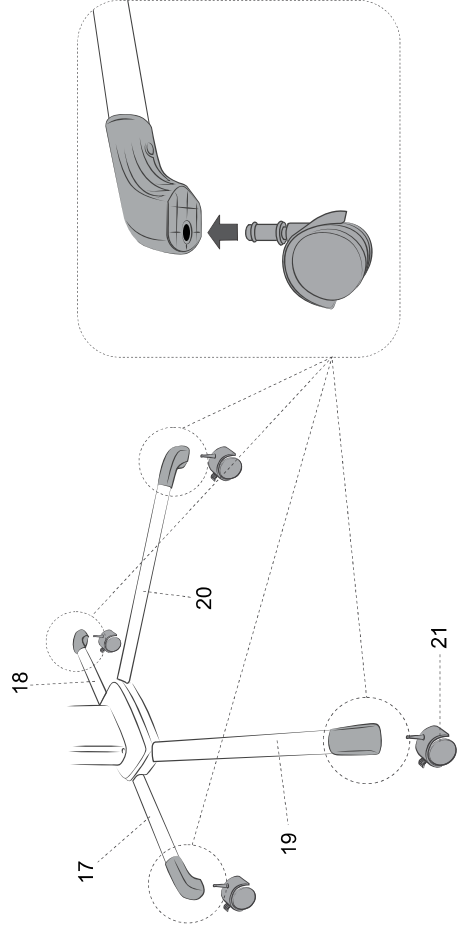 

12

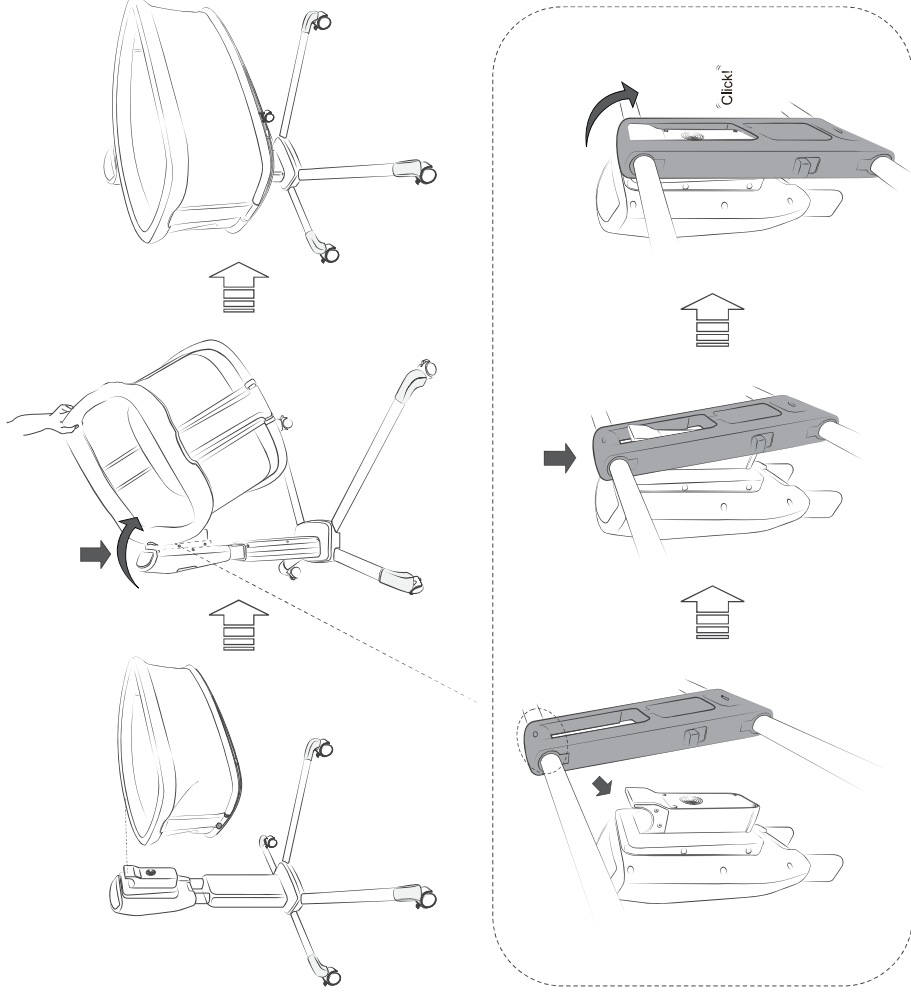 

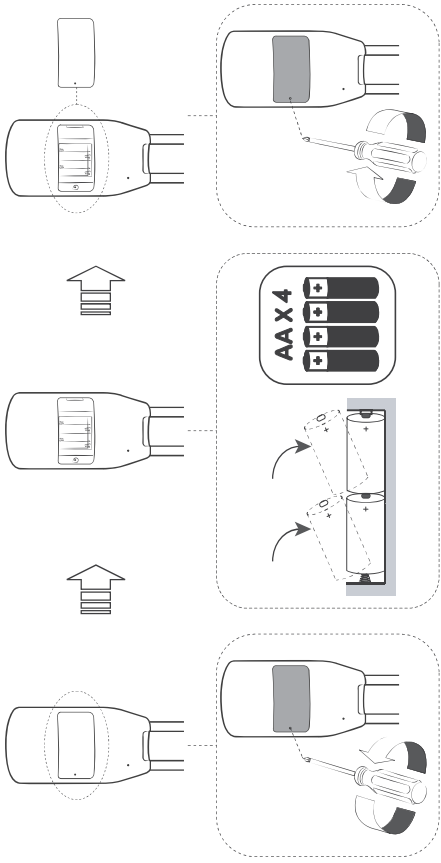 

EN The Music & Vibration Unit requires (4) size AA/LR6 (1.5V) alkaline batteries (not included)

CAUTION: Follow the battery guidelines in this section. Otherwise, battery life may be shortened or the batteries may leak or rupture.

- Always keep batteries away from children.
- Do not mix old and new batteries.
- Do not mix alkaline, standard, or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Install the batteries so that the polarity of each one matches the markings in the battery compartment.
- Do not short-circuit the batteries.
- Do not store batteries in areas that have extreme temperatures (such as attics, garages or automobiles).
- Remove exhausted batteries from the battery compartment.
- Never attempt to recharge a battery unless it is specifically marked "rechargeable".
- Rechargeable batteries are to be removed from the box before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not use rechargeable alkaline batteries in a Ni-Cad or Ni-MH battery charger.
- Please use the correct disposal method for batteries.
- Remove batteries before putting the product into storage for a prolonged period of time.
- Weak batteries cause erratic product operation, including distorted sound, dimming or failed lights, and slow or non-working motorized parts.
- Because each electrical component requires a different operating voltage, replace the batteries when any function fails to operate.
- Do not dispose of product or batteries in fire, batteries may explode or leak.
- This symbol indicates that the product is not to be disposed of in household.

- To prevent battery leaks, which can burn skin and eyes:
- Remove batteries when storing product for a long time.
- Dispose of used batteries immediately.
- Always replace the entire set of batteries at one time.
- Never mix old and new batteries, or batteries of different brands or types.

Waste as batteries contain substances that can be damaging to the environment and health.
Contact local authority for recycling & collection information.

中 音乐震动盒需要四节AA/LR6(1.5V)碱性电池 (不附送)

 
注意: 请遵循以下电池使用指南, 否则电池寿命将会缩短或引起电池泄露, 将电池保存在小孩触碰不到的地方

• 不要新旧电池混合使用 • 不要碱性、标准、或可充电电池混合使用 • 建议使用类型相同的电池 • 要按正确的极性插入电池 • 电池不可接短路 • 不要将电池储放在阁楼、汽车等温度较高的地方 • 用完的电池要从电池盒里取出 • 非充电电池不可充电 • 充电前要将电池从电池盒里取出 • 电池充电时要在成人监督下进行 • 不要把碱性电池放到镍铬电池与镍氢电池充电器里充电 • 请按电池正确使用使用方法使用电池 • 产品搁置不用时, 请在储存前将电池取出, 以延长电池的寿命 • 电池电量会导致电子元件功能不稳定, 灯光变暗或失效, 电子元件运作缓慢或不运作。每个电子元件需要不同的工作电压, 当电子元件功能失效时, 应及时更换电池 • 请勿将产品或电池弃置火中, 电池可能泄露或爆炸。


- 防止电池漏液 (可能灼伤皮肤和眼睛):
 - 长期存放产品时请取出电池。
 - 立即处理用过的电池。
 - 务必一次性更换整组电池。
 - 切勿混用新旧电池或不同品牌或类型的电池
- 本标志表明产品不得随日常生活垃圾丢弃。废弃电池含有对环境对人体健康有害的物质。请联系当地认证的回收部门进行回收。

Using an adapter • 使用适配器

Suitable for most mobile phone adapters (Product Not Included), Output DC: 5V/1A
适用于大多数手机适配器 (产品不包含), 输出直流: 5V/1A

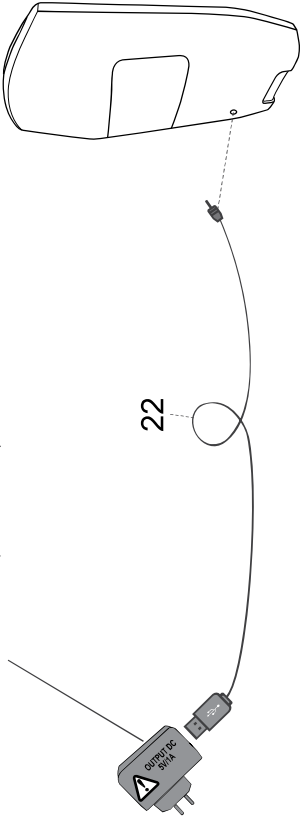

Using the Swing Control Module • 摇摆控制模块

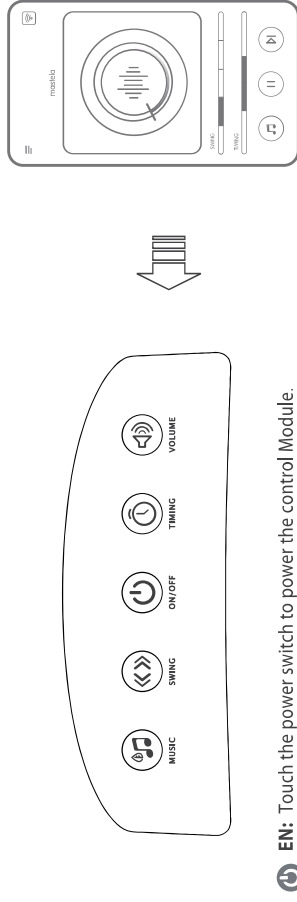 

- EN:** Touch the power switch to power the control Module.
中: 按压电源开关启动功能模块
- EN:** Side-to-side movement function, 5 ideal angles with LED light.
中: 左右摇摆功能按键, 5挡角度可供选择, LED灯指示选择。
- EN:** Touch the Music button to begin music. All 12 songs will play in turn, or touch as needed to select the desired song.
中: 按音乐按钮开启音乐功能。12首音乐依次播放, 也可通过按键选择所喜欢的音乐。
- EN:** Touch the Volume Control switch as needed to turn off or adjust the volume for music.
中: 开启音量控制开关可关闭或者调节音乐音量。

EN: Press to sequence to the desired timer setting of 15, 30 or 45 minutes. If you do not select a timer setting, the sway and/or music function uses a default time of 60 minutes for auto-shutoff
中: 按此按钮可依次设置定时为15、30和45分钟, 如果您未选择定时设置, 则摇摆和/或音乐功能会默认使用60分钟自动关闭。



How to use APP: Please scan QR code to download APP, and make installation in your smart device First.
• APP使用及控制, 使用前先扫描下面“二维码”, 下载并安装APP
NOTED: OPEN GPS BEFORE USING APP. 注意: 使用软件前请打开手机定位



IOS



ANDROID

EN: Close APP & Power off from Bassinet
中: 点击本按钮, 关闭APP, 摇篮电源关闭。

EN: Five swing speed for selection, click it again to stop swing function
中: 点击SWING下面的摇摆按钮, 启动摇篮摇摆, 共五个摇摆角度供你选择, 再点击被选中的按钮, 摇摆功能关闭。

 
EN: Play melodies come with the bassinet. If you need play personalized music, videos or more please connect your smart phone Bluetooth device. "swing" "Noted: Melodies come with the bassinet and Bluetooth cannot be used at the same time."
中: 点击按钮, 播放摇篮自带音乐。如果你想播放手机音乐, 请打开手机蓝牙, 与名称为“SWING”的设备与你的手机进行配置, 配置成功后, 即可使用手机自带播放器播放你喜欢的音乐。注意: 手机音乐播放和内置音乐播放无法同时运行。

EN: Suspend all functions
中: 点击本按钮, 可以暂停所有功能。


EN: Power on the bassinet and turn on Bluetooth in your smart phone, then click it to make connection between them (the LED graph will flash) now you can start to use APP. "Noted: Function buttons come with the bassinet cannot work except power button when use APP. Close APP, you can use function buttons to start control module."
中: 启动摇篮电源键, 打开手机蓝牙功能, 点击本按钮连接手机 (这时蓝色灯会闪烁) 使用APP时, 除摇篮电源键以外, 其它按钮按键无效, 关闭APP连接功能或退出APP, 摇篮的全部按钮功能恢复使用。

EN: Three timers setting (15', 30' and 45') for your selection, click it again to close timing, and back to a default time of 60 minutes
中: 点击TIMING下面按钮, 选择你需要设置音乐的播放时间, 分别是15分钟, 30分钟, 45分钟时间选择, 再点击被选中的按钮, 恢复默认的60分钟的使用时间。


EN: Go to the next melody
中: 播放音乐时, 点击一下可播放下一首音乐

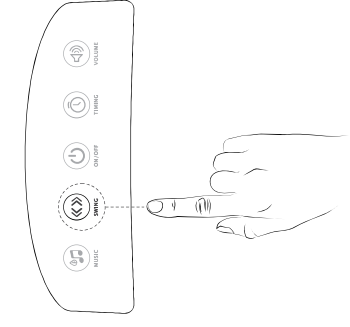

Using swing function • 摇摆功能使用

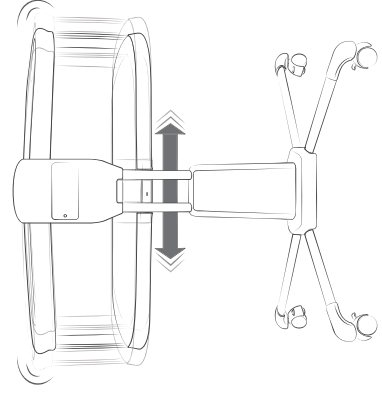 

2

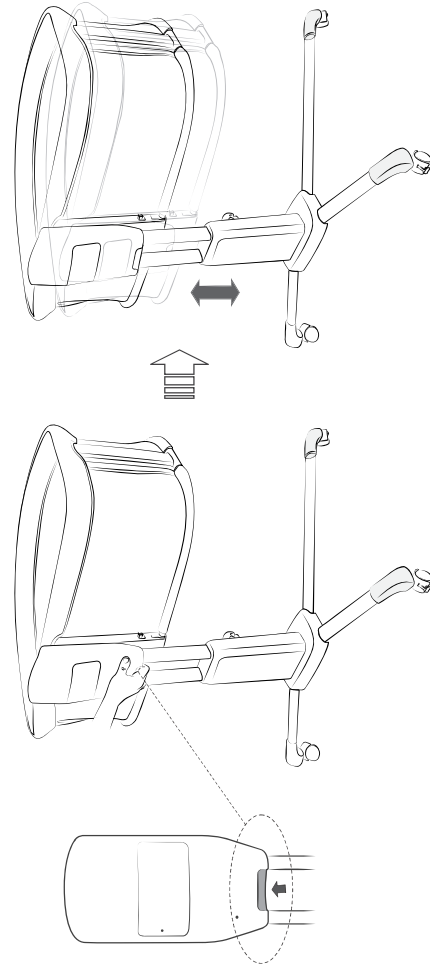 


Care and Cleaning • 清洁与护理

EN: 1. Hand or machine wash covers in cold water. Air dry flat. No bleach.


中: 1. 手洗或机洗布套, 自然风干, 请勿漂白。

 1

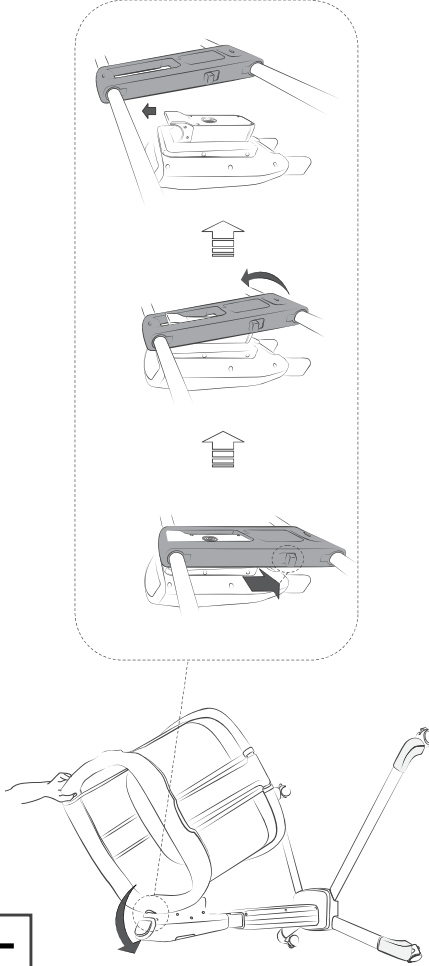

EN 1. Remove parts (Figure 13 & Figure 14) before washing.

 
中 清洁前先移除13和14。

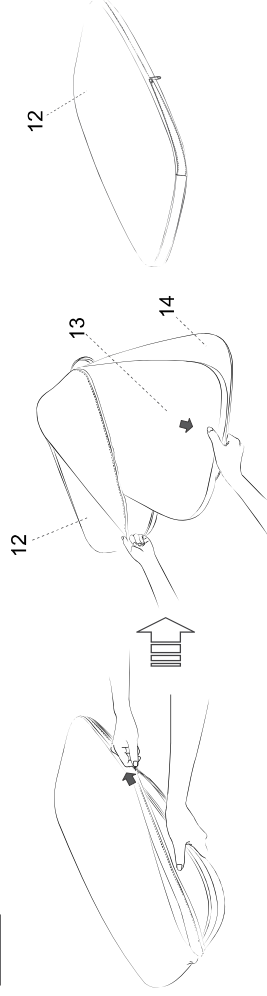

- EN 1. Remove parts (Figure A & Figure B) before washing.
2. Fasten buckles, folded to wash.


中 1. 清洁前先移除A和B

 2. 拉上拉链，叠好清洗

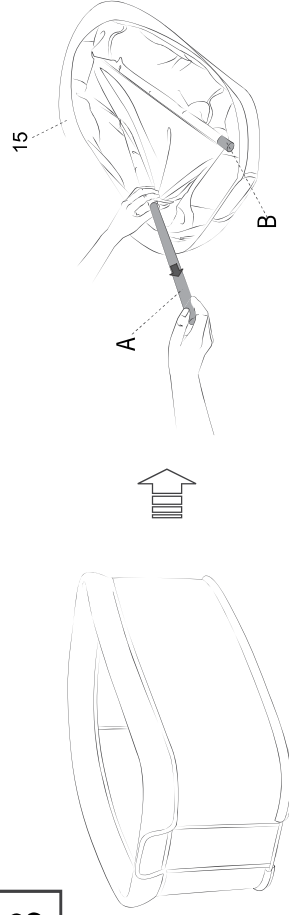

EN Clean base and seat frame with a damp cloth and a mild detergent and dry thoroughly. Do not use abrasives.

 中 用湿布和温和的清洁剂擦拭支架并风干，不要使用研磨剂。

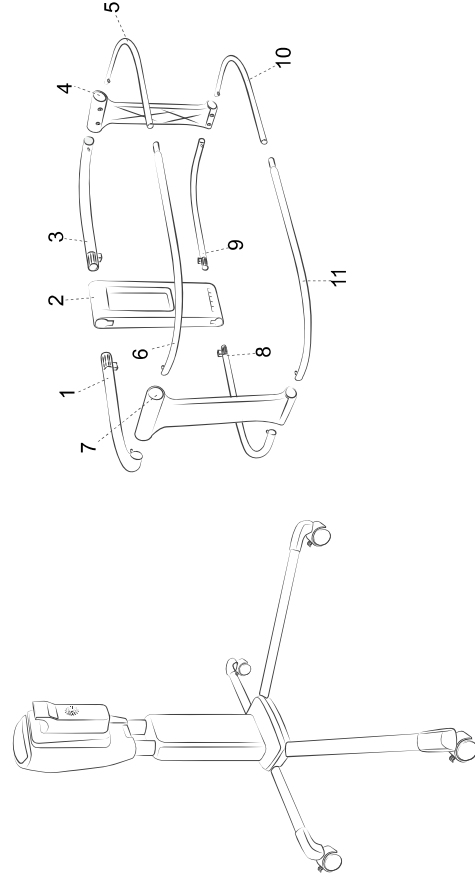

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.