 


Smart watch
Instruction Manual
S222



Please read carefully before use

Product Overview

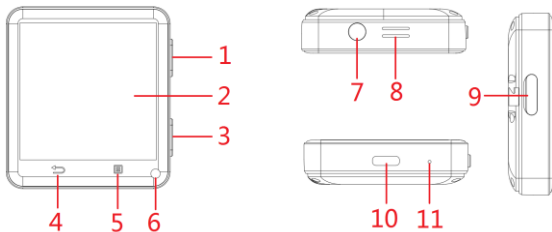

1. power on button 2. display 3. back button 4. virtual back button 5. virtual recent task button 6. front camera 7. side camera 8. speaker 9. nano sim card slot 10. type-c charging port 11. MIC

Strap Removal Diagram



Strap Back Clip

The diagram shows a side view of a device with a strap back clip. A red line points from the text 'Strap Back Clip' to a switch on the clip. The switch is a slide switch with a lock icon at the top and an unlock icon at the bottom. The device has a strap back clip and a slide switch.

 
Slide Switch

Slide down to unlock the strap back clip switch and remove the device.

SIM card into

- This watch currently only supports the use of NANO SIM cards.
- Please make sure that the watch is off first, remove the SIM card tray, put the SIM card into the tray, and then insert it into the device. Install the SIM card with the metal side of the SIM card facing up and the SIM notch pointing inwards.

Watch Charging

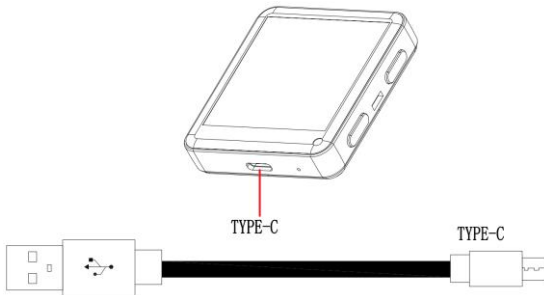

- For the first time use, please charge the watch; the watch adopts TYPE-C charging port, plug in the charging cable and then turn on the power. It is recommended to use a charger of 5V 1A or above to charge the watch. After charging, please switch off the power or unplug the charging cable.

first time you start a computer

- Press and hold the power on button for 3S and the watch will appear on the boot screen, the smart device needs to detect the applications for the first time, it will take a long time, please wait patiently.

- If you need to change the language after switching on the computer, you can go to Settings--System--Language--Tap the first item to add to change the default language of the system.

Key Function

Switch on key: • Long press to switch on;

- Short press to realise the screen rest/light function;

(Double-tap the screen to light up the screen even when the screen is off.)

- Press and hold for two seconds in the power-on state to enter the shutdown/restart selection interface;

- If improper operation causes the watch to die, long press the on button for 10 seconds to force restart the watch.

Return key: • Under the clock interface, short press to enter the main menu; long press to invoke the volume adjustment shortcut;

- In the non-clock interface, short press to return to the main menu.



: Virtual return key, short press to return to the previous level.

 


: Recent Tasks key, short press to call out recent tasks.

slide operation

- Swipe down on the Clock screen to call out the Control Centre and Notification Centre.

- The Clock screen slides to the left to enter the main menu.

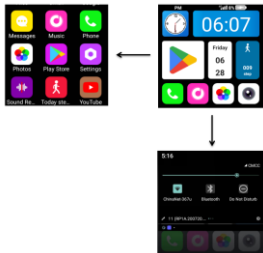

dial

1.The main screen of the watch displays gorgeous dials, and we've pre-set a number of them for you.

2.Users can enter the dial selection mode by long-pressing the screen for 2 seconds in the dial interface, and swipe left and right to select multiple dials on their own.

main menu

Basic applications included in the main menu: Contacts, Phone, Messages, Settings, Browser, Calendar, Clock, Gallery, Music, Voice Recorder, File Management, Camera, Pedometer, etc. (Functions within the watch will be increased or decreased with the actual needs of the manufacturer, please refer to the watch in kind).

Function Introduction

Phone function: Touch the "Phone" icon in the app to enter the call page; you can make a call, view the communication history, contacts and other operations.

Contacts: Touch the "Contacts" icon in the app to enter the phonebook page; by

default, contacts are listed in alphabetical order by last name, and only the contact's name is displayed on the first page of the phonebook; you can slide up and down to find a contact, and it supports reading SIM card contacts.

Message Function: Touch the "Message" icon in the application to enter the message page; tap the existing message to reply; tap the New icon to edit a new message, enter the number, name or tap the portrait icon to enter the address book to select a contact, enter the message content in the typed message, and then tap the Send icon to send the message.

Settings function: Provides settings menus for Network and Internet, Bluetooth, Apps and Notifications, Battery, Display, Sound, Storage, Location Information, Security, Accounts, Accessibility, Quickbar, System, and About Phone.

Screen Brightness Adjustment: Go to Settings - Display - Brightness to adjust the screen brightness; or adjust the screen brightness in the Control Centre on the downward slide of the dial interface.

Camera: You can take photos and videos, please respect other people's rights and abide by local laws and regulations and customs when taking photos.

Gallery: Displays the photos in the current album and allows you to delete the photos.

Clock: Set alarm, timer, stopwatch.

Recorder: Click the recording icon to start recording, enter the recording file list, you can play the recordings in the list.

File Management: You can view all the files on your mobile phone, as well as create new folders, delete files and more.

Music: With this music player, you can play music from your phone's memory.

Warm Tip:

※ The battery of this product is not removable, due to the product's own wear

and tear, after being idle for more than a month may cause the product to be unable to switch on due to a flat battery, please users charge regularly every week to ensure that the device can work properly.

※ After the smart watch has been placed for a long time, if you use the computer USB charging, it will take more than ten minutes to display the charging icon, please wait patiently, it is recommended to use 5V 1A charger to charge.

※ Improper operation may cause the product to die, you can long press the on button for 10 seconds to force restart the watch.

※ If you use the mobile network, make a phone call, surf the Internet, video and other such high-energy applications, the watch will consume more power, at the same time, there may be a slight heat or hot phenomenon of the machine, which is a normal phenomenon. If the device indicates a high temperature alarm, please reduce the use of such high power consumption applications.

※ This product is subject to continuous improvement and the contents of the manual are subject to change without prior notice, please refer to the actual product.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.