

Suitable for age 6 and above



specification



TIP: PLEASE DO NOT OPERATE ON THE CARPET, SO AS NOT TO COMPLETE THE ACTION.

Warning:

- Please follow the instructions or packaging instructions for proper installation and use. Some parts are assembled by adults.
- The product contains small parts that may pose a risk of ingestion or suffocation.
- Please do away the packaging materials in time to avoid harmful substances.
- It is necessary to check the charger, wire, plug, housing and other parts regularly. If it is found to be damaged, it should be stopped until it is repaired.
- The charger, battery case and other charging devices should be charged (the specified power supply is indicated on the product).
- Only the original charger can be used; the charger is not a toy.
- Non-rechargeable batteries are non-rechargeable.

- The toy should be disconnected from the charger before charging.
- Do not use old and new batteries or different types of batteries. Exhausted batteries should be taken out in time.
- Do not short-circuit, disassemble, pierce or cut the battery into a fire.
- If you do not control the product for a long time, please turn off the battery.
- To avoid personal injury, do not touch rotating parts with your hands.
- Users have the responsibility to ensure that the product will not cause harm to themselves or others, due to improper operation of their own or others' safety and property damage. Manufacturers and dealers shall not assume any responsibility.
- This package and instruction manual contain important product information, please keep it.

Rechargeable lithium battery



USB charging port

rechargeable lithium battery

Switch

First turn the switch button at the bottom to the power position, then the pet will have a sound prompt; if there is no remote control for a long time, the pet will power off by itself, and it needs to be turned back on when playing again.

Charging instructions

- Insert the TYPE-C connector of the charging cable into the charging port on the body.
- Insert the other end of the charging cable into the USB charging connector. The charging light on the body is red, indicating that the charging state is in.
- About 1.5 hours of charging, the charging light of the fastener is off, indicating that the charging is complete. Please disconnect all connections and put it in a safe position.

BATTERY PRECAUTIONS

- When charging, personnel should not leave and the charging time is not easy to be too long. If the battery is found not to dump, the charging process, please stop charging immediately and stop battery disposal or fire.
- Do not put the battery next to flammable and explosive items to charge, when the battery is used or charging process, once the smell or battery sudden heat, deformation, discoloration and other abnormal phenomena, please immediately stop using the battery.
- If fire occurs, rise immediately with plenty of cold water and seek medical attention immediately.
- Only use the original charger to charge the product, and make sure that the voltage of the charger meets your local standards.
- Do not put the battery in the fire, encase over or pressure canner.
- Do not use solvents, individual alcohol, other flammable solvents to clean the product and charger.
- The product contains plastic, electronic components and batteries, do not treat such items as daily garbage disposal, please follow the local garbage recycling requirements, separate and dispose.

Remote control introduction



Use a screwdriver to unscrew the back cover of the remote control, install the battery in the correct positive and negative directions, and then install the battery (3 x 1.5 AAA batteries required).



BATTERY PRECAUTIONS

- The smart dog uses a non-replaceable 3.7V lithium battery, and the remote control uses three 1.5V AAA non-rechargeable batteries.
- The battery should be taken out and packed correctly according to the polarity and voltage signs on the battery compartment, and the battery should not be short-circuited.
- Non-rechargeable batteries cannot be charged.
- Rechargeable batteries must be charged under adult supervision.
- When the rechargeable battery is charging, the toy switch should be turned off.
- Different types of batteries or old and new batteries can not be mixed.
- Only batteries with the same or equivalent recommended battery can be used.
- The exhausted battery should be removed from the toy. If it is not used for a long time, please remove the battery from the toy.
- Do not short-circuit the power terminal.
- Do not connect to more than the recommended amount of power supply. USB cable in the process of use should regularly check its wire, plug. If the shell and other parts are damaged, the use should be stopped when the damage is found until the repair is complete.

Smart dog function introduction



Press the button of the remote control and the pet will act accordingly.

- Basic functions: forward, Turn Left, Turn Right
- Action: swimming, sitting down, stunt, pushup, sleep, urinate, pick up, get down.
- Entertainment: Greetings, Kung Fu, dance music.



GREETINGS



KUNGFU



SWIMMING



SIT DOWN



STUNT



ATTACK

Trigger function introduction

Press the pick-up button on the remote control, and the robotic arm at the top opens up and places the card or small object you want to pick up. Press the remote control button again, you can clamp things. Press it again, and the clip opens.



THE MANIPULATOR CAN HOLD SMALL THINGS



Voice command function introduction

ACT ACCORDING TO VOICE COMMANDS.
MERRY CHRISTMAS, HAPPY NEW YEAR, HAPPY FATHER'S DAY, HAPPY MOTHER'S DAY, HAPPY EASTER, THANKSGIVING, TRICK OR TREAT AND HAPPY CHILDREN'S DAY.



Don't panic when you have a problem

COMMON PROBLEM	TREATMENT METHOD
It does not respond when turned on.	Please check that the battery is properly connected, or that the charge is sufficient.
The remote control cannot be controlled.	Make sure the remote is fully charged. The remote control should be aligned with the signal receiving port of the dog. In strong light or sunlight will affect the remote control operation.
The dog doesn't act on the control signals.	Please check if your dog's battery is full. Garbled characters will appear when the battery is low.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or in operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirements in portable exposure condition without restriction.