



Quick Start Guide

OZERX

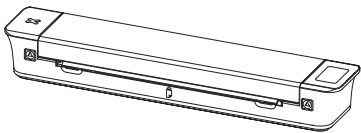


1. Product Introduction

1.1 Packing List

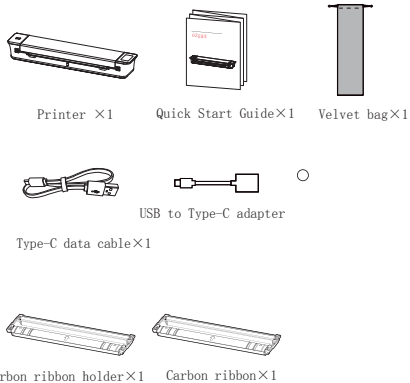

① The carbon ribbon has been placed inside the printer.

1.2 Printer Component Guide

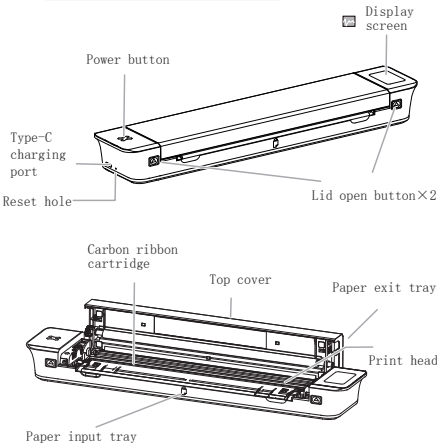

2. Quick Start


2.1 App download

Method 1: Please search for the 'Quick Stencil' application on the App Store or Google Play™, and download and install it.




2.2 Paper loading guide

1、"Press and hold the power button for 3 seconds to turn on the printer until the display screen lights up."


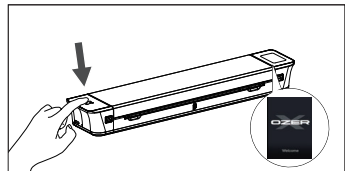


2、"Take out a single tattoo paper and insert it smoothly into the paper input tray until the printer automatically feeds the paper. The display screen will show 'Ready' status, indicating that the paper loading is complete."

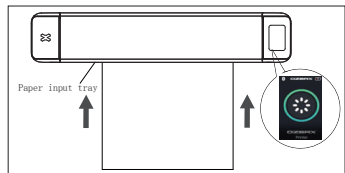


① "The single tattoo paper does not have a front or back side. If the carbon ribbon is already inserted in the machine, you can directly insert the paper into the printer for use."

2.3 Mobile Device User Guide

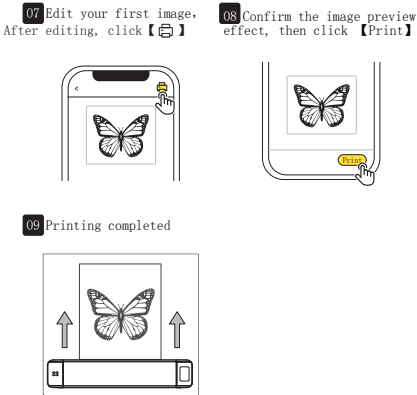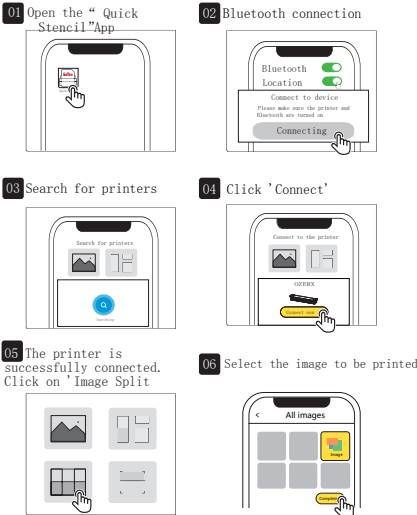


2.4 Computer Usage Guide

01 Please ensure that the printer is powered on and connect it to the computer using the original Type-C data cable.

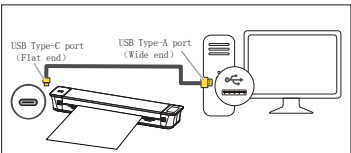


① If your computer has a Type-C interface, you can use the provided adapter to convert the interface. Insert the Type-C end of the adapter into your computer.
The adapter is designed for one-way transmission. It may not transmit data when the Type-C end of the adapter is inserted into the printer.

02 Please visit ozquickstencil.com

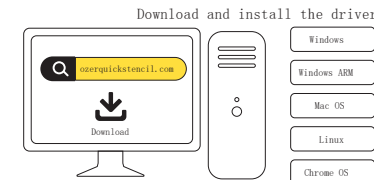


03 Select and open the file you want to print

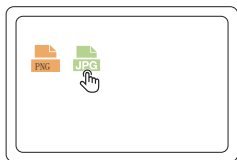


① The printer supports printing JPG, PNG, and other file formats


04 Click [Print]












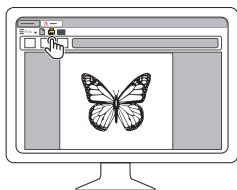


05 Select the OZERX Printer, click on 'Print' to start printing

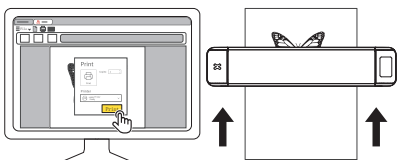

06 Take out the printed tattoo paper, and use it with tattoo paste (to be purchased separately) to begin using it

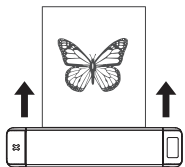

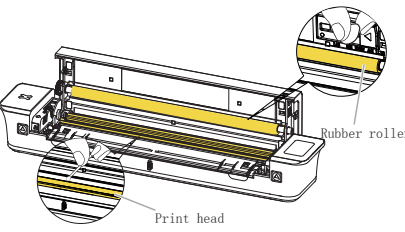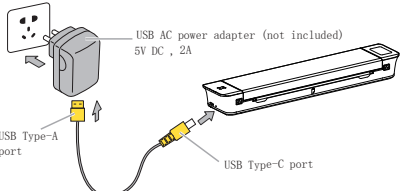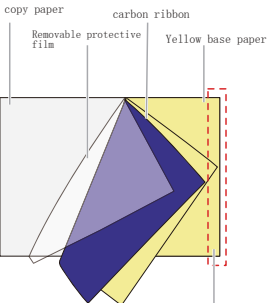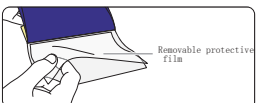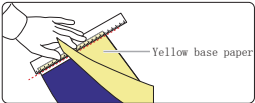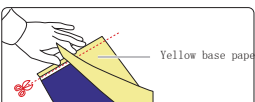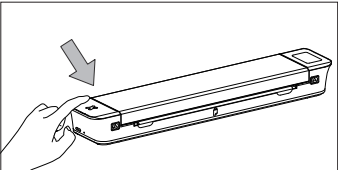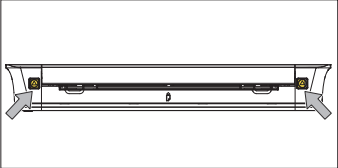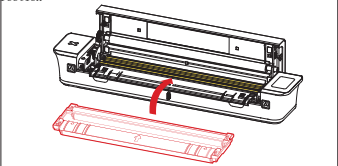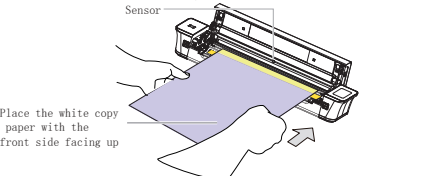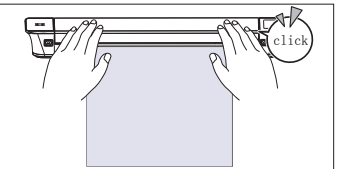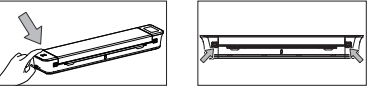3.Cleaning and maintenance Ⓜ Before performing any cleaning or maintenance, please make sure to disconnect the printer from the power source. Ⓜ If you have just finished printing, please wait for half an hour to allow the print head to cool down completely. If you encounter issues like blank lines, blurry or missing text, it may be due to dirt on the print head. Please follow the steps below to resolve the issue. 01.Dip a cotton swab in alcohol or use an alcohol-soaked cotton ball (make sure it's not dripping), and gently wipe back and forth for 5 times on both sides. Clean the dust, stains, and other debris from the rubber roller and print head surface. 02.Wait for 5-10 minutes until the alcohol completely evaporates, then close the lid. Cleaning is now completed.  Rubber roller Print head ⚠ Print head warning: Hot component! Contacting this component may cause burns to fingers. Wait for half an hour after powering off before touching the component.	4.Charging instructions 01.Please prepare a 5V DC/2A direct current Type-A interface power adapter on your own. 02.Please connect the Type-C end of the USB charging cable to the charging port of the OZERX printer. Connect the Type-A end of the USB charging cable to the Type-A interface of the power adapter. 03. After the connection is completed and plugged into the socket, please check the status of the printer indicator light. When the printer is in the off state, the display screen shows . When the printer is in the on state, the top right corner of the display screen shows . 04. Please charge for at least 20 minutes for quick use. Charging for 4 hours will complete the charging process, or until the top right corner of the display screen shows . 05. During the charging process, the printer may generate temperature changes. Please do not place the printer on materials such as cotton or linen while charging. 06. After charging is complete, please promptly unplug the charger. Using the printer while it is being charged may affect the charging speed, printing quality, and battery lifespan."  USB AC power adapter (not included) 5V DC , 2A USB Type-A port USB Type-C port	5.More help 5.1 Button instructions <table><tr><th>Button types</th><th>Operating instructions</th><th>Function description</th></tr><tr><td rowspan="3">Power button</td><td>Long press for 3 seconds</td><td>Power on/off</td></tr><tr><td>Print self-test</td><td>Double-click while in the power-on state</td></tr><tr><td>page content</td><td></td></tr></table> 5.2 Printer status description <table><tr><th>Display screen status</th><th>Status description</th><th>Operating instructions</th></tr><tr><td></td><td>Normal use</td><td>/</td></tr><tr><td></td><td>Not installed ribbon</td><td>Insert ribbon</td></tr><tr><td></td><td>No paper inserted</td><td>Insert paper</td></tr><tr><td></td><td>Printer cover open</td><td>Close the top cover</td></tr><tr><td></td><td>Printer overheating</td><td>Pause printing for 5-10 minutes</td></tr></table>	Button types	Operating instructions	Function description	Power button	Long press for 3 seconds	Power on/off	Print self-test	Double-click while in the power-on state	page content		Display screen status	Status description	Operating instructions		Normal use	/		Not installed ribbon	Insert ribbon		No paper inserted	Insert paper		Printer cover open	Close the top cover		Printer overheating	Pause printing for 5-10 minutes	5.3 Printer battery level description <table><tr><th>Display screen status</th><th>Status description</th><th>Operating instructions</th></tr><tr><td></td><td>Fully charged</td><td>/</td></tr><tr><td></td><td>The battery level is greater than 50%</td><td>/</td></tr><tr><td></td><td>less than 50%</td><td>/</td></tr><tr><td></td><td>Battery level is less than 20%</td><td>Charge for 1 hour (if you need to use it urgently, please charge for at least 20 minutes)</td></tr><tr><td></td><td>Charging while the device is powered on</td><td>/</td></tr><tr><td></td><td>Charging while the device is powered off</td><td>/</td></tr><tr><td></td><td>Long press the power button, but the screen doesn't light up</td><td>Battery is depleted Charge for 4 hours</td></tr></table> 5.4 Instructions for obtaining permissions 01 Notice for IOS users • App requesting network permission  • App requesting Bluetooth permission 	Display screen status	Status description	Operating instructions		Fully charged	/		The battery level is greater than 50%	/		less than 50%	/		Battery level is less than 20%	Charge for 1 hour (if you need to use it urgently, please charge for at least 20 minutes)		Charging while the device is powered on	/		Charging while the device is powered off	/		Long press the power button, but the screen doesn't light up	Battery is depleted Charge for 4 hours	02 Notice for Android users: • App requesting Bluetooth permission  • Permission required for the phone system to access and search nearby Bluetooth devices  Ⓜ For Android 12 and above, it is required to allow the app to search for nearby Bluetooth devices: For Android versions below Android 12, GPS permission must be enabled to search for nearby Bluetooth devices: • Mobile system Bluetooth pairing prompt  Ⓜ No need to check 'Allow access to your contacts and call logs', simply click 'Pair'
Button types	Operating instructions	Function description																																																						
Power button	Long press for 3 seconds	Power on/off																																																						
	Print self-test	Double-click while in the power-on state																																																						
	page content																																																							
Display screen status	Status description	Operating instructions																																																						
	Normal use	/																																																						
	Not installed ribbon	Insert ribbon																																																						
	No paper inserted	Insert paper																																																						
	Printer cover open	Close the top cover																																																						
	Printer overheating	Pause printing for 5-10 minutes																																																						
Display screen status	Status description	Operating instructions																																																						
	Fully charged	/																																																						
	The battery level is greater than 50%	/																																																						
	less than 50%	/																																																						
	Battery level is less than 20%	Charge for 1 hour (if you need to use it urgently, please charge for at least 20 minutes)																																																						
	Charging while the device is powered on	/																																																						
	Charging while the device is powered off	/																																																						
	Long press the power button, but the screen doesn't light up	Battery is depleted Charge for 4 hours																																																						
6.More paper types 6.1 Tattoo paper + empty support 01.Tattoo paper introduction  White copy paper carbon ribbon Removable protective film Yellow base paper Ⓜ This is the adhesive area at the top of the paper, please do not tear it!	02.Preparation before use 01 Take out the tattoo paper and remove the protective film  02 Use a ruler or scissors to cut the yellow base paper along the adhesive area at the top Method 1:  Method 2:  Ⓜ Please be careful to keep the adhesive area of the paper intact while cutting	03.Paper loading guide 01 Press and hold the power button for 3 seconds to power on, until the indicator light turns on  02 Simultaneously press the open cover button with both hands to open the top cover  Ⓜ A single sheet of tattoo paper does not have a specific front or back. If the carbon ribbon is already inserted in the machine, you can directly insert the paper into the printer for use.	03 Take out the carbon ribbon empty support included in the set, and insert it into the carbon ribbon compartment following the illustrated direction  04 Place the white tracing paper facing up, aligning it smoothly along the direction of the paper exit. Make sure the tattoo paper covers the sensor.  Sensor Place the white copy paper with the front side facing up	05 Lower the top cover and place both hands on the ends of the cover. Press down simultaneously until you hear a 'click' sound, indicating that the cover is properly closed.  6.2 Roll paper + built-in carbon ribbon 01 Press and hold the power button for 3 seconds to power on, until the indicator light turns on. 02 Simultaneously press the open cover button with both hands to open the top cover. 																																																				

7. More connection options

6.2 Bluetooth connection

- 01 Open the 'Quick Stencil' app
- 02 Tap on the Bluetooth connection icon in the upper right corner
- 03 Select your printer

Device connected successfully

- 04 Enable Bluetooth permissions to quickly search and connect to the printer

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

French:

Cet appareil est conforme aux normes RSS exemptées de licence d'innovation, sciences et développement économique Canada. L'exploitation est autorisée aux deux conditions suivantes:

- 1) l'appareil ne doit pas produire de brouillage, et
- 2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique susceptible d'empêcher le fonctionnement.

Le matériel a été évalué pour répondre aux exigences générales d'exposition aux radiofréquences. Le dispositif peut être utilisé dans des conditions d'exposition portables illimitées.